



© 2020 Koninklijke Philips N.V.
All rights reserved
3000.050.5704.1 (5/3/2020)



75% recycled paper



English

General description (Fig. 1)

- 1 Shaving unit
- 2 Shaving unit release button
- 3 Charging light
- 4 On/ off button
- 5 Socket for small plug
- 6 Small plug
- 7 Supply unit
- 8 Cleaning brush

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (A00380) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- This appliance contains batteries that are non-replaceable.
- Never immerse the shaver in water. Do not use the shaver in the bath or in the shower.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.

- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)
This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver can be safely cleaned under the tap.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100 – 240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance fully before you use it for the first time. When you charge the appliance for the first time or after a long period of disuse, let it charge over 8 hours. Charging takes approx. 8 hours. When the appliance is fully charged, it has a cordless operating time of up to 30 minutes.

Charging with the supply unit

- 1 Put the small plug in the appliance (Fig. 2).
- 2 Put the supply unit in the wall socket.
- The charging light lights up continuously during charging.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Shaving tips and tricks

- Make circular movement during use. Circular movement provide better shaving results than straight movements.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

Switching the appliance on and off

To switch the appliance on or off, press the on/off button once (Fig. 5).

Shaving

Dry shaving

- 1 Switch on the appliance.
- 2 Move the shaving heads over your skin in circular (Fig. 6) movements to catch all hairs growing in different directions (Fig. 7).
- 3 Stretch your skin with your free hand so the blades can lift and cut hair. Gently press the shaver onto your skin so the floating heads can follow the contours of your face.

Note: Do not press too hard as too much pressure can cause shaving heads to pinch the skin.

- 4 Switch off and clean the appliance after each use.

Cleaning and maintenance

Cleaning the shaver

- Cleaning the shaver after every use for optimal performance (see 'Cleaning and maintenance').

Caution: While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence. Internal electric parts are in a waterproof compartment so the shaver will be protected against water damage.

- 1 Switch off the appliance and make sure it is disconnected from the wall socket.
- 2 Press the release button to open the shaving unit (Fig. 8).
- 3 Rinse the shaving unit and hair chamber with lukewarm water.
- 4 Rinse the outside of the \shaving unit with lukewarm water (Fig. 9).

Caution: Never dry the shaving unit with a towel or tissue, as

this may damage the shaving heads (Fig. 10).

- 5 Carefully shake off excess water and let air dry completely.
- 6 Close the shaving unit.

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.

- 1 Switch off the appliance and make sure it is disconnected from the wall socket.
- 2 Press the release button to open the shaving unit (Fig. 8). Pull the shaving unit off the appliance (Fig. 11).
- 3 Turn the lock anticlockwise (1) and remove the retaining frame (Fig. 12) (2).
- 4 Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 13).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 5 Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 14).
- 6 Put the cutter back into the guard (Fig. 15).
- 7 Put the shaving heads back into the shaving unit (Fig. 16).
- 8 Put the retaining frame back into the shaving unit (Fig. 11) and turn the lock clockwise (Fig. 17) (2).
- 9 Insert the lug of the shaving unit into the slot in the top of the appliance. Then close the shaving unit (Fig. 18) ('click').

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 19). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

- 1 Switch off the appliance and make sure it is disconnected from the wall socket.
- 2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the appliance (Fig. 11).
- 3 Turn the lock anticlockwise (1) and remove the retaining frame (Fig. 12) (2). Place it aside in a safe place.

- 4 Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 20).

- 5 Place new shaving heads in the shaving unit.

Note: Make sure that the shaving heads with the projections fit exactly onto the hooks of the shaving head holder when placing them. The shaving heads supplied with the shaver either have notches or projections. Both shaving systems are the same.

- 6 Put the retaining frame back into the shaving unit (1) and turn the lock clockwise (Fig. 17) (2).

- 7 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 18).

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Giới thiệu

Mô tả chung (Hình 1)

- 1 Bộ phận cạo
- 2 Nút đóng/mở bộ phận cạo
- 3 Đèn báo sạc
- 4 Nút bật/tắt
- 5 Ốc cầm cho phích cắm nhỏ
- 6 Phích cắm nhỏ
- 7 Bộ nguồn
- 8 Chổi vệ sinh

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to the open shaver and when you dispose of the rechargeable battery.

- 1 Check if there are screws in the back of the shaver or in the hair chamber. If so, remove them.
- 2 Remove the outer panels of the shaver with a screwdriver or other tool. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

PHILIPS

S1103, S1301
Pencukur Elektrik
100-240V ~ 50-60 Hz 2 W

Negara Pembuat: Cina

Dimpot oleh:

PT Philips Indonesia Commercial

Gedung Cibis Nine Lantai 10

Jl. T.B. Simatupang No. 2

RT. 001 RW. 005

Kel. Cilandak Timur,

Kec. Pasar Minggu,

Jakarta Selatan 12560 - Indonesia

No. Reg.: IMKG.534.02.2020

Tiếng Việt

Mô tả chung (Hình 1)

- 1 Bộ phận cạo
- 2 Nút đóng/mở bộ phận cạo
- 3 Đèn báo sạc
- 4 Nút bật/tắt
- 5 Ốc cầm cho phích cắm nhỏ
- 6 Phích cắm nhỏ
- 7 Bộ nguồn
- 8 Chổi vệ sinh

Giới thiệu

Chúc mừng bạn đã mua được sản phẩm Philips mới và chào mừng bạn đến với Philips! Để có được lợi ích đầy đủ từ sự hỗ trợ do Philips cung cấp, hãy đăng ký sản phẩm tại www.philips.com.vn.

Thông tin quan trọng về an toàn

Hãy đọc kỹ thông tin quan trọng này trước khi sử dụng, đồng thời lưu trữ để tiện tham khảo sau này.

Nguy hiểm

- Giữ cho bộ nguồn luôn khô ráo.

Cảnh báo

- Đèn báo sạc chỉ hoạt động khi thiết bị đang sạc.

Cạo râu

Cạo khô

1. Bật thiết bị
2. Di chuyển đầu cạo của máy cạo râu trên da, theo hình tròn (hình 6) để cạo rách râu mọc ở các hướng khác nhau (hình 7).

3. Kéo căng vùng da cạo bằng tay còn lại để cạo cạo có thể nhanh và cắt sát râu. Ánh nhẹ máy cạo sát vào da để đầu cạo có thể bo sát theo đường khuôn mặt bạn khi cạo.

Lưu ý: đừng ấn quá mạnh vào da để tránh làm đầu cạo mất vào da của bạn.

4. Tắt và vệ sinh thiết bị sau khi sử dụng.

Vệ sinh và bảo dưỡng

Vệ sinh máy cạo râu

Vệ sinh máy cạo râu sau mỗi lần sử dụng để có hiệu quả tốt nhất (xem hướng dẫn vệ sinh và bảo dưỡng).

Chú ý: Trong khi vệ sinh máy, nước có thể rò rỉ vào các bộ phận của máy cạo râu khi bạn rửa máy. Điều này là bình thường và không nguy hiểm bởi vì tất cả các bộ phận điện tử bên trong đều kháng nước để tránh hư hỏng do thấm nước gây ra.

1. Tắt thiết bị và rút khỏi ổ cắm điện.

2. Nhấn nút mở để mở đầu cạo (hình 8).

3. Rửa đầu cạo và khoang chứa râu bằng nước nhiệt độ thường.

4. Rửa đầu cạo bằng nước nhiệt độ thường (hình