

XIAOMI Smart Air Fryer Pro 4L User Manual ·01

Xiaomi Smart Heißluft-Fritteuse Pro 4 | Benutzerhandbuch ·09

Manuale utente Xiaomi Smart Air Fryer Pro 4L ·17

Manuel d'utilisation de Xiaomi Smart Air Fryer Pro 4L ·25

Manual de usuario del Xiaomi Smart Air Fryer Pro 4L ·33

Руководство пользователя Аэрофритюрницы Xiaomi Smart Air fryer Pro 4L ·41

Manual do utilizador de Fritadeira Inteligente a Ar Xiaomi Pro 4L ·49

Wielofunkcyjna frytkownica Xiaomi Smart Air Fryer Pro 4 | Instrukcja obsługi ·57

Xiaomi Akıllı Hava Fritözü Pro 4L Kullanım Kılavuzu ·65

Hướng dẫn sử dụng Nồi chiên không dầu thông minh Xiaomi Pro 4L ·73

Xiaomi Smart Airfryer Pro 4L Gebruikershandleiding ·81

Xiaomi Pro

·89

Read this manual carefully before use, and retain it for future reference.

Thank you for choosing Xiaomi Smart Air Fryer Pro 4L. This product is for household use only.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only.

Actual product and functions may vary due to product enhancements.


Safety Instructions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Please keep the air fryer and the power cord out of the reach of children aged under 8.
- For household use only.
- If the power cord is damaged or broken, it must be replaced by the manufacturer or after-sales service department to avoid safety hazards.
- The temperature of the touchable surface may rise while the air fryer is working.
- The surface will heat up easily while the air fryer is in use.
- The air fryer should not be operated via an external timer or a separate remote control.
- Do not block the air fryer's air inlet and outlet, nor the heat dissipation vents during use to avoid affecting its normal heat dissipation.
- Any non-professionally trained technicians should not modify the internal wiring of the air fryer.
- Do not use charcoal or other similar fuel sources to heat the basket, frying plate, or grill.
- Do not place the basket on any other heat sources, such as an induction cooker or gas stove.
- Do not plug or unplug the power cord with wet hands to avoid the risk of an electrical shock.
- Do not use a power cord with loose connection or poor contact.
- Do not let the power cord cross through sharp objects to avoid damage to the power cord.
- Do not use the air fryer to store any items, especially flammable, explosive, or corrosive items.
- Do not excessively pinch, bend, twist, or place heavy objects on the power cord to prevent from exposing or breaking its core.
- Stop using the air fryer immediately and unplug it from the power source if it doesn't function normally or malfunctions.
- The air fryer cannot be started without the basket being in place.
- Do not touch the basket directly with your hands during or right after use to avoid getting scalded.
- Do not allow children to get close to or play with the cling wrap and packaging to avoid suffocation accidents.
- Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.
- Do not drop this air fryer or bump it against hard objects to avoid damage or malfunction.
- Do not insert pins, wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.
- Do not use any accessories that are not recommended by the manufacturer.
- The normal operating altitude range of this product is 0–2000 meters.
- Keep a distance of 30 cm or more between the air outlet and other devices during use.
- Do not move or shake the air fryer during use.
- Do not insert any foreign objects into the safety switch to avoid causing any danger.
- When placing the air fryer in a kitchen cabinet, etc., please ensure that it is well ventilated.
- Please be sure to unplug the air fryer before cleaning or repairing it.
- This product must be used on a level, heat-resistant surface to avoid damage to the product or accidents.
- Ensure that the silicone parts of the air fryer do not come into contact with ethanol or solutions that contain more than 50% of alcohol.
- Please ensure that the electrical outlet the air fryer is plugged into is well grounded to avoid an electrical shock or other safety hazards.




CAUTION: Hot surfaces.

Product Overview

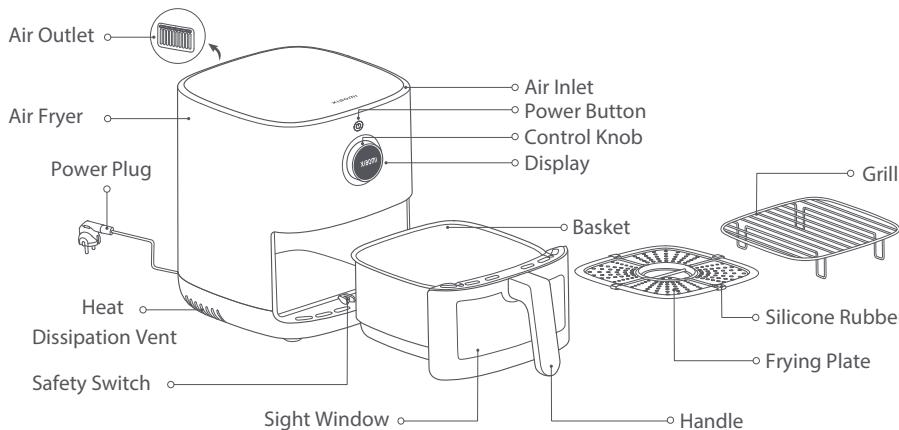

Notes: 1. The silicone rubber on the frying plate is made of high temperature resistant food-grade materials to prevent the edges of the frying plate from scratching the coating of the basket and to improve the stability of the frying plate. Do not remove the silicone rubber from the frying plate.
2. Ingredients that are too small are not suitable for use on the grill. Please make sure that ingredients don't fall through the gaps in the grill.

Control Knob

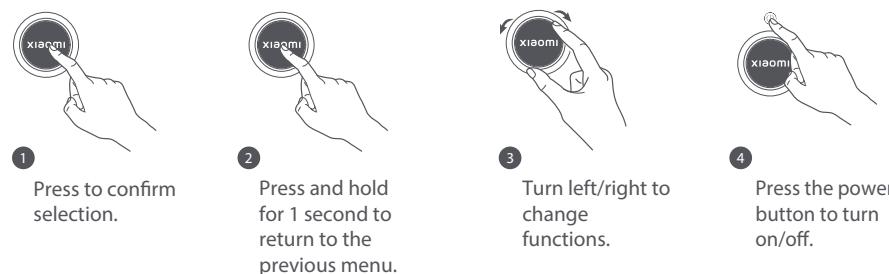

How to Use

Connect the power cord and press the power button to turn on the air fryer.

Note: When the air fryer is turned on for the first time, press the power button and go to the language selection screen, turn the control knob to the desired language, then press the control knob to confirm the selection.

1. Turning on

Connect the power cord and press the power button to turn on the air fryer.



2. Turning off

Press the power button to turn off the air fryer, regardless of the state it is in.

3. Configuring the Wi-Fi

1. Resetting the Wi-Fi:

Press the control knob to enter "Reset Wi-Fi" while in the "Wi-Fi" screen, then press the control knob to select Yes to reset the Wi-Fi, or turn the control knob to select No to abandon resetting the Wi-Fi.

2. Enabling/Disabling the Wi-Fi:

Press the control knob to enter "Enable/Disable Wi-Fi" while in the "Wi-Fi" screen, then press the control knob to select Yes to enable or disable the Wi-Fi, or turn the control knob to select No to abandon the change.

Wi-Fi Status Indicator

Awaiting fast connection...	Reconnecting after a disconnection...	Connected successfully	Updating...
Wi-Fi indicator blinks slowly	Wi-Fi indicator blinks quickly	Wi-Fi indicator stays on	Wi-Fi indicator blinks quickly

Note: If the air fryer does not connect to the Wi-Fi for 30 minutes, the Wi-Fi indicator will turn off.

4. Connecting with the Mi Home/Xiaomi Home App

This product works with the Mi Home/Xiaomi Home app*. Use the Mi Home/Xiaomi Home app to control your device, and to interact with other smart home devices.



- Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Mi Home/Xiaomi Home" in the app store to download and install it.
- Open the Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.

* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.

Cooking


Preparations

The ingredients can be marinated to taste before cooking.




Starting a cooking program

1. Place the air fryer on a stable, level surface and ensure that there is air circulation around the air fryer.

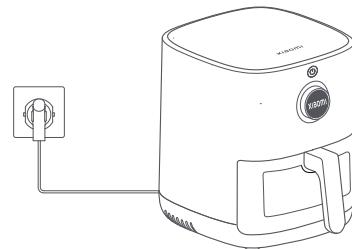

2. Place the frying plate into the basket and add ingredients one by one. If there are more ingredients, use the grill to place them in two layers.

Note: Stacking ingredients without using the grill will affect the cooking.

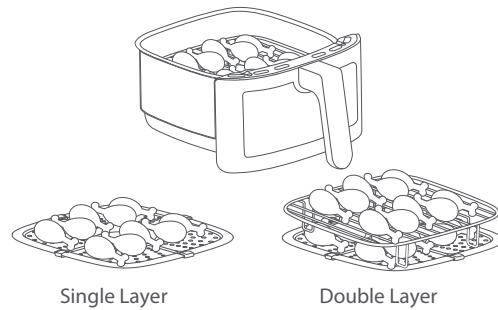


Single Layer

Double Layer


3. Once the basket is completely inserted into the air fryer, press the power button to turn it on, and turn the control knob to select the menu for the corresponding cooking program and press the control knob to confirm. Then press the control knob to select the amount of ingredients (half/full pot or single/double layer), and finally press the control knob to confirm and start cooking.

Notes:

1. The cooking time and temperature can be adjusted by turning the control knob during cooking.
2. Once you turn the control knob to adjust the cooking time or temperature, you need to press the control knob to confirm, otherwise it will continue to cook at the original time after five seconds.
3. The light will stay on during cooking. User cannot turn off the light manually.

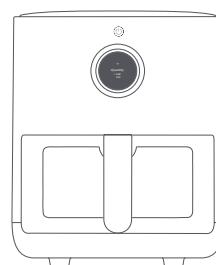


4. Some ingredients need to be turned over during cooking, please follow the air fryer's instructions and pull out the basket to turn over the ingredients, then place the basket completely back into the air fryer and press the control knob to continue cooking.

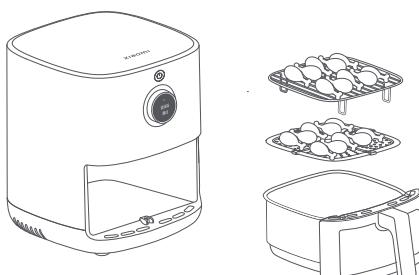

5. The air fryer will beep and "Completed" will appear on the display to indicate that the cooking program has been completed. Carefully take out the basket and use clamps to remove the food.

CAUTION: When cooking is completed, the basket is very hot, so do not touch it to avoid getting scalded.

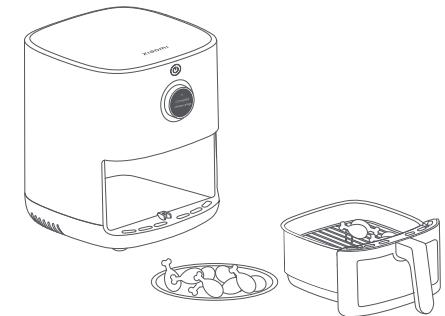

Other Operations

1. Language settings


Turn on the air fryer, go to settings, and press the control knob to enter the language selection screen.

Turn the control knob to the desired language and press it to confirm.



2. Manual mode

When the air fryer is turned on, press the control knob to enter the manual mode, then press the control knob again to set the temperature and turn the control knob to the desired cooking temperature, press the control knob to set the time and turn the control knob to the desired cooking time, and finally press the control knob to start the manual cooking program.

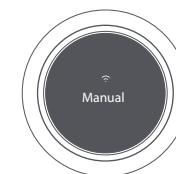

3. Turning over the food

For some local recipes, if the cooking time is more than two minutes (such as fries and chicken wings), the air fryer will remind you to turn over or shake the food.

When about half the cooking time is reached, "Please shake the food" will blink on the screen, and the air fryer will give off two long beeps three times. At this time, the cooking program will not stop, but please pull out the basket, turn over or shake the food, and then completely insert the basket back into the air fryer. The cooking will then resume.



4. Scheduled cooking

In mode selection, turn the control knob to select the schedule function, and set the cooking program, cooking temperature, cooking duration and the scheduled completion time, then press the control knob to confirm and start the schedule.

Once the scheduled time is reached, the air fryer has completed the scheduled cooking program.

Note: The scheduled time here is the scheduled completion time, for example six hours, which means cooking will be completed in six hours, and the scheduled time cannot be shorter than the cooking time.



5. Pausing

Press the control knob to pause the cooking program while cooking.

Press the control knob to continue the cooking program while it is paused.



6. Stopping program

Press and hold the control knob for one second, the display reminds you to confirm the cancellation of the current cooking program, turn the control knob and select Yes or No. Once canceled, it will return to the previous menu.



Maintenance Tips

- Only professionally trained and qualified technicians should repair the air fryer.
- Others should not repair the air fryer without permission to avoid serious consequences.
- When the air fryer is acting abnormally, please refer to Troubleshooting before contacting the after-sales service team.
- If the issue cannot be resolved, please unplug the power cord and disconnect it and contact after-sales service team.

Cleaning & Maintenance

Unplug the power cord before cleaning and maintaining the air fryer, and wait for it to cool down to a safe temperature before proceeding. Please remove the basket from the air fryer when cleaning the air fryer.

Air fryer surface:

The surface of the air fryer can be wiped with a dry, soft cloth or a sponge moistened with a neutral cleaning detergent.

Cavity:

To remove stains from the inside of the air fryer, apply a suitable amount of detergent diluted in hot water to its surface and let it sit for about ten minutes, then use a soft sponge moistened with water to wipe away the detergent residue.

Basket:

Clean the air fryer after each use. The basket of the air fryer is coated, so do not use any steel wool or other abrasive cleaning materials to clean it as they may damage the coating.

Frying plate, grill:

You can use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then moisten it with water to wipe away the detergent residue.

Sight window:

To clean the sight window, you can start cleaning from the opening at the bottom of basket for optimal result.

Note: The frying plate and grill can be separated and placed in the dishwasher for cleaning; the basket can be washed in water, but cannot be cleaned in dishwasher; however, the air fryer can neither be washed in water nor be cleaned in dishwasher.

Cleaning Precautions

1. After using the air fryer, please unplug the power plug in time and do not place the air fryer near a source of fire nor immerse it in water. Do not place the power plug directly on the air fryer to prevent the plug from scratching its surface.

2. Cleaning and maintenance should only be done after the air fryer has cooled down.

3. Do not use any corrosive or abrasive cleaning materials or detergents.


Note: Regular cleaning and maintenance of the air fryer will help extend its service life.

Troubleshooting

Issue	Possible Causes	Solutions
The air fryer doesn't function.	The air fryer is not connected to a power supply. The basket is not pushed into place.	Plug the power cord into a grounded electrical outlet. Pull out the basket and push it back into place.
The OLED display shows E1.	The sensor has a broken circuit.	Contact the after-sales service team.
The OLED display shows E2.	The sensor has a short circuit.	Contact the after-sales service team.
The fan doesn't rotate.	The fan blade is stuck. The motor is damaged or other components have a broken circuit.	Contact the after-sales service team. Contact the after-sales service team.
White smoke is coming out.	Cooking oily ingredients. The air fryer still contains grease residue from the previous cooking program.	When you fry ingredients containing more fat, there will be a lot of smoke, which is normal. Ensure that you clean the air fryer after each cooking program.
Can't insert the basket into the air fryer smoothly.	Too many ingredients in the basket. The basket is not properly inserted.	The ingredients in the basket can't exceed the maximum mark. Properly insert the basket.
The schedule function doesn't function as requested.	The scheduled time is too short. The scheduled time is not saved.	The scheduled time is shorter than the cooking time. The scheduled time is saved and carried out by pressing the control knob.
Wi-Fi can't be connected.	Check whether the Mi Home /Xiaomi Home app is up to date. Check whether the Wi-Fi's signal is strong enough.	Update the Mi Home/Xiaomi Home app to the latest version. Move to a location where the signal is strong enough.
Unable to connect the air fryer.	Check whether the Wi-Fi functions normally.	Check whether the Wi-Fi is connected normally or reset the Wi-Fi to reconnect.

Electrical Diagram

① OLED Display	⑥ Motor
② Safety Switch	⑦ Halogen Lamp
③ Control Panel	⑧ Power Board
④ Heating Element	⑨ Fuse
⑤ Fuse	⑩ Halogen Lamp

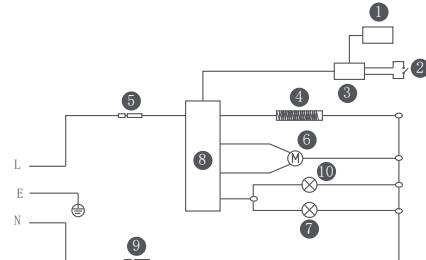

Specifications

Name: Oven (Air Fryer)	Capacity: 4 L	Color: White
Model: MAF05	Rated Frequency: 50–60 Hz	Net Weight: 3.9 kg
Rated Power: 1600 W	Rated Voltage: 220–240 V~	Gross Weight: 5.2 kg
Maximum Output Power: < 20 dBm	Package Dimensions: 370 × 295 × 340 mm	
Operating Temperature: -10°C to 40°C	Operating Frequency: 2412–2472 MHz	
Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz		

Keep at least 20 cm away from the air fryer in normal use.



Hereby, Ningbo Careline Electric Appliance Co., Ltd. declares that the radio equipment type Oven (Air Fryer) MAF05 is in compliance

with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.mi.com/global/service/support/declaration.html>

For detailed e-manual, please go to www.mi.com/global/service/userguide



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Manufactured for: Xiaomi Communications Co., Ltd.
Manufactured by: Ningbo Careline Electric Appliance Co., Ltd.
(a Mi Ecosystem company)
Address: No.558, Wei'er Road, Andong Industrial Zone,
Hangzhou Bay New Area, Ningbo, 315327, Zhejiang, China.
For further information, please go to www.mi.com

User Manual Version: V1.0