

# xiaomi Rechargeable Mini Fan .1



### WARNINGS

Improper use may lead to electric shocks, fire, personal injury, or other damage.

---

- ⊗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ⊗ Children should be supervised to ensure that they do not play with the appliance.
- ⊗ This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.
- ⊗ Do not use the charging cable provided with this fan for any other device.
- ⊗ This appliance contains built-in li-ion battery. Do not disassemble, impact, crush the battery or throw it into fire. If there is severe swelling, do not continue to use. Do not leave the battery in high temperature environment.
- ⊗ Do not use this fan in a place where it will easily fall over or where there are other unstable objects nearby.

- 
- ⊗ Do not use this fan in hot and humid environments such as a bathroom.
  - ⊗ Do not attempt to disassemble or repair this fan by yourself.
  - ⊗ Do not excessively pinch, bend, or twist the charging cable as this may expose or break its core.
  - ⊗ Do not insert your fingers or any object into the front grille, the rear grille, or the fan blades while the fan is in use.
  - ⊗ Keep hair and fabrics away from the fan to prevent them from being caught in the fan.
  - ⊗ Do not tilt the fan while it is running.
  - ⊗ Do not shake the fan manually so as to avoid damage to its internal mechanism.
  - ⊗ Do not use thinner, gasoline, detergent or alkaline detergent to clean any parts.
  - ⊗ Do not rinse the fan directly with water.

---

 
 
## PRECAUTIONS

---


- ⚠ Stop using the fan immediately if it makes unusual sounds, gives off odors, gets too hot, rotates irregularly, or has other errors.
- ⚠ To prevent the battery from being damaged, charge the fan as soon as possible when the battery is depleted.
- ⚠ Wipe the essential oil away immediately with a cloth if it is spilled accidentally, as the essential oil may cause staining.
- ⚠ Pregnant women or persons who are allergic to the essential oil should not use this fan with essential oil. Users are responsible for any risks that may arise from the use of the essential oil.
- ⚠ When using a device such as a computer with low USB output power to charge the fan, the fan may not be able to turn on during charging. It is recommended to charge the fan for a while before turning it on.

## Product Overview

Read this manual carefully before use, and retain it for future reference.

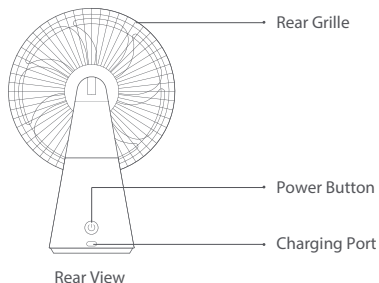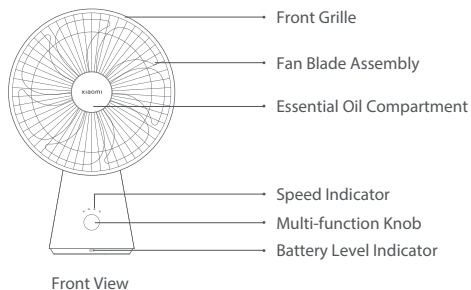

## Package Contents

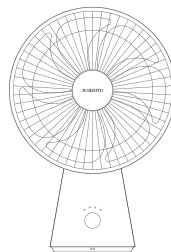 


Note: Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

# How to Use
 
## Charging

- It is recommended to fully charge the fan before use.
- It is recommended to use a charger of 5 V=2 A (The charger is sold separately). Connect the included charging cable to the charging port at the bottom of the fan. Then connect the fan to power.
- When the battery level indicator is blinking, the fan is successfully connected to power.
- The fan can be used when connecting or not connecting to power. To maintain optimal battery performance, it is recommended to keep charging the fan when it is not in use.
- When the fan is off, it takes about 3 hours at most to fully charge the fan.

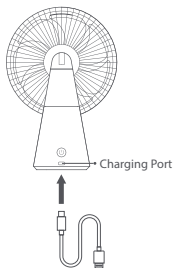

### Battery Level & Indicator Description

Fan Status	Battery Level	Battery Level Indicator Status
Charging	0%–30%	Blinking orange
	31%–99%	Blinking white
	100%	Off
Working but not being charged	0%	Off
	1%–30%	Orange
	31%–99%	White
	100%	Off

#### Notes:

- Charge the fan with a charger of 5 V = 2A and the included charging cable.
- It is recommended to charge the fan in an ambient temperature range of 15°C to 45°C.
- Always charge and use the fan in a flat, stable place.

## Turning On/Off

- To turn on the fan for the first time, press the power button.
- When the fan is on, turn the knob clockwise to make the fan start working and turn the knob counterclockwise to stop the fan.
- If the power button is used to turn off the fan, it must be used again to turn on the fan.

## Switching Speed

Turn the knob clockwise to increase the speed, and turn the knob counterclockwise to decrease the speed. The corresponding speed indicators are shown in the table below.

Speed	Slow (1)	Medium (2)	Fast (3)	Turbo (4)
Indicator Status	●●●●	●●●●	●●●●	●●●●

Note: ● indicates on, and ○ indicates off.

## Enabling/Disabling Oscillation

 
Press the knob to enable or disable the oscillation function.

---

## Adding Essential Oil

---

1. Remove the cover of the essential oil compartment.

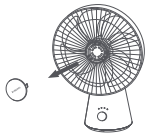

2. Put 3 to 5 drops of essential oil on the cotton pad in the cover.



3. Reinstall the cover onto the essential oil compartment. The aroma of the essential oil will be released into the air when the fan is working.



### Notes:

- The essential oil needs to be purchased separately.
- Do not put drops of essential oil into other components of the fan to avoid damage to the fan.

---

## Environmental Notice

---

The built-in lithium-ion battery of this fan contains chemicals that may pollute the environment. Before disposing of this fan, ask a professional to remove the battery and then discard it at an appropriate recycling facility.

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.

### Cautions:

- Make sure the fan is disconnected from power and the battery is fully drained before battery removal.
- Discard the removed battery at a professional recycling facility.
- Do not leave the battery in a high-temperature environment, otherwise it may explode.
- If you accidentally touch the substances leaked from the battery, wash the affected area with a large amount of water and seek medical attention immediately.

## Steps of Removing the Battery

Warning: The fan will no longer be usable once the battery is removed. The following steps should only be completed upon the permanent disposal of the fan. Do not dismantle the fan on your own for routine maintenance.

1. Take the pads out from the fan base and unscrew the bottom cover of the fan base to remove it.
2. Press the cable connector clip that connects to the battery, and pull out the cable. Then unscrew the battery to remove it.

## Specifications

Name	Xiaomi Rechargeable Mini Fan	Rated Voltage	5 V $\text{---}$
Model	ZMYDFS01DM	Rated Power	10 W
Charging Cable Length	0.5 m	Input	5 V $\text{---}$ 2 A
Net Weight	0.67 kg	Battery Capacity	4000 mAh (14.8 Wh)
Item Dimensions	170 $\times$ 87 $\times$ 250 mm	Noise	$\leq$ 48 dB(A)

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Zhejiang Xingyue Electric Equipment Co., Ltd.  
(a Mi Ecosystem company)

Address: South Side, 24th Floor, Jinpin Building, Headquarters  
Center, Yongkang City, Zhejiang Province, China  
For further information, please go to [www.mi.com](http://www.mi.com)

V1.0



# WARRANTY NOTICE

---

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

## 1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website <https://www.mi.com/en/service/warranty/>.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

## 2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

## 3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

## 4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo.

The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

