

<b>Product Name</b>	Lumias High Speed Hair Dryer
<b>Model</b>	HDL-1500 PRO
<b>Dimensions</b>	65x108mm
<b>Printing Colors</b>	
<b>Printing Materials</b>	Manual
<b>Printing Specifications</b>	
<b>Update Time</b>	2025.1.6
<b>Designer</b>	LinhVQ

\*\*\* Note font: Helvetica Neue

#### Modification Time


2024.12.28

Indicate printing color  
For example: monochrome printing, 4C printing, spot color printing, etc.

Indicate material  
For example: Regular instructions: 157g double copper paper double-sided printing.

**MAINTENANCE**

Now The hair needs to be cleaned and maintained on a regular basis to avoid clogging with debris and to ensure smooth air intake. Make sure the hair dryer is turned off and unplugged before cleaning the filter.

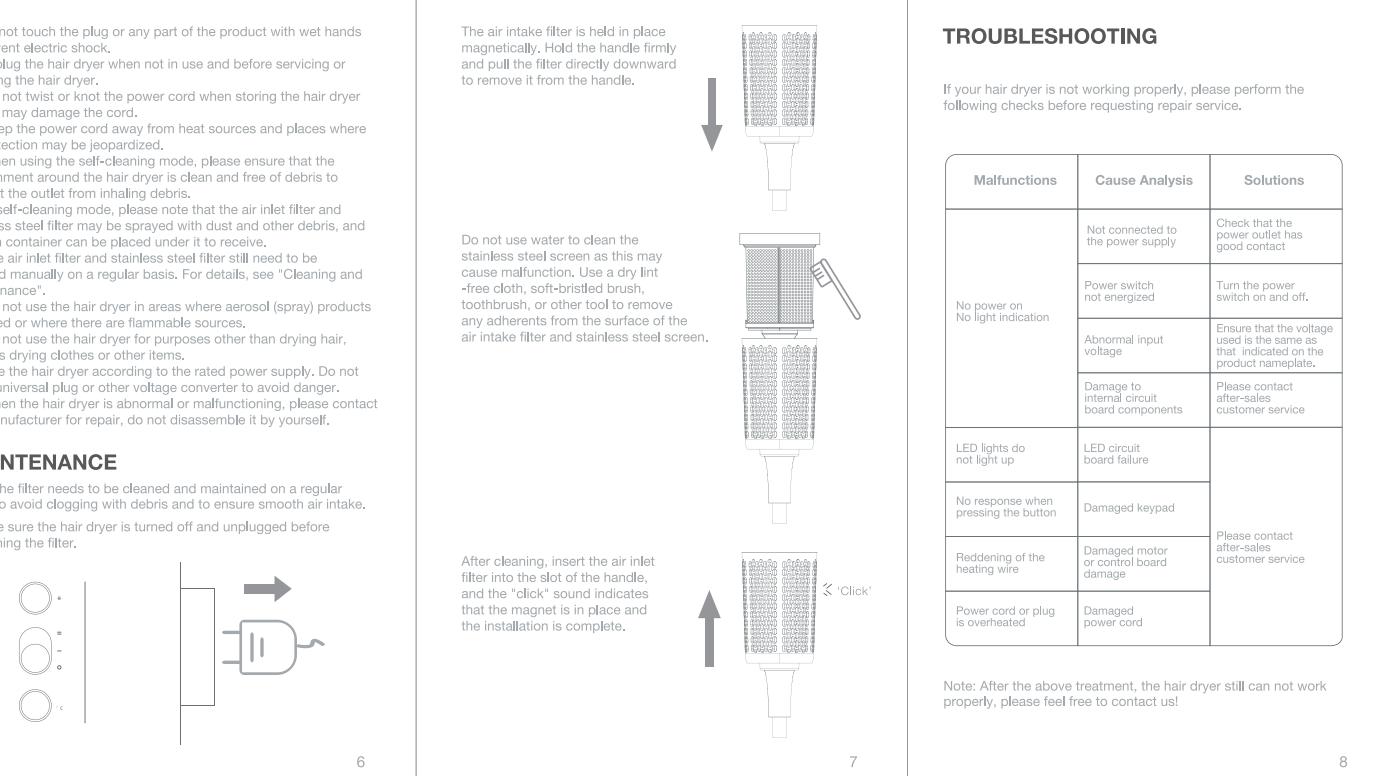

**TROUBLESHOOTING**

If your hair dryer is not working properly, please perform the following check before requesting repair service.

Malfunctions	Cause Analysis	Solutions
No power or No light indication	Not connected to the power outlet Power switch not energized Abnormal input used to the same issue Damage to the power cord or control board LED lights do not light up	Check the the power outlet has good contact. Turn the power switch on. Ensure the voltage used is the same issue Please contact after-sales customer service LED circuit board failure Damaged keypad
Reddening of the heating wire	Power cord or plug is overheated	Power cord or plug is overheated
Power cord or plug is damaged	Power cord is damaged	Power cord is damaged

Note: After the above treatment, the hair dryer still can not work properly, please free to contact us!

**RETURN POLICY**

We offer 30 days unconditional return service. Within 30 days since the date of purchase, you can contact us to return your hair dryer and to be refunded.

To be eligible for a refund, you must:

- Return the hair dryer with all accessories and gifts.
- Clearly describe the reason for returning.
- Provide valid proof of purchase.
- Ensure the hair dryer and accessories are reusable.

**Return shipping costs:**

- Return shipping is at the expense of product quality issue. We will carry the shipping costs.
- Returns for any reason other than product quality issue, the buyer should bear the shipping costs.
- Returns for any reason other than product quality issue, buyers should assume responsibility for any damage or loss incurred in transport.

**WARRANTY**

**One-year guarantee**

In 1 year since the date of purchase, if your hair dryer cannot work due to any reason of materials or workmanship, we will repair or replace it for you.

**Following situations are not covered:**

- a. Failure to present the proof of purchase invoice or receipt.
- b. Damage caused by the user's own negligence.
- c. Damage caused by disassembly or remodeling.
- d. Damage caused by natural disasters or other不可抗力.
- e. Failure or damage caused by non-general household use (e.g., prolonged use in a harsh environment); or natural staining due to normal use.

**High Speed Hair Dryer**

고속 헤어 드라이어

HDL-1500 PRO

User Manual

Please read the manual carefully before use and keep it in a safe place.


**LETTER TO USERS**

Please read the instruction manual carefully before using the product. For the safety and benefit of you and your family, please be sure to follow the operating instructions and precautions in the manual. If you have any problems during the use of the product, please contact the manufacturer or authorized service center for help, we hope it can make your life more convenient, comfortable and cozy.


**PACKAGING LIST**



**PRODUCT FEATURES**

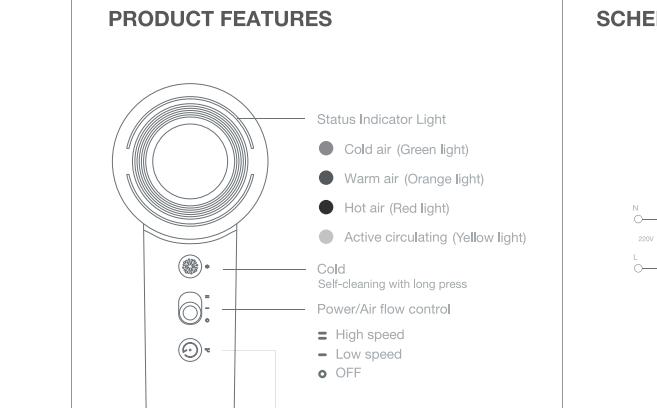

**SCHEMATIC DIAGRAM**

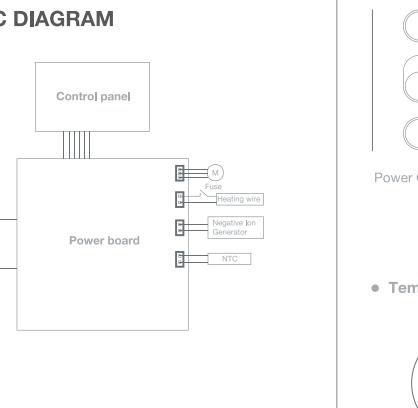

**OPERATING GUIDELINES**

**Operating Instructions**

- Standby mode: Plugged in the power does not turn on, all the indicator lights do not light up.
- Power on mode: Push the switch up and down, 0 means standby mode, 1 is low speed, 2 is high speed. Before connecting the power plug, please make sure the switch is in the off position. Higher the number, the higher the speed. The switch will automatically turn off after 10 minutes.
- Self-cleaning mode: Connect the power supply and press the cold air button to enter the self-cleaning mode when the power is off. The self-cleaning mode starts and automatically ends after the self-cleaning mode ends. In self-cleaning mode, push the switch up and down to exit the mode.

**CAVEAT**

In order to avoid electric shock, fire and other accidental injuries caused by improper use, please read the instruction manual carefully before use and keep it in a safe place for future reference.

1. Do not use the hair dryer near water, or by persons with physical, sensory or intellectual disabilities or by persons (including children) without relevant experience and knowledge, unless supervised or instructed by a responsible person.
2. Children are not allowed to handle the product or use it as a toy. Children must not clean the hair dryer without the supervision of an adult.
3. Children: Do not allow children to clean or maintain the product without supervision.
4. If the product is damaged, it must be replaced by a qualified person from the manufacturer. Its service department or similar organization.
5. Do not immerse the body of the hair dryer containing electrical parts in water or any other liquid. Do not use the hair dryer immediately when it falls into water, and do not continue to use it even after it has dried.
6. Do not use the hair dryer in the bathroom, unplug it after use because even if the hair dryer switch is turned off, it is still connected to the power source.
7. For added protection, it is recommended that a residual current device (RCD) rated for a residual operating current not exceeding 30mA be installed in the main circuit of the hair dryer. Consult your RCD installer for details.
8. Do not block the air inlet and outlet to avoid danger.
9. When using the appliance, please prevent your hair from getting caught in the hair dryer.
10. Do not touch the air vents and other hot surfaces during use or after shutdown to avoid burns.