

FS27

Desktop Rechargeable Fan (With LED Light)

Web: www.ProOne.hk

Shenzhen ZQ Dilligence Technology Co.,Ltd.

Add: Room2010, Angel Building, Bagua 4th Road, Yuanling Street, Futian

District, Shenzhen, China.

dard, dedicates to offer One superior user experience to cus-

Company Introduction

tomers Focusing on providing innovative and excellent quality products, we attach great importance to customer demands. The idea of our design is to combine phone accessories to various lifestyles.

ProOne, originated from the concept of Professional stan-

Product Parameters

Brand

Model

Power

Gears	4	
Weight	280g	
Input	5V-1.0A	
Motor type	Brushless motor	
Battery capacity	2000 mAh	
Size	140*120*220mm	
Product color	White	
Accessories	Type-Cx1. Manualx1. Brochurex1. Thanks cardx1	

ProOne

FS27

5W

from high altitude. Do not place the fan in damp or high temperature areas, do not usethe fan when it is soaked.

Attention

fan blades

zation.

objects into the protective net to avoid injury. When removing or cleaning the fan cover, dry the water beforeinstalling it. When not in use, clean the oil and dust on the fan surface and

put itin a dry and ventilated place to avoid squeezing.

the fireor place it in a high temperature environment.

cable and connect to the power supply to charge.

When the fan is working, do not put your fingers or other

Children under the ages of 10 should use this product under

the supervision of a guardian, and do not put fingers into the

Do not disassemble or transform the product without authori-

Please avoid the impact of large distance vibration or falling

If do not use it for a long time, charge it every three months to avoidbattery damage.

Do not disassemble, impact, squeeze, throw the battery into

When the battery is low, please timely plug in the charging

the arrow to unlock the windscreen

Product Overview • Turn in the direction markedy by

Product Instruction

Switch/Gears button operation:

LED lampv

Indicator light

LED Button 🔆

Switch/Gears

Button

1 Gear

2Gear

LED indication Press the button First press 0000

Second press

Switch/Gears button adjust the wind

Please read the following in detail and use it safely.

Switch /Gears button	Third Press		☆ 3Gear
	Fourth Press	0000	Natural wind
	Fifth Press	0000	Power OFF
	Long press		Power OFF
	operation:		
LED button	control lighting		

. 0 0

Charge indicator:

NI.	Press the button	LED lamp	
LED button	First press	1 Gear	
	Second press	1 Gear	
	Third Press	OFF	8

red light / Charging completed: green light