
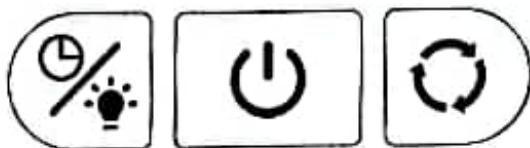
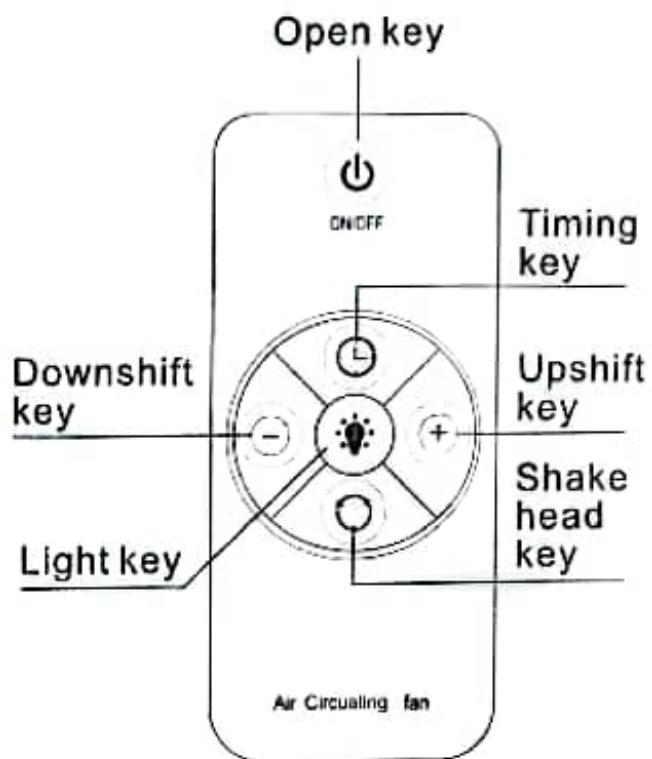


Introduction to control panel

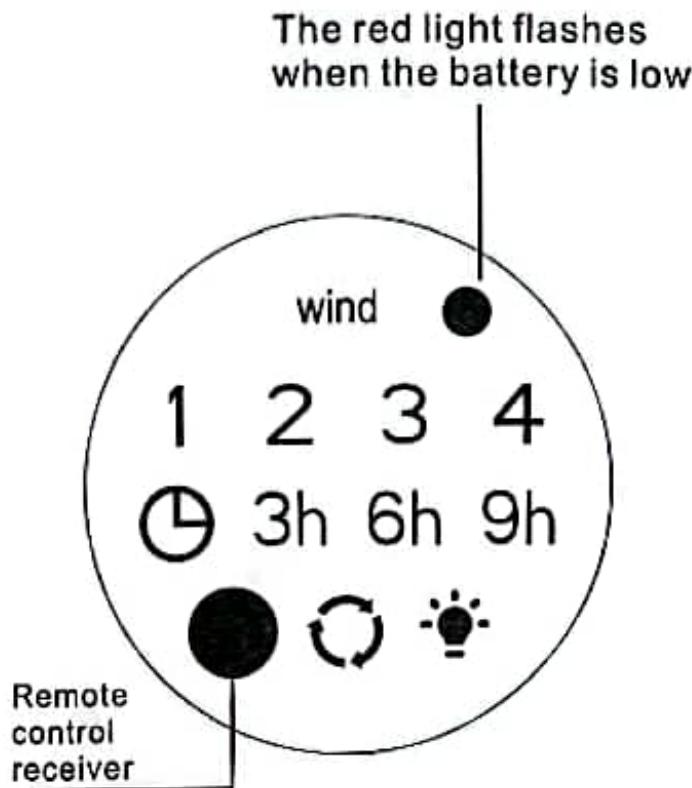

Tap to turn the head shaking function on or off

Press and hold to start the host and activate the remote control,
Tap to switch to 5th gear wind cycle

Tap to start timing (3h, 6h, 9h),
long press to turn on or off the light