



HAFELE HH-WT70A T-Shape Hood Instruction Manual

[Home](#) » [HAFELE](#) » HAFELE HH-WT70A T-Shape Hood Instruction Manual 

Contents

- [1 HAFELE HH-WT70A T-Shape Hood](#)
- [2 INTRODUCTION](#)
- [3 SAFETY PRECAUTION](#)
- [4 Electrical Shock Hazard](#)
- [5 WALL MOUNTING INSTALLATION](#)
- [6 For Glass model and T shape model](#)
- [7 Installation \(Vent inside\)](#)
- [8 OPERATION](#)
 - [8.1 Touch control 1](#)
- [9 MAINTENANCE](#)
- [10 TROUBLESHOOTING](#)
- [11 ENVIRONMENTAL PROTECTION](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



HAFELE HH-WT70A T-Shape Hood



INTRODUCTION

Thank you for choosing this cooker hood.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance. In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage. The cooker hood use high quality materials, and is made with a streamlined design. Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.

SAFETY PRECAUTION

Never let the children operate the machine.

- The cooker hood is for home use only, not suitable for barbecue, roast shop and other commercial purpose.
- The cooker hood and its filter should be clean regularly in order to keep in good working condition.
- Clean the cooker hood according to the instruction manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Forbid the direct baking from the gas cooker.
- Please keep the kitchen room a good convection.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- There shall be adequate ventilation of the room when the range hoods used at the same time as appliances burning gas or other fuels;
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels;
- Regulations concerning the discharge of air have to be fulfilled.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not flame under the range hood.

- **CAUTION:** Accessible parts may become hot when used with cooking appliance.
- The warning shall be in the same part of the instructions that include details of how to mount the equipment


Electrical Shock Hazard

- Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified engineer.
- Failure to follow these instructions can result in death, fire, or electrical shock.


WALL MOUNTING INSTALLATION

1. Prepare for installation:


- If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or inflammable material with an interior diameter of 150mm)

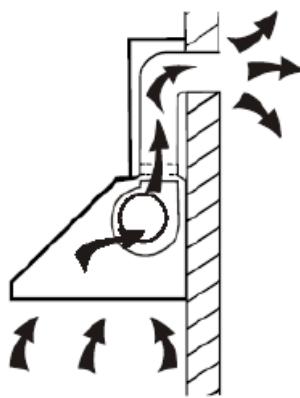

- Before installation, turn the unit off and unplug it from the outlet.

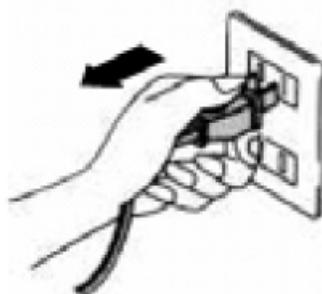

- The cooker hood should be placed at a distance of 65~75cm above the cooking plane for best effect.

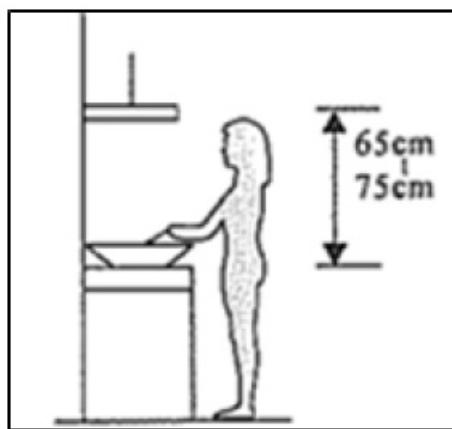


Installation (Vent outside):

Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room.


When the range hood and appliance supplied with energy other than electricity are simultaneously in operation,

the negative pressure in the room must be not exceed 4 Pa (4×10⁻⁵ Bar)


- Drill 3 x 8mm holes to accommodate the bracket. Screw and tighten the bracket with the screws & screw plugs provided.

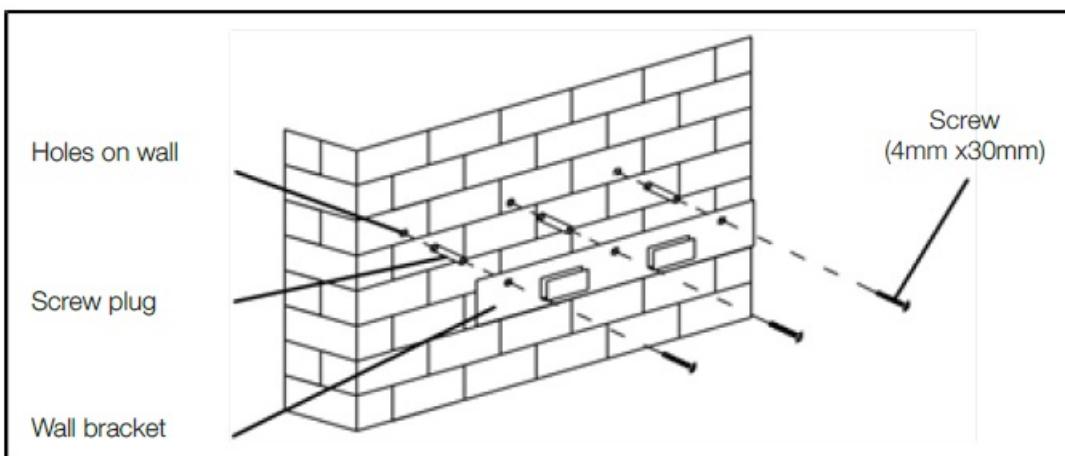

- Leave up the cooker hood and hang onto the wall bracket hook.

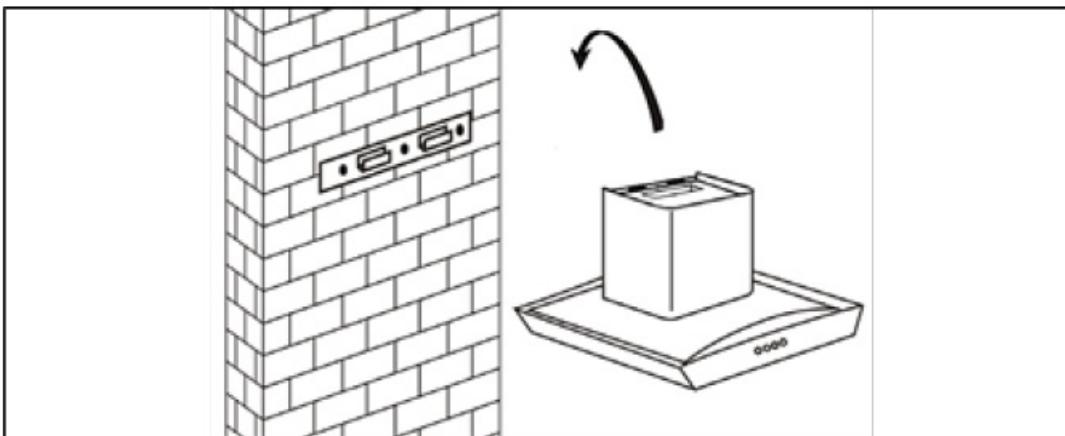


- Fix the one-way-valve to the air outlet of the cooker hood. Then, attached the one-way-valve as shown below.

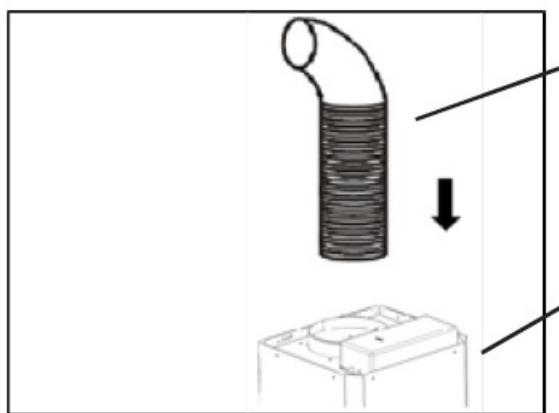


Chimney installation.

For Glass model and T shape model


- By Put the upper chimney into lower chimney. Then pulling out the upper chimney up-wards. Adjust to reach the height required.

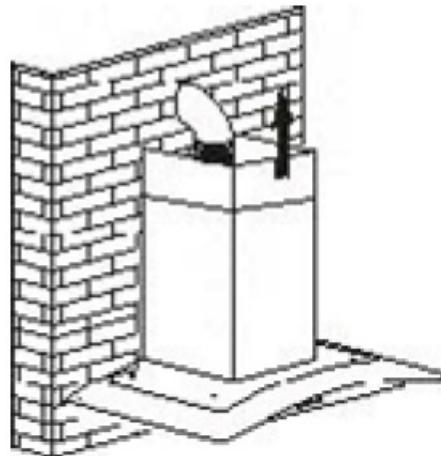

- Sliding the chimney to adjust the chimney height. When the height you required is reached, then hang the fixing hole to the fixing screws as showed in below pictures.

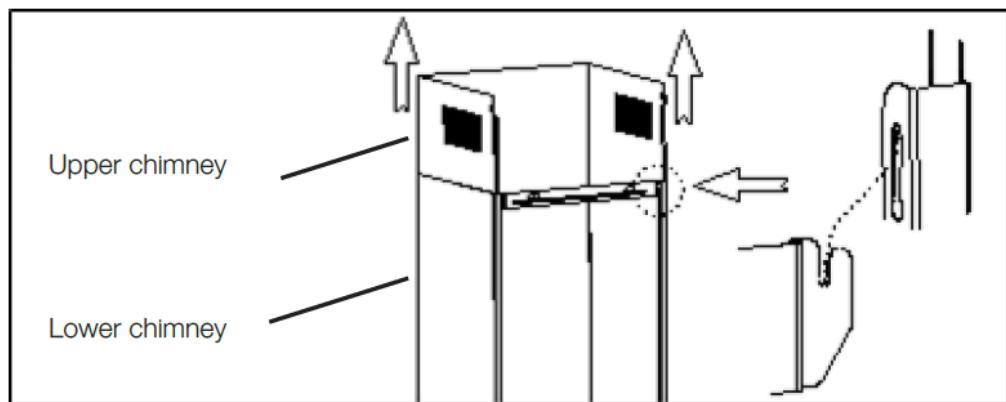


- Drill 2x8mm holes to accommodate the plate II. Screw and tighten the plate II onto the wall with 2 screws provided. Assembly the chimney onto the unit and fix it with 2 screws.

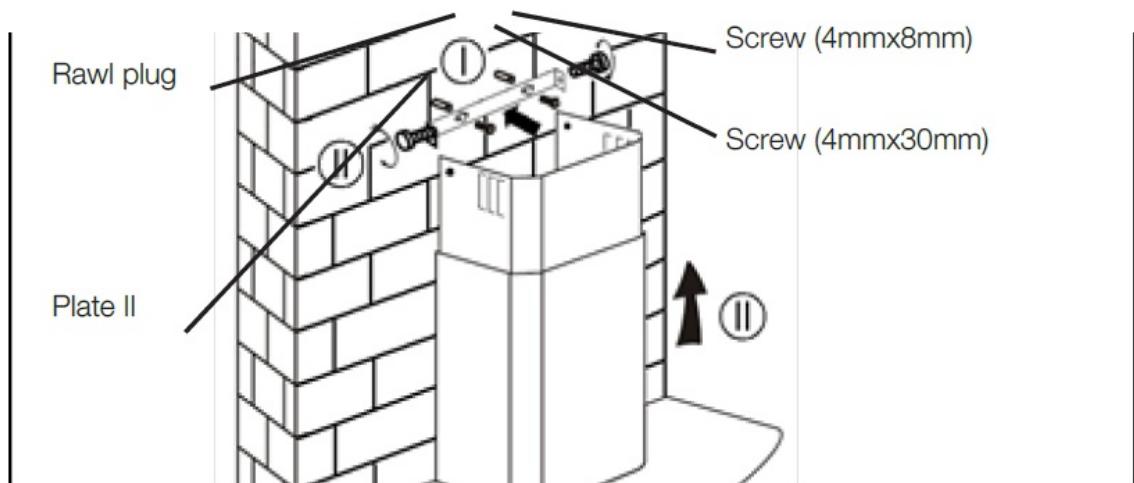

Warning: Failure to install the screws or fix the device in accordance with these instructions may result in electrical hazards.


Installation (Vent inside)

If you do not have an outlet to the outside, an exhaust pipe is not required and the installation is similar to the one shown in section "Installation (Vent outside)".

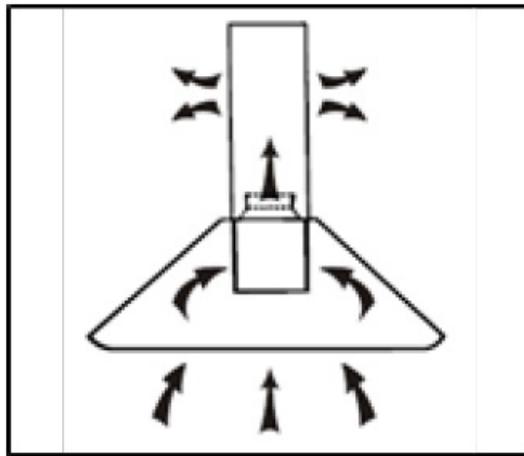


An activated carbon filter can be used to trap odors.

In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.

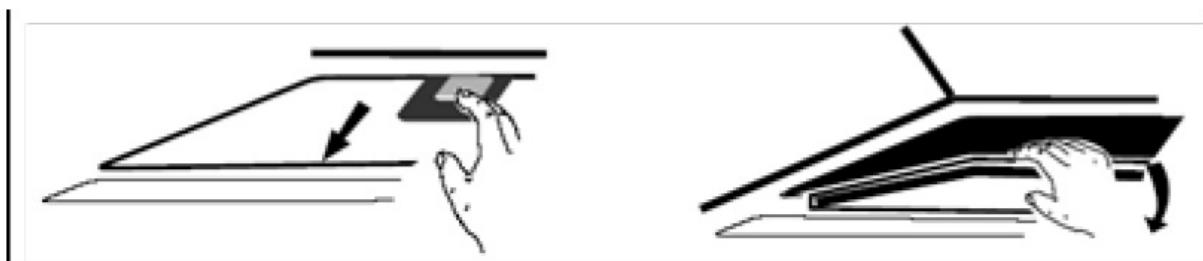

Plug the activated carbon filter into the unit and turn it in a clockwise direction. Repeat the same on the other side.

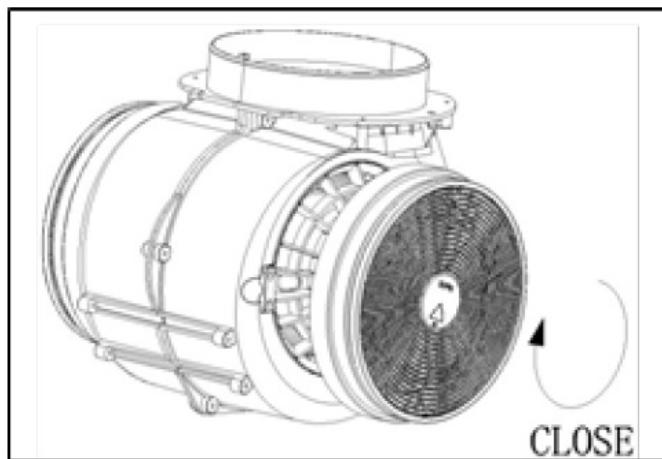

NOTE:

- Make sure the filter is securely locked. Otherwise, it would loosen and cause danger.
- When an activated carbon filter is attached, the suction power will be lower.

OPERATION

Touch control 1



	Off button	It's used for turning off the fan.
	Speed plus button	For increasing the speed of the fan
	Speed decrease button	For decreasing the speed of the fan.
	Light button	
	Digital display	Fan speed display: "1" for Low speed, "2" for Medium speed, "3" for High speed

Quick timer: Press + & – hold for 1 second, Digital display will flash & into 5 minutes count down, after 5 minutes motor & light will turn off automatic & Buzzer sound for 1 second.

MAINTENANCE

Before cleaning switch the unit off and pull out the plug.

- **Regular Cleaning**

Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material, or stiff brushes to clean the unit.

- **Monthly Cleaning for Grease Filter**

ESSENTIAL: Clean the filter every month can prevent any risk of fire.


The filter collects grease, smoke and dust.....so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate the filter. Clean it with household cleaning detergent.

- **Annual Cleaning for Activated Carbon Filter**

Apply SOLELY to unit that installed asa recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood used.

- **Bulb Replacement**

- Switch the unit off and unplug the appliance.
- Remove the lamp cover by unscrewing the 2 screws.
- Unscrew the incandescent bulb
- Replace with the same type and rated LED lamp (max,1.5W or max 2W(22V)).

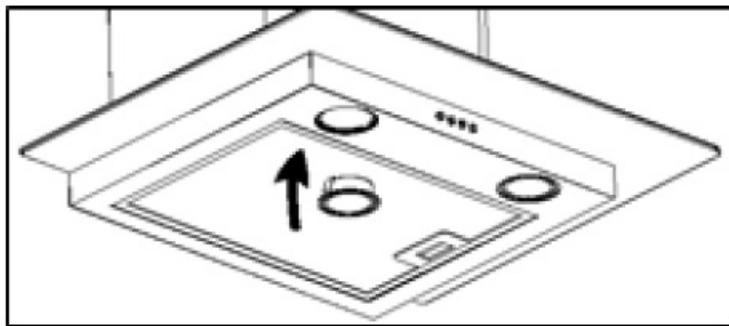

TROUBLESHOOTING

Fault	Cause	Solution
Light on, but the fan does not work	The fan blade is jammed.	Switch of the unit and repair by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work	light bulb burn.	Replace the bulb with the correct rating.
	Power cord losses.	Plug into the power supply again.
Serious Vibration of the unit	The fan blade is damaged.	Switch of the unit and repair by qualified service personnel only.
	The fan motor is not fixed tightly.	Switch of the unit and repair by qualified service personnel only.
	The unit is not hung properly on the bracket.	Take down the unit and check whether the bracket is in the proper location.
Suction performance not good	The too long distance between the unit and the cooking plane	Readjust the distance to 65- 75cm


ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about the treatment, recovery, and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Documents / Resources

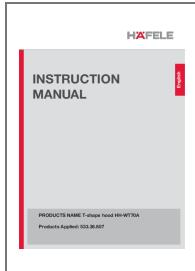

[**HAFELE HH-WT70A T-Shape Hood**](#) [pdf] Instruction Manual

HH-WT70A, T-Shape Hood, HH-WT70A T-Shape Hood, Hood

[Manuals+.](#)