

Thank you for purchasing the SOUNARC K2 Karaoke Party Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@sounarc.com


Package Contents

1 x SOUNARC K2 Karaoke Party Speaker
1 x Type-C Cable
1 x Carrying Strap
1 x User Manual
1 x Aux-in Cable
1 x Remote Control
1 x Warranty Card
2 x Wireless Karaoke Mics

Specifications

Model	K2
Device Name	SOUNARC K2
Bluetooth Version	5.0
Bluetooth Profiles	A2DP/AVRCP/HFP
Audio Codec	SBC
Transmission Distance	Up to 18m/59ft (open area)
Waterproof	IPX6
Output	200W
Power Supply	DC 5V/3A, via Type-C port
Frequency Range	50Hz – 20kHz
Battery	Speaker: 24000mAh (11.1V/8000mAh) Microphones: 1800mAh
Playtime (Varied by Audio Contents, Light Display & Volume Levels)	Music: 24 Hours (On a 50% Volume) Karaoke: 10 Hours (On a 60% Volume)
Charging time	Speaker: 9 Hours Microphones: 2 Hours

Button Configuration

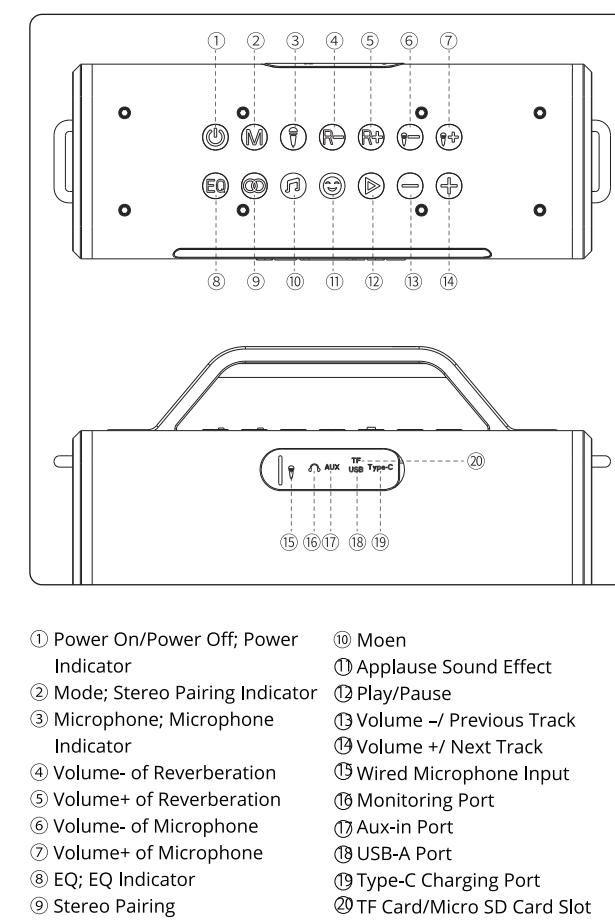


Instructions

Button	Operation	Indicator
	Press for 2s to Turn On Press for 2s to Turn Off	Pairing: Indicator Flashes Blue Quickly Connected: Indicator Stays Blue Indicator Off
	Press Once to Switch Lighting Modes Press for 8s to Forcely Off	Indicator Off
	Press Once to Enter/Exit Karaoke Mode	Pairing: Indicator Flashes Blue Connected: Indicator Stays Blue
	Press Once to Switch Playing Modes among Bluetooth, U-disk, TF Card & Aux in Press for 3s to Disconnect from Device Press for 8s to Reset Double Press to Enter/Exit Stereo Pairing Mode	Original: Off 3D: Stays White Deep Bass: Stays Green
	Press Once to Enter/Exit Power-Saving Mode to Charge for Your Device	
	Press for 3s to Mute the External Sound, Supports Wired Headphone Via Monitoring Port	

	Press Once to Play/Pause Music under Bluetooth/TF Card/U-Disk Mode	
	Press Once to Mute under Aux-in Mode	
	Press Once to Answer/End a Call	
	Press for 2s to Reject a Call Double Press to Redial the Last Call	
	Press for 3s to Activate Voice Assistant	
	Press Once to Turn Down Volume	
	Press for 2s to Skip to Previous Track	
	Press Once to Turn Up Volume	
	Press for 2s to Skip to Next Track	
	Short Press to Turn down Microphone Reverb	
	Short Press to Turn up Microphone Reverb	
	Short Press to Turn down Microphone Volume	
	Short Press to Turn up Microphone Volume	
	Short Press to Switch Among 4 Magic Sound Effects	
	Short Press to Switch Among 4 Applauding Modes	


How to Use

1. Turn On/Off

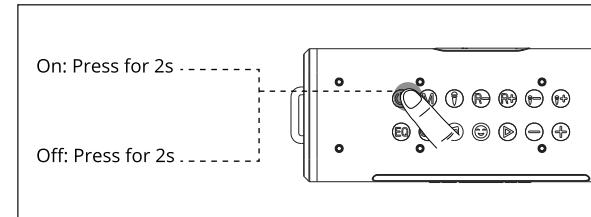


2. Bluetooth Connection

Search & click 'SOUNARC K2' to connect.

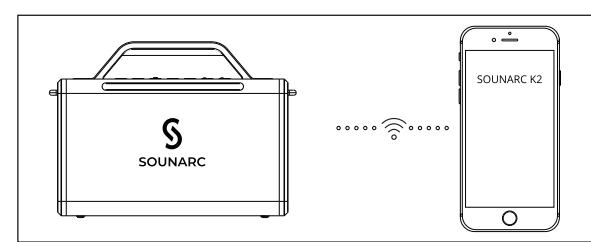

3. Disconnect from Bluetooth

Press the 'Mode' button for 3s to disconnect from Bluetooth.

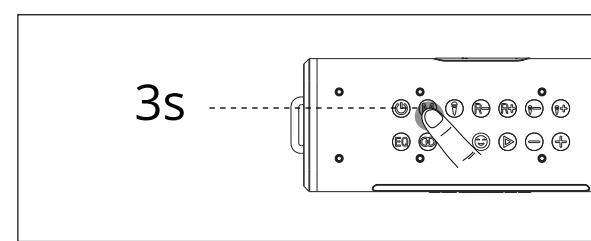

4. USB-A Power Bank Function

This speaker carries a USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode.

5. Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

6. USB Flash Drive Mode


The speaker will play the music from your U-disk when plugging into the slot.

7. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. The maximum supported memory is 128 GB.

8. Karaoke Mode

Press 'Microphone' button once to enter/exit Karaoke Mode.

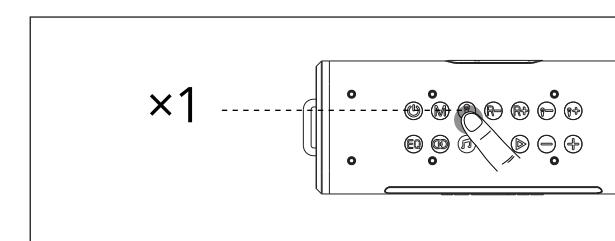


9. Charging

Red Light On	Charging
Goes Off	Charging Completion
Red Light Flashes	Battery Low

10. Reset

Press 'Mode' button for 8s.

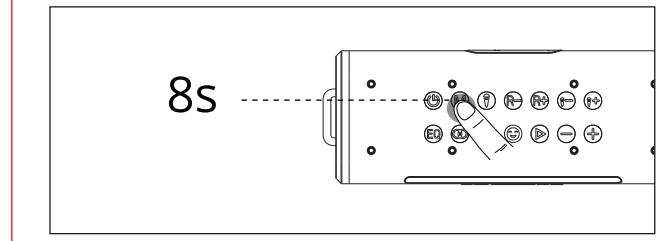

11. Instruction of Wireless Microphone

A. Battery display: 3 layers indicates fully charged; blank means battery low.
B. Red indicator stays on indicates MIC is get fully charged.
C. It is highly suggested that you drain up the battery before charging for the first use.
D. The frequency of 2 MICS are different to avoid the interfere.

12. Auto Power Off

The speaker will power off automatically after 10 minutes if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

True Wireless Stereo Mode

- Turn on both speakers and make sure they haven't connected with any device.
- Double press the 'Mode' button of either speaker to enter stereo pairing mode.
- If paired successfully, the stereo pairing indicator of both speakers will stay yellow. The Bluetooth indicator of host speaker will flash while the vice one will off.
- Search & click 'SOUNARC K2' to connect.
- Double press the 'Mode' button of either speaker to exit stereo pairing mode.

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.

Warehouse 101H, No. 49 Wuhe Avenue, Wuhe Community, Bantian Street, Longgang District, Shenzhen
Email: support@sounarc.com

UK REP Name: APEX CE SPECIALISTS LIMITED
Add: 89 Princess Street, Manchester, M1 4HT, UK

EC REP AMZLAB GmbH
Laubenhof 23,45326 Essen



Model: K2
Made in China