 


说明书尺寸80x110mm

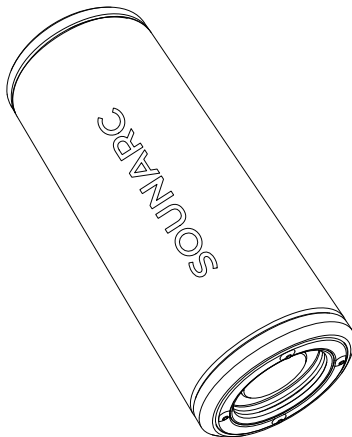

P4

USER MANUAL

Thank you for purchasing the SOUNARC P4 Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: [support@sounarc.com](mailto:support@sounarc.com)


Package Contents

- 1 x SOUNARC P4 Portable Outdoor Speaker
- 1 x Aux-in Cable
- 1 x Type-C Cable
- 1 x User Manual
- 1 x Lanyard
- 1 x Warranty Card

Specifications

Model	P4
Device Name	SOUNARC P4
Bluetooth Version	5.3
Bluetooth Profiles	A2DP/AVRCP/HFP
Audio Codec	SBC
Transmission Distance	Up to 15m/49ft (open area)
Waterproof	IPX6
Output	20W
Power Supply	5V/1A, via Type-C port
Frequency Range	80Hz - 18kHz
Battery	3.7V/3000mAh
Playtime(Varied by Audio Contents, Light Display & Volume Levels)	Music: 18 Hours(on a 50% volume)
Charging time	3-4 Hours

 Button Configuration

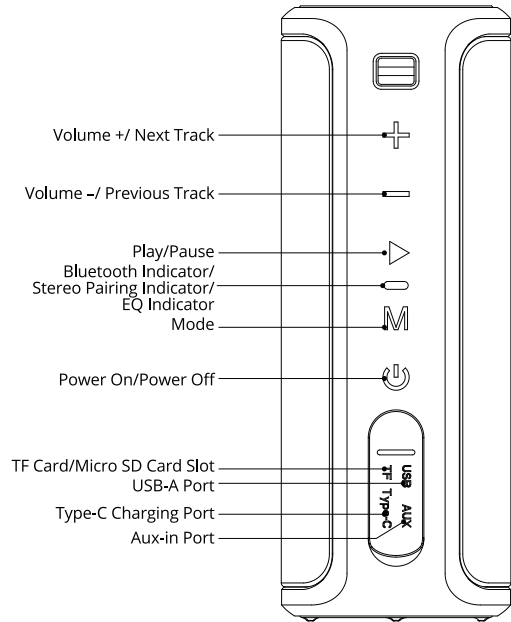


Instructions

Button	Operation	Indicator
	Press for 2s to Turn On	Pairing: Indicator Flashes Blue Quickly
	Press for 2s to Turn Off	Connected: Indicator Stays Blue
	Press Once to Switch Lighting Modes	Indicator Off
	Press for 8s to Forcedly Off	Indicator Off
	Double Press to Enter/Exit Stereo Pairing Mode	
	Press Once to Switch Playing Modes among Bluetooth, TF Card, U-disk & Aux in	
	Press for 2s to Switch Dual EQ Modes between Vocal & Deep Bass	Vocal: Stays White Deep Bass: Stays Green
	Press for 5s to Reset	
	Press Once to Play/Pause Music under Bluetooth/TF Card/U-Disk Mode	
	Press Once to Mute under Aux-in Mode	
	Press Once to Answer/End a Call	
	Press for 2s to Reject a Call Double Press to Redial the Last Call	
	Press for 3s to Disconnect from Device	
	Press Once to Turn Down Volume	
	Press for 2s to Skip to Previous Track	
	Press Once to Turn Up Volume Press for 2s to Skip to Next Track	


How to Use

 1. Turn On/Off

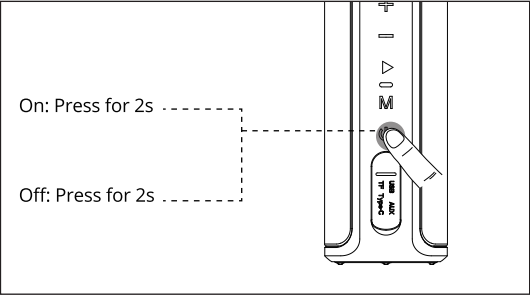

2. Bluetooth Connection

 Search & click 'SOUNARC P4' to connect.

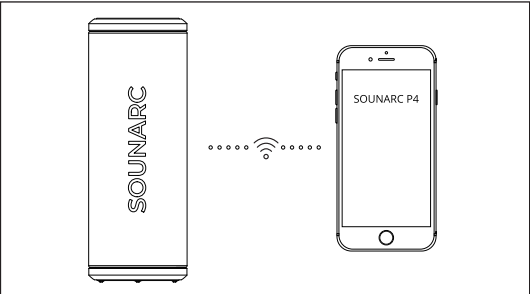

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.

Warehouse 101H, No. 49 Wuhe Avenue, Wuhe Community, Bantian Street, Longgang District, Shenzhen  
Email: [support@sounarc.com](mailto:support@sounarc.com)

 
UK REP Name: APEX CE SPECIALISTS LIMITED  
Add: 89 Princess Street, Manchester, M1 4HT, UK

EC REP AMZLAB GmbH  
Laubenhof 23,45326 Essen



Model: P4  
Made in China

3. Disconnect from Bluetooth  
Press the 'Play/Pause' button for 3s to disconnect from Bluetooth.

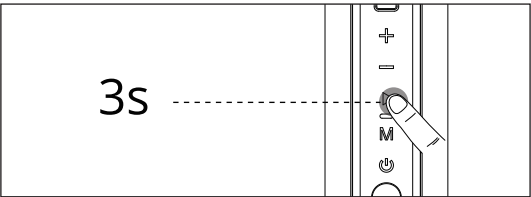

4. USB-A Power Bank Function  
This speaker carries a USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode.

5. Aux-in Mode  
Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.  
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

6. USB Flash Drive Mode  
The speaker will play the music from your U-disk when plugging into the slot.

7. TF/Micro SD Card Slot Mode  
The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. The maximum supported memory is 128 GB.


8. Charging



Red Light On	Charging
Goes Off	Charging Completion
Red Light Flashes	Battery Low

9. Reset

Press 'Mode' button for 5s.

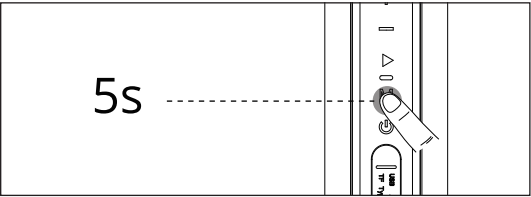

10. Auto Power Off

The speaker will power off automatically after 10 minutes if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

True Wireless Stereo Mode

- Turn on both speakers and make sure they haven't connected with any device.
- Double press the 'Power' button of either speaker to enter stereo pairing mode.
- If paired successfully, the stereo pairing indicator of both speakers will stay yellow. The Bluetooth indicator of host speaker will flash while the vice one will off.
- Search & click 'SOUNARC P4' to connect.
- Double press the 'Power' button of either speaker to exit stereo pairing mode.

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.