

HƯỚNG DẪN SỬ DỤNG

AC-15

MÁY XAY THỰC PHẨM



Tìm hiểu nhiều hơn về chúng tôi tại [www.facebook/magicvietnam.official](https://www.facebook.com/magicvietnam.official)
hoặc website công ty MagicEco.vn | Magicvietnam.vn

TẢI NGAY APP VÀO BẾP



ĐĂNG KÝ BẢO HÀNH
CÔNG THỨC NẤU ĂN

CẤU TẠO CHI TIẾT SẢN PHẨM



No.	Name	Function
1	Nút tốc độ	Điều chỉnh tốc độ lưỡi quay của máy.
2	Mô-tơ	Các bộ phận động cơ/ chuyển đổi, vv
3	Nắp đậy	Đậy nắp cối thủy tinh để bảo vệ an toàn sử dụng.
4	Cối xay	Chứa thực phẩm.
5	Lưỡi dao chính Lưỡi dao phụ	Xay thực phẩm
6	Trụ cố định	Cố định vị trí lưỡi dao.
7	Miếng đệm	Cố định máy.

Mã sản phẩm	AC-15
Điện áp	220V -240V
Công suất	300W
Dung tích	2L

ĐẶC TÍNH

- 1. Lưỡi dao ba chiều hình chữ S, tối ưu hóa để xay thịt và rau.
- 2. Hai lựa chọn với công tắc tốc độ cao và thấp cho hương vị tốt hơn và sử dụng an toàn hơn.
- 3. Với cối xay thép dày, tốt cho sức khỏe, an toàn và dễ lau chùi.

HƯỚNG DẪN SỬ DỤNG

CÁC BƯỚC VẬN HÀNH

1. Tháo bộ phận chính và nắp đáy, đặt cối xay vào miếng đệm chống trượt dưới thân cốc.
2. Lấy nắp dao bằng nhựa dùng để bảo vệ lưỡi dao ra.
3. Đảm bảo lưỡi dao được đặt chính xác trên trục chính ở giữa thân cốc.
4. Đặt thức ăn vào (Tham khảo số lượng thực phẩm/ bảng thời gian xay).
5. Thực phẩm được thêm vào không được vượt quá giới hạn của vạch chia tỷ lệ tối đa của thân cốc.
6. Đóng nắp, sau đó đặt thân chính lên nắp, kiểm tra xem nó có ở vị trí tốt không, đảm bảo thiết bị chính được lắp đặt với lưỡi dao và nắp ở đúng vị trí.
7. Cắm điện và bật nguồn.
8. Giữ thân chính bằng tay và nhấn công tắc. Máy bắt đầu hoạt động. Nhả công tắc, máy ngừng chạy (tham khảo số lượng thực phẩm/ bảng thời gian xay).
9. Sau khi máy ngừng chạy, vui lòng không tháo thân chính ngay lập tức. Nó gỡ bỏ sau khi lưỡi dao ngừng quay và rút phích cắm.
10. Mở nắp, lấy lưỡi dao ra trước rồi lấy thức ăn ra.
11. Lưỡi dao rất sắc. Cần thận không cắt tay hoặc các bộ phận khác khi tháo nó ra.



BẢNG THAM KHẢO LƯỢNG THỰC PHẨM VÀ THỜI GIAN HOẠT ĐỘNG

Thực phẩm	Số lượng	Thời gian xay tối đa	Lưu ý
Thịt heo	<300g (cắt thành từng miếng nhỏ khoảng 2cm)	30 giây	Cần loại bỏ da, xương và gân, sử dụng công tắc tốc độ cao.
Thịt bò	<300g (cắt thành từng miếng nhỏ khoảng 2cm)	30 giây	Cần loại bỏ da, xương và gân, sử dụng công tắc tốc độ cao.
Tỏi	300g	15 giây	Sử dụng công tắc tốc độ thấp
Ớt	300g	15 giây	Sử dụng công tắc tốc độ thấp
Cà rốt	<300g (cắt thành từng miếng nhỏ khoảng 2cm)	15 giây	Sử dụng công tắc tốc độ thấp
Rau	300g	15 giây	Sử dụng công tắc tốc độ thấp

XỬ LÝ SỰ CỐ

Sự cố	Nguyên nhân	Khắc phục
Không hoạt động sau khi bấm công tắc.	Phần nắp đáy chưa được đóng kín.	Kiểm tra lại phần nắp đáy.
Lưỡi dao ngừng quay trong khi đang hoạt động.	1. Điện áp quá thấp. 2. Quá tải động cơ và dừng tự động để bảo vệ.	1. Kiểm tra điện áp. 2. Đề nghị ngừng sử dụng máy xay trong 30 phút trước khi khởi động.
Mô-tơ có mùi trong lần sử dụng đầu tiên.	Bình thường.	Nếu vẫn còn mùi hôi sau nhiều lần sử dụng, vui lòng đến trung tâm bảo hành để kiểm tra.
Rung động bất thường hoặc quá ồn ào	1. Trụ cố định lưỡi dao không đúng chỗ. 2. Sản phẩm được đặt không ổn định. 3. Điện áp quá cao. 4. Quá nhiều thực phẩm.	1. Lấy thức ăn ra, và điều chỉnh trụ cố định. 2. Đặt sản phẩm ổn định. 3. Kiểm tra xem điện áp có quá cao không. 4. ắt nguồn và lấy bớt thực phẩm.



LƯU Ý

1. Sản phẩm này hạn chế sử dụng để chế biến thực phẩm cứng hơn, chẳng hạn như: thịt với xương và da, hạt cà phê, các loại hạt hoặc thực phẩm đông lạnh.
2. Cấm vận hành máy xay trống hoặc sử dụng quá tải. Cấm sử dụng điện khi sản phẩm chưa được cài đặt hoàn toàn.
3. Không liên tục sử dụng hơn 30 giây. Nếu vẫn còn thực phẩm, cần cho máy nghỉ 2 phút để tiếp tục sử dụng tiếp theo. Khi phải hoạt động trong một thời gian dài khiến nhiệt độ vượt quá giới hạn, bộ điều chỉnh nhiệt sẽ tự động ngắt kết nối. Động cơ sẽ tự động trở lại hoạt động bình thường sau khi làm mát (khoảng 30 phút).
4. Trước khi sử dụng, vui lòng kiểm tra xem đường dây điện và các bộ phận khác có bị hỏng không. Phích cắm phải được rút ra sau khi sử dụng.
5. Không đặt thân chính trong nước hoặc chất lỏng khác; cũng không được rửa sạch bằng nước hoặc chất lỏng khác. Khăn ướt có thể được sử dụng để lau chùi phần thân chính.
6. Khi sản phẩm không được sử dụng trong một thời gian dài, vui lòng làm sạch và đặt nó vào hộp đóng gói. Đặt ở nơi khô ráo, thoáng khí để chống ẩm.

TẢI NGAY APP VÀO BẾP



ĐĂNG KÝ BẢO HÀNH
CÔNG THỨC NẤU AN

SẢN PHẨM ĐƯỢC NHẬP KHẨU VÀ PHÂN PHỐI ĐỘC QUYỀN BỞI CÔNG TY TNHH TM XNK NGUỒN SỐNG VIỆT

Hồ Chí Minh: Số 235-237 Đường số 9A, KDC Trung Sơn, Bình Hưng, Bình Chánh, TP. HCM | Bảo hành: 028 7106 5858

Hà Nội: Số 2, Ngõ 382, Phạm Văn Đồng, Cổ Nhuế 2, Bắc Từ Liêm, Hà Nội | Bảo hành: 024 37 855 966

HOTLINE MUA HÀNG: 1800 6977



USER MANUAL

AC-15 FOOD CHOPPER




More information at www.facebook.com/magicvietnam.official
or website MagicEco.vn | Magicvietnam.vn

DOWNLOAD APP VAOBEP



WARRANTY REGISTRATION
COOKING RECIPE

PRODUCT DETAILS STRUCTURE

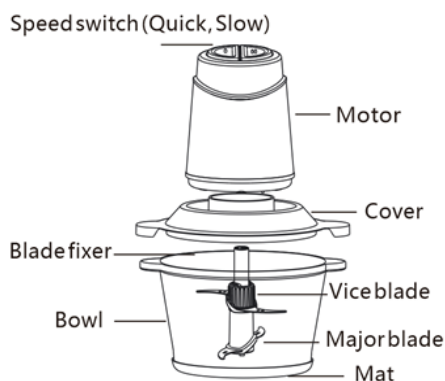

Technical Parameters

No.	Name	Function
1	Speed switch	Control product switch and running speed of motor
2	Motor	Major parts, inner with motor/ switch parts, etc.
3	Cover	Cover on the grinding cup to protect use safety
4	Bowl	Hold food
5	Major blade Vice blade	Grind food of meat kind and vegetable.
6	Blade fixer	Fix the position of blade
7	Mat	Anti-slip for the machine.

Product name	Chopper
Product model	AC-15
Rated voltage	220V -240V
Rated frequency	50Hz /60Hz
Rated power	300W
Capacity	2L
Rotating speed	22000 RPM/min

CHARACTERISTICS

- 1. Three-dimensional four blade in S-shape, better for grinding meat and vegetable;
- 2. Two choices with high and low speed switch. Free control grinding degree. Taste better and use safely;
- 3. With thickened stainless steel bowl, healthy, safe and easy to clean;

PRODUCT USAGE

OPERATION STEPS

1. Remove the main unit and cover, place the cup body in a smooth plate, and then place the anti-slip mat under the cup body.
2. Take the plastic knife cover used to protect the blade out.
3. Guarantee the blade is accurately placed on the spindle at the center of cup body.
4. Put the food in (Refer to food quantity / working hour table).
5. The added food shall not exceed the upper limit of the maximum scale line of the cup body.
6. Close the cover, then put the main unit on the cover, check whether it is in a good position, make sure the main unit is installed with the meat cutter and the cover in correct position.
7. Plug in and turn on the power.
8. Hold the main unit by hand and press the switch. The machine starts to work. Release the switch, the machine stop running. (refer to food quantity/ working hour table)
9. After the machine stops running, please do not remove the main unit immediately. It can be removed after blades stop rotating and pull the plug.
10. Open the cover, take the meat cutter out first and then take the food out.
11. Meat cutter is very sharp. Be careful not to cut your hands or other parts when removing it
12. Do not process liquids or food higher than max line, so not to cause the possible leakage.



FOOD QUANTITY/WORKING HOUR TABLE

Food	Quantity	The longest cutting and mixing time	Remark
Pork	<300g (Cut into small pieces of about 2cm)	30 sec	Need to remove skin, bone and tendon, use high speed switch
Beef	<300g (Cut into small pieces of about 2cm)	30sec	Need to remove skin, bone and tendon, use high speed switch
Garlic	300g	15 sec	Use low speed switch
Chili	300g	15 sec	Use low speed switch
Carrot	300g (Cut into small pieces of about 2cm)	15 sec	Use low speed switch
Vegetable	300g	15 sec	Use lowspeed switch



SHOOTING

Failure description	Causes analysis	Remove failures
Doesn't work after power on	The cover is not placed completely	Cover it completely.
Grinder stop running during use	1.Voltage is too low; 2.Motor overloads and stops automatically for protection	1.Check the voltage; 2.Suggest placing the grinder for 30 min before start it.
Motor smells bad at first several use	It is normal for the motor being used for the initial time	If there is still bad smell after more times use, please to the maintenance station for inspection.
Abnormal vibration or too noisy	1. Blade rack is not in place; 2.Product is placed unstably; 3.Voltage is too high; 4.Overload food.	1.Take the food out, and placethe rack in position. 2.Place the product stably. 3.Check whether the voltage is too high. 4.Turn off the power and take the excess food.

CAUTION

1. Do not use a power source other than AC 220-240V. Use sockets of 6V or higher separately.
2. This product cannot used to process harder food, such as: meat with bones and skin, coffee beans, nuts or frozen foods.
3. Check the blade in a right position before adding the food.
4. Do not use the grinder without transparent cover.
5. Forbid operating empty grinder or use overloaded. Forbid using in electricity when product isn't installed completely.
6. Press the switch once to operate the product during each use.
7. Do not continuously use over 30 sec. If do, 2min rest is required for next use. When the load runs for a long time causing temperature beyond the limit, the thermostat will disconnect automatically. The motor will automatically return to normal operation after cooling(about 30 minutes).
8. Before use, please check whether the power line and other parts are damaged. The plug must be pulled out after use.
9. Do not place the main unit in water or other liquid; also do not rinse it with water or other liquid. Wet towel can be used to wipe the main unit.
10. The product should be stored in a place not accessible to children. Do not allow people with physical/sensory or mental disabilities, or lacking relevant experience (including children) to use or play with the product.
11. When the product is not used for a long time, please clean it and put it in the packing box. Place in a dry, ventilated place to prevent moisture.
12. THE BLADES ARE SHARP - HANDLE WITH CARE .

DOWNLOAD APP VAOBEP



WARRANTY REGISTRATION
COOKING RECIPE

NGUON SONG VIET IMEX TRADING CO., LTD

Ho Chi Minh: 235-237 9A Str., Trung Son, Binh Hung Commune, Binh Chanh Dist., HCMC, Vietnam | **Guarantee:** 028 7106 5858

Ha Noi: 2, Lane 382, Pham Van Dong street, Co Nhue 2 ward, Bac Tu Liem district, Ha Noi, Vietnam | **Guarantee:** 024 37855966

HOTLINE: 1800 6977