



Cảm ơn quý khách đã sử dụng dịch vụ  
và sản phẩm của công ty chúng tôi!

*Buheung*

**SẢN PHẨM ĐƯỢC NHẬP KHẨU VÀ PHÂN PHỐI ĐỘC QUYỀN BỞI  
CÔNG TY TNHH THƯƠNG MẠI XUẤT NHẬP KHẨU NGUỒN SỐNG VIỆT**

**Hồ Chí Minh:** Số 235-237, Đường số 9A, KDC Trung Sơn, Xã Bình Hưng, Huyện Bình Chánh, TP.HCM  
**Bảo hành: 028 7106 5858. Hotline: 1800 6977**

**Hà Nội:** Số 2, Ngõ 382, Phạm Văn Đồng, Cổ Nhuế 2, Bắc Từ Liêm, Hà Nội. **Bảo hành: 024 37 855 966**




[www.buheung.vn](http://www.buheung.vn)

**HƯỚNG DẪN SỬ DỤNG  
GHẾ MASSAGE BUHEUNG BLUE ANGEL MK-5400**

Vui lòng đọc kỹ hướng dẫn trước khi sử dụng



(1) Mở hộp và lấy tất cả những phụ kiện ra bên ngoài

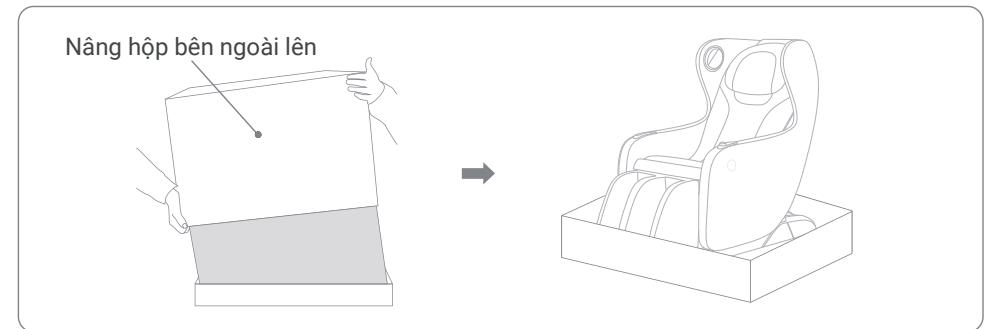


1. Hãy tháo tất cả các dây quấn quanh thùng, từ từ nhấc thùng ra bên ngoài rồi đến ghế massage.
2. Lấy hết tất cả phụ kiện bên trong thùng và để sang một bên sử dụng sau.


(2) Mở hộp và lấy tất cả những phụ kiện ra bên ngoài

- \* Chọn 1 vị trí thích hợp để đặt ghế massage
- \* Không được để ghế ở vị trí có ánh nắng trực tiếp như : Cửa sổ, máy sưởi, v.v.. Nếu không thì sẽ ảnh hưởng đến phần da ghế sẽ bị biến màu hoặc cứng.
- \* Đặt ghế massage tránh tình trạng hỏng nền nhà hoặc có tiếng ồn, vui lòng đặt 1 miếng thảm dưới ghế để tránh làm hỏng sàn nhà do máy.
- \* Đảm bảo rằng không có chướng ngại vật xuất hiện ở phía trước và sau ghế massage (Chừa khoảng trống 25cm phía sau ghế)
- \* Không được đặt máy ở những nơi ẩm ướt hoặc mặt nền không bằng phẳng.
- \* Để tránh nhiễu tín hiệu : Vui lòng không để gần tivi và các thiết bị điện tử khác cách 1m.

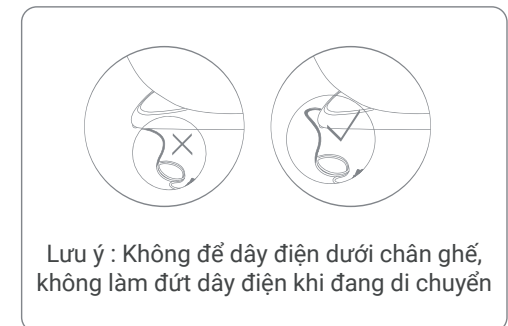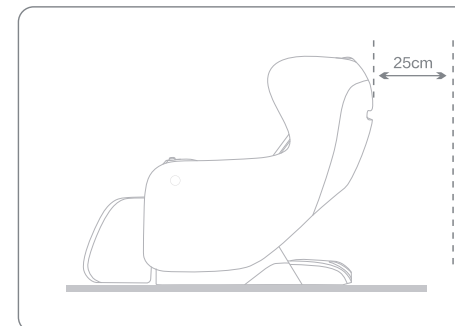


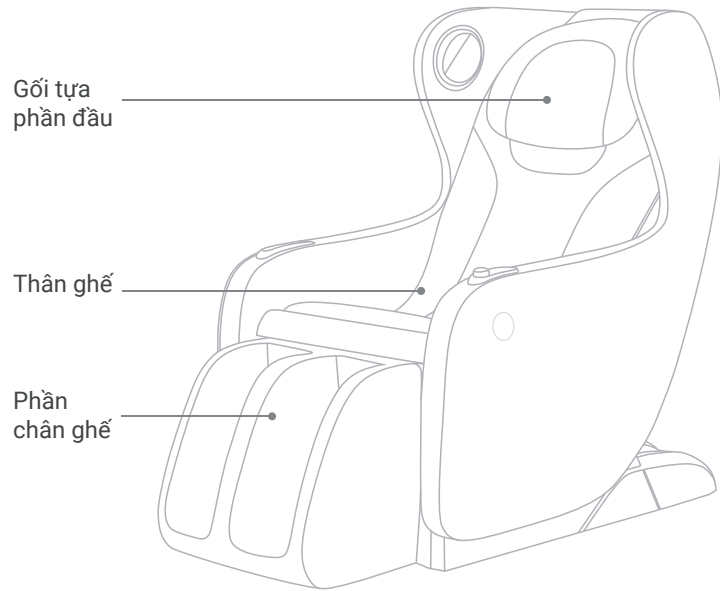

Mặt sau của ghế massage

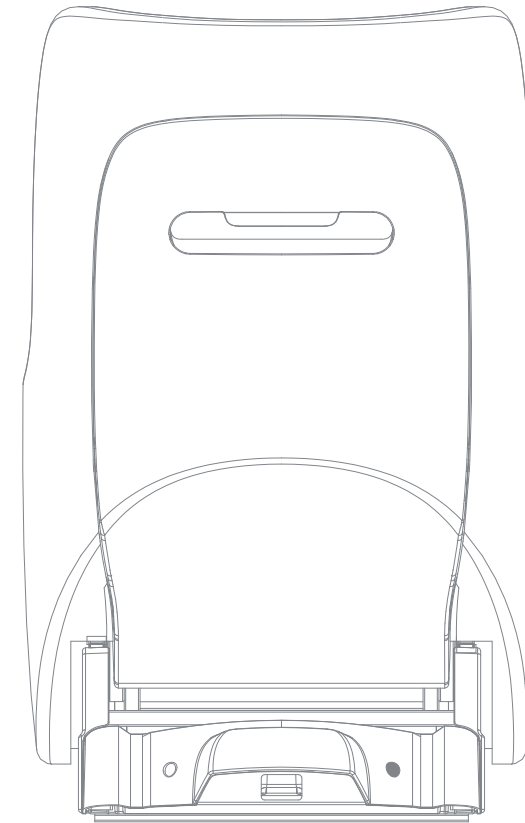

**CÁCH DI CHUYỂN GHẾ MASSAGE**

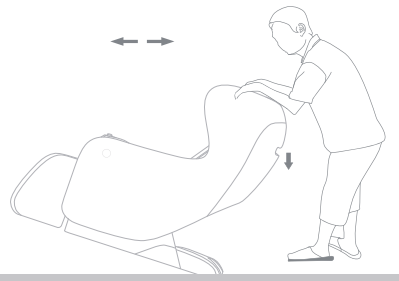

1. Như hình bên trái : Dùng hai tay ấn nhẹ vào tựa lưng sau ghế để ghế nghiêng về phía sau. Góc 30 độ

2. Ghế sẽ có bánh xe phía sau để di chuyển linh hoạt hơn và di chuyển một cách cẩn thận đặt máy xuống nhẹ nhàng




**LƯU Ý**

- Chú ý : Người đang nằm trên ghế massage không được phép di chuyển ghế.
- Nếu sàn nhà có thể bị hỏng khi ghế massage di chuyển, nên đặt một miếng đệm bên dưới sản phẩm
- Để tránh bị ngã, vui lòng giữ thật chắc ghế khi đang di chuyển.
- Khi di chuyển ghế massage, hãy chú ý đến phần bấp chân để tránh bị chấn thương

Bật công tắc cầu chì

Cầu chì


Vị trí cắm phích

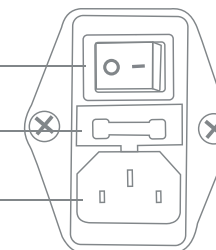



Vùng chức năng điều khiển: ( Điều khiển tay )





Mô tả chức năng các nút


 **ON/OFF (Nút nguồn)**  
 Nhấn và giữ nút trong 1,5 giây để tắt/mở  
 Nhấn nút này để bắt đầu sẽ chuyển đổi chương trình massage tự động. Nhấn 1 lần nữa sẽ chuyển sang bài auto massage khác.  
 Có 4 bài massage Auto :  
 - Chăm sóc sức khỏe như tổng thống.  
 - Chế độ massage sức khỏe giảm béo cho nữ hoàng.  
 - Chế độ giấc ngủ bình yên ( thư giãn )  
 - Chế độ massage cải thiện vai ( massage phần vai )  
 Nếu chúng ta xoay nút vận ngược kim đồng hồ phần lưng sẽ ngả lên, còn theo đúng kim đồng hồ phần lưng hạ xuống.


 Nút di chuyển lên xuống, sẽ chuyển động massage khi bấm vào chế độ massage điểm cố định đang hoạt động hãy nhấn và giữ nút điều khiển để vị trí chạy lên khu vực massage


 Phím điều chỉnh cường độ massage : Có thể điều chỉnh theo sở thích cá nhân, có 3 mức điều chỉnh

 **ZERO** Nhấn nút này điều chỉnh vào chế độ massage không trọng lực

 Nhấn nút này điều chỉnh cường độ túi khí theo sở thích cá nhân, có 3 mức độ : Mạnh - vừa - nhẹ .

 Nhấn nút này là chế độ massage thủ công bao gồm: Nhào - Đấm - bóp - Shiatsu. Có 4 bài massage thủ công cho mình để lựa chọn.

 Massage điểm : Nhấn và nút này toàn bộ chế độ massage sẽ được thay đổi Massage cố định - massage từng phần - massage toàn thân.

 Nhiệt hồng ngoại ( bật hoặc tắt )



Thank you very much for buying this product which  
has been strictly tested and verified to be safe and reliable.

*Buheung*



**NGUON SONG VIET IMEX TRADING CO., LTD**

**Ho Chi Minh:** 235-237 9A Str., Trung Son, Binh Hung Commune, Binh Chanh Dist, HCMC, Vietnam

**Guarantee: 028 7106 5858.**

**Ha Noi:** 2, Lane 382, Pham Van Dong, Co Nhue 2 ward, Bac Tu Liem district, Ha Noi, Vietnam


**Guarantee: 024 37 855 966. HOTLINE: 1800 6977**

[www.buheung.vn](http://www.buheung.vn)

**PRODUCT MANUAL  
MK-5400 BLUE ANGEL MASSAGE CHAIR**

*Please read the Manual carefully before installing and using the product*

(1) Open the packing box and take out the accessories.

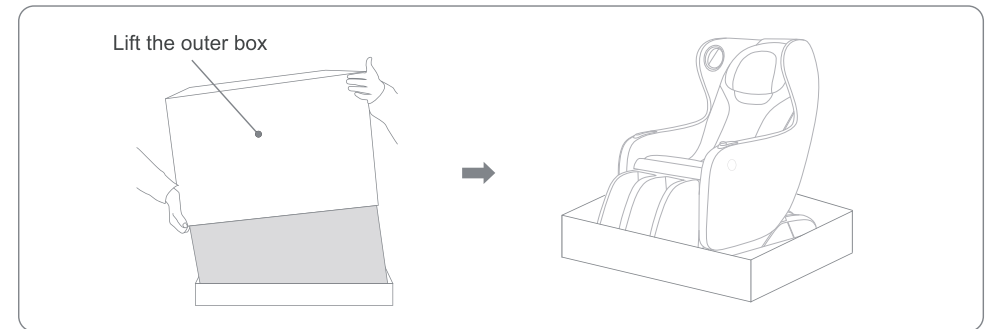

1. Remove the foreign packaging and sealing tape of the main body of the massage chair, lift up the outer box and remove it.
2. Take out the accessories and set aside for later use.

(2) Place the massage chair

\*Lift the entire massage chair out of the floor box and place it in a suitable place in the home.



\*Do not place it in direct sunlight or where there are heating appliances, etc. Otherwise, the leather will become discolored or hardened.



\*In order to prevent damage to the floor and reduce noise, please place cloth and other things under the massage chair.

\*Please make sure that there are no obstacles in front of and behind the massage chair (more than 25cm of space should be reserved behind the chair).

\*Do not place it in a damp place or uneven place.

\*In order to prevent signal interference. Please stay away from TV, radio and other equipment more than 1 meter.

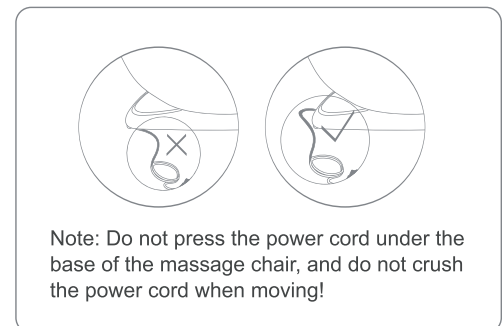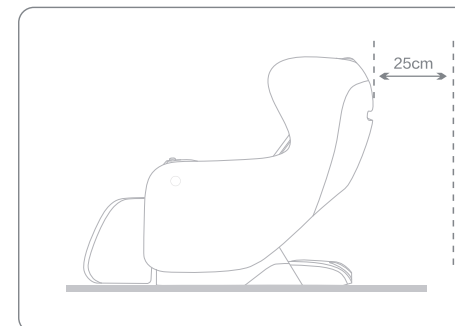

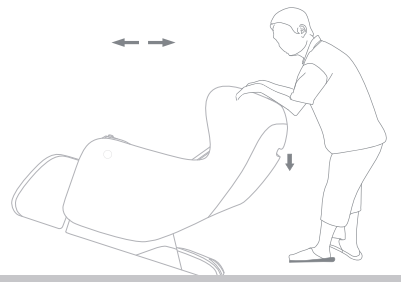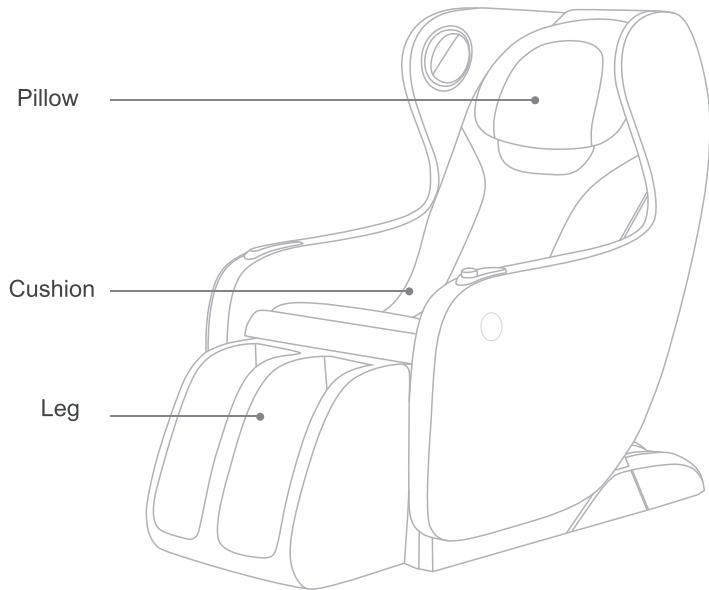

Mobile massage chair



- 1、 As shown in the picture on the left, first press the backrest with both hands, and tilt the chair back about 30°.
- 2、 Use the casters to carefully push the massage chair forward or backward until it is put down in a suitable position.



warning

- \*When someone is lying on the massage chair, do not move the massage chair.
- \* In order to avoid falling, please firmly support the massage chair when moving it.
- \* To avoid falling off, hold the massage chair firmly while moving it.
- \* When moving the massage chair, the lower leg must be fully retracted, otherwise it may lead to injury.

The back of the massage chair body

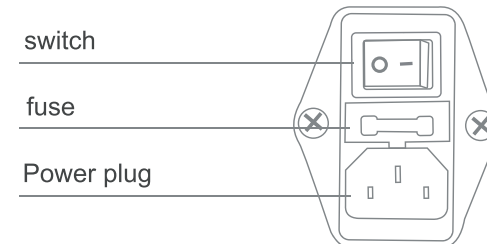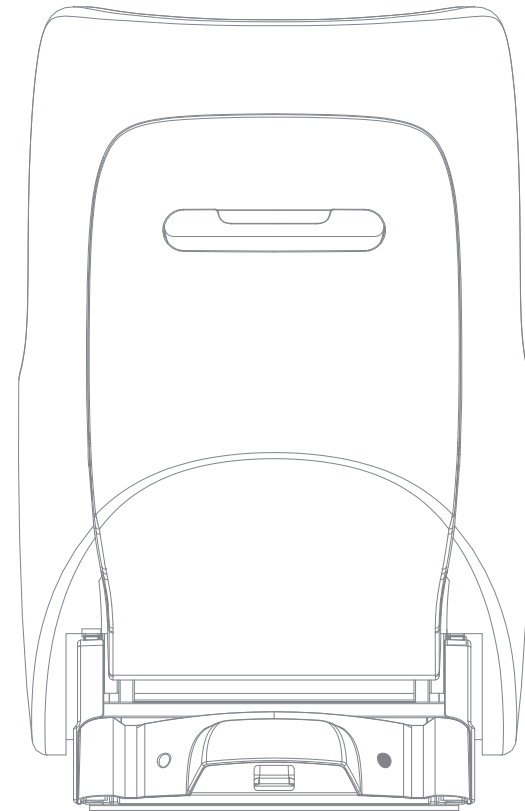

Manual Controller function partition: (Manual Controller Front)



Button function description

ON/OFF



Long press this button for 1.5s to turn on/off.  
 Short press this button to start/switch the automatic massage program, which will cycle through the 4 automatic programs of Boss, Lady, Shoulder and Sleep.  
 Rotate counterclockwise to raise the backrest, and rotate clockwise to lower the backrest.



Message movement up key: When fixed-point/partial massage is in operation, press and hold this key to adjust the up position of the massage movement.  
 Message movement down key: When fixed-point/partial massage is in operation, press and hold this key to adjust the down position of the massage movement.



The message intensity adjustment key can adjust the massage intensity according to personal preference, with 3 levels adjustable.



Press this key to enter the zero gravity state. If the current position is already zero gravity, press this key to return the massage chair to the reset position.



Airbag switch and strength adjustment button, built-in automatic air pressure massage mode, adjust the strength of the airbag according to personal preference, the default mid-range, click this button to cycle in order of medium, strong, off, and weak.



The manual massage mode key has 4 manual massage modes to choose from: kneading, percussion, kneading hammer, and acupressure.



Default full body massage, short press to switch "fixed point massage, partial massage, full body massage", and cycle in turn.




Heating on and off.



warning

- \* When the leg kneading assembly is raised, please do not sit in the massage chair. The pressure was tested on the kneading leg assembly in an instant, resulting in damage to the machine.
- \* There is also an accident caused by the chair overturning and causing injury.
- \* Before sitting in the massage chair, please make sure that the back of the chair is upright, and then adjust the reclining angle according to your preferences.
- \* Do not put your hands or foreign objects in the gap between the seat and the back of the chair, or between the seat and the leg-kneading assembly to prevent accidental injuries.
- \* When adjusting the angle, please make sure that there are no obstacles and small animals behind the back of the chair or under and in front of the kneading leg assembly.

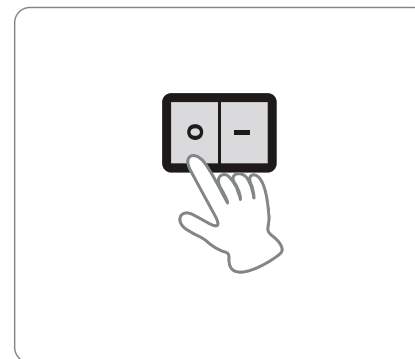

The switch is on the back cover of the electric control box

- ① \* Press the power button of the hand control on the armrest of the massage chair to stop all actions.
- ② \* If it is not used for a long time, please be sure to turn the power of the massage chair to the "O" position to extend the service life of the massage chair.
- ③ \* Unplug the power plug.
  - \* Do not twist or twist the power cord to prevent the power cord from breaking.

---

## How to use Bluetooth

- \* The Bluetooth is turned on by default when it is turned on, and the Bluetooth name is: MK-5400
- \* When the mobile phone's Bluetooth is turned on, find the corresponding Bluetooth connection to play music.

Item Name	Specification description
Product Name	MK-5400 Leisure Massage Chair
Model	MK-5400
Rated Voltage	220V~
Rated Frequency	50/60Hz
Rated Power	55W
Packing Size	1040mm(Length)x660mm(Width)x1040mm(Height)
Weight	Net weight: 50kg Gross weight: 59kg
Safety Design	Class I
The default orking time	15 minutes




## warning

Please read all instructions before use

This massage chair must use a socket that matches the plug. Incorrect grounding can cause electric shock. Please do not modify the plugs and sockets without authorization, and be sure to entrust professional technicians to inspect them. When using electrical products, in order to check the risk of electric shock, burns, fire, or personal injury, basic safety precautions should be followed, including the following:

- Be sure to use an outlet that matches the plug.
- Make sure that the plug is fully inserted into the socket to reduce the risk of short circuit or fire.
- After use or before cleaning, be sure to unplug the plug in time.
- Do not use this product at high temperatures.
- Do not store or use this product outdoors or in direct sunlight.
- If there is a sudden power failure during use, please set the switch to the "0" position immediately, and unplug the plug to avoid damage to the product when a call comes in.
- Do not operate the massage chair if the cord is wet or damaged.
- Do not insert or unplug the plug with wet hands to avoid accidents.
- When a child, handicapped, or handicapped person is near or using a massage chair, someone must be present to look after him.
- Only use this product for the purposes described in this manual.
- Do not use accessories not provided by Momoda.
- Do not stand, sit or jump on the calf rest. So as not to cause damage.
- Please do not try to sit on the armrest or backrest, so as not to tip the massage chair over and cause an accident.
- Do not go to sleep during the massage.
- Please keep the massage chair clean and avoid inserting other objects into the gaps of the massage chair
- Do not move the massage chair directly by pulling the power cord.
- Before each use, check whether there are abnormal cracks in the flannelette of the backrest of the massage chair.
- This product is designed for home use only.
- When you are not sure whether you can use the massage chair, please consult your doctor.
- In order to avoid discomfort or injury caused by using this massage chair, the following people should consult a physician before using this product; Those receiving treatment, those with back disease, those with abnormal or distorted cervical spine.
- If you feel pain during use, please stop using it immediately. If it is damaged during use, please seek medical attention immediately.
- Do not massage red, swollen or inflamed skin.
- This product only provides comfortable massage enjoyment for the family. It is not a professional massage medical device, so it cannot replace professional treatment.
- It is recommended to use the massage chair for 30 minutes a day, and massage the same part should not exceed 15 minutes, otherwise excessive massage will result in counterproductive effects, and long-term use will cause the massage chair to overheat and shorten the service life of the product.
- Do not use this product in an environment where gas or oxygen is injected.
- This product is not suitable for children under 12 years of age.

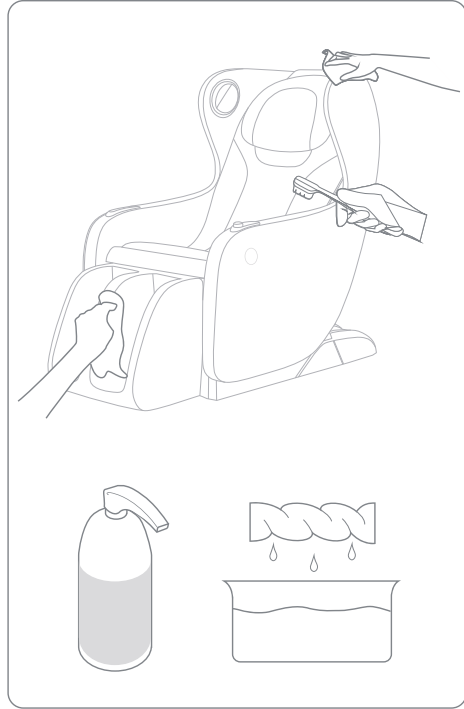

**clean**

Do not use steel wool, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.


- ❶ Unplug the plug from the power socket.
- ❷ Clean the massage chair, remote control and power cord with a dry cloth.
- ❸ Do not use a damp cloth or detergent.

**Store**

- ❶ Unplug the plug from the power socket.
- ❷ Store this product in a cool and dry place away from sunlight.
- ❸ Do not place heavy objects on the product.

If the leather case is damaged or mechanical failure, please stop using this product and inquire from the authorized after-sales service center or customer service center in your country (region).

If you do not use it for a long time, please unplug the power cord!

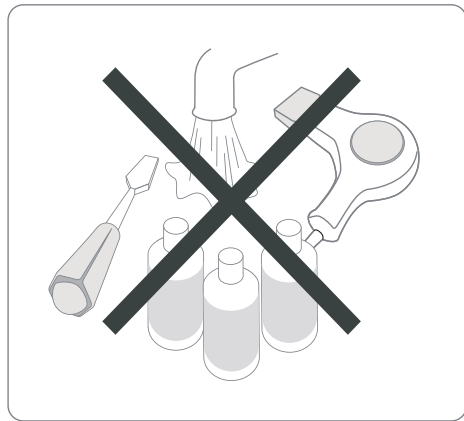

- Those who are not allowed to use this product: those who are physically, emotionally, or mentally defective, or who lack experience and knowledge. Unless they are supervised or instructed by the person responsible for their safety regarding the use of the product.
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department.
- The surface of the appliance heats up, so people who are not sensitive to heat must pay attention to it.
- Do not use this machine under a voltage that does not meet the standards of this machine.
- This product must use a grounded three-core power socket, and there should be a reliable and good grounding device.
- Damaged leather or cloth covers should be replaced in time. Do not use this machine to avoid personal injury.
- Do not allow water or moisture to enter the hand controller to avoid control failure.

Possible situation	Approach
The sound made during operation	The sound produced by the structural design will not affect the machine.
The power is plugged in, but the massage chair cannot be operated.	Check if the power head is plugged in or is powered on. Check whether the power switch of the massage chair is in the "I" position. Check whether the power cord is damaged. Check that the fuse is damaged and replace the fuse.
The backrest cannot be raised and lowered freely.	Check whether there are foreign objects stuck in the backrest and lower legs. Check whether the connecting wire is loose.
During use, the controller can be operated, but the massage chair cannot be operated.	After a long period of operation, if the temperature of the machine is too high, the massage chair will be automatically in the temperature protection state, please turn off the power and use it for 30 to 50 minutes to let the internal heat dissipation of the machine.
During use, the controller cannot be operated, and the massage chair also stops operating	After the automatic timing function is activated. If the set time is up, please press the button again to control it.


If an abnormal situation occurs, in order to prevent accidents, please stop using it and unplug the power cord.

If the following solutions are still invalid, please contact the after-sales service center.



## LƯU Ý

- Khi đang hoạt động máy massage, phần chân được nâng lên vui lòng không được ngồi vào phần chân. Áp lực vào máy sẽ gây ảnh hưởng và hư hỏng máy.
- Cũng có vụ tai nạn lật ghế và gây thương tích.
- Trước khi ngồi vào ghế massage, quý khách vui lòng đảm bảo lưng tựa vào ghế đúng tư thế sau đó điều chỉnh góc độ ngả lưng theo sở thích.
- Không đặt tay hay bất cứ vật thể lạ ở khoảng trống giữa ghế và lưng ghế hoặc phần chân tránh vô tình xảy ra.
- Khi điều chỉnh góc xong, người sử dụng hãy đảm bảo không có chướng ngại vật và các con vật nhỏ sau lưng ghế hoặc dưới phần chân.

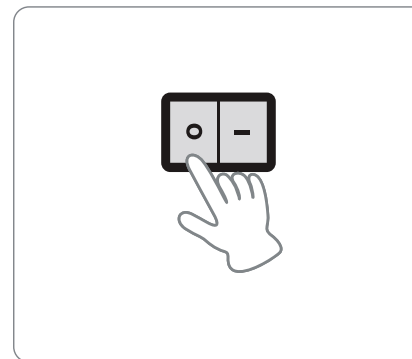

Công tắt nằm ở nằm sau của  
hộp điều khiển điện

- ➊ Nhấn nút nguồn của bảng điều khiển trên tay vịn của ghế massage để dừng mọi thao tác.
- ➋ Nếu không sử dụng trong thời gian dài, hãy nhớ tắt công tắc của ghế về vị trí "0" để kéo dài tuổi thọ của ghế.
- ➌ Rút phích cắm ra khỏi nguồn. Và xoắn dây nguồn để tránh dây nguồn bị đứt.

## CÁCH SỬ DỤNG BLUETOOTH

- BLUETOOTH được bật theo mặc định của máy. Tên Bluetooth: MK-5400
- Tôi có thể phát nhạc khi bật Bluetooth.


TÊN	THÔNG SỐ
Tên sản phẩm	Ghế massage thư giãn MK-5400
Model	MK-5400
Điện áp	220V~
Tỷ lệ	50/60Hz
Công suất	55W
Kích thước máy	1040mm(chiều dài)x660mm(chiều rộng)x1040mm(chiều cao)
Trọng lượng	50kg – Tổng khối lượng : 59kg
Thiết kế an toàn	Sử dụng trong gia đình
Thời gian hoạt động	15 phút



**LƯU Ý**

Vui lòng đọc tất cả các hướng dẫn trước khi sử dụng ghế massage này phải phù hợp sử dụng ổ cắm phù hợp với phích cắm. Ổ điện nối đất không đúng cách có thể gây ra điện giật. Vui lòng không sửa đổi dây nguồn và ổ cắm khi chưa được phép và nhờ giao cho các kỹ thuật viên chuyên nghiệp kiểm tra chúng. Khi sử dụng các sản phẩm điện để kiểm tra nguy cơ điện giật, gây thương tích cá nhân, hỏa hoạn v.v.. Cần tuân theo những biện pháp phòng ngừa an toàn cơ bản, bao gồm những điều sau :

- Đảm bảo sử dụng ổ cắm phù hợp với phích cắm điện.
- Đảm bảo rằng phích cắm đã được cắm vào ổ khi sử dụng.
- Sau khi sử dụng hoặc trước khi vệ sinh máy, nhớ rút phích cắm kịp thời.
- Không sử dụng sản phẩm ở nhiệt độ cao.
- Không bảo quản hoặc sử dụng sản phẩm ở ngoài trời có ánh nắng trực tiếp.
- Nếu trong quá trình sử dụng bị mất điện đột ngột vui lòng bật ngay công tắc vì vị trí "0" và rút phích cắm để tránh hỏng sản phẩm khi có điện.
- Không hoạt động ghế massage nếu dây điện bị hỏng, ướt.
- Không cắm hoặc rút phích cắm khi tay đang ướt để tránh tai nạn
- Khi trẻ em, người khuyết tật ở gần ghế massage hoặc khi sử dụng ghế massage phải có người giám sát và chăm sóc.
- Chỉ sử dụng sản phẩm này cho các mục đích được hướng dẫn trong sách.
- Không được phép sử dụng các phụ kiện mà không phải thương hiệu ghế massage cung cấp
- Không đứng, ngồi hoặc nhảy lên phần còn lại của bắp chân để tránh chấn thương.
- Không được phép ngồi trên tay vịn của ghế hoặc tựa lưng vào ghế tránh làm ngã ghế gây tai nạn.
- Không ngủ trong khi massage
- Hãy giữ cho ghế luôn sạch sẽ và tránh những côn trùng chui vào gầm điện bên dưới ghế.
- Không di chuyển ghế bằng cách kéo dây điện.
- Trước khi sử dụng, vui lòng kiểm tra ghế massage có vấn đề hay không như : vết nứt...Nếu có bất thường vui lòng không sử dụng và liên hệ với trung tâm dịch vụ bán hàng của nhà cung cấp kịp thời.
- Sản phẩm được thiết kế sử dụng trong gia đình
- Khi bạn không chắc mình có thể sử dụng ghế massage hay không hãy hỏi ý kiến Bác Sĩ trước khi sử dụng.
- Để tránh khó chịu hoặc tổn thương do sử dụng ghế massage này, những người sau đây nên hỏi ý kiến Bác Sĩ : Những người có bệnh lý nền nghiêm trọng, những người yếu tim, phụ nữ có thai hoặc thời kỳ kinh nguyệt những người cần đào tạo những người có một mức độ bệnh về lưng.
- Không xoa bóp vào những vùng da đang bị sung hoặc viêm. Sản phẩm này chỉ mang lại cảm giác thoải mái khi massage cho gia đình, không phải là thiết bị y tế chuyên nghiệp nên không thay thế điều trị.
- Nên sử dụng ghế massage 30p mỗi ngày, massage cùng một vùng không nên dùng quá 15p, nếu không massage quá nhiều sẽ phản tác dụng, sử dụng lâu dài sẽ khiến bị lãn massage quá nóng và làm giảm tuổi thọ của sản phẩm.
- Không sử dụng sản phẩm này trong môi trường có oxy được bơm vào
- Sản phẩm này không phù hợp với trẻ 12 tuổi.

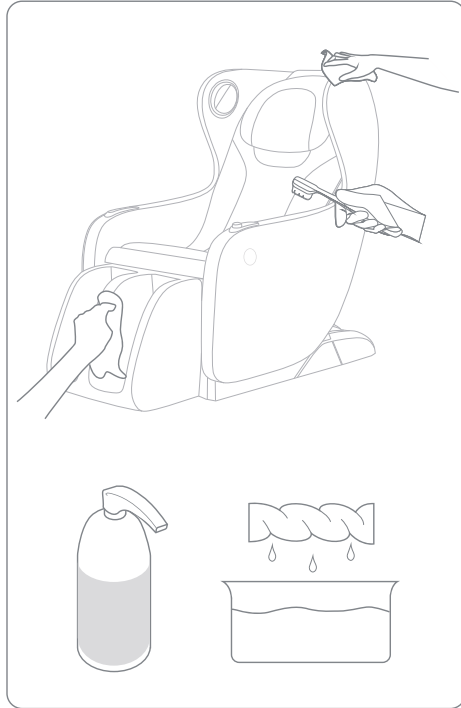

**VỆ SINH**

Không được sử dụng các chất tẩy rửa để vệ sinh sản phẩm.


- ❶ Rút phích cắm ra khỏi ổ điện
- ❷ Lau sạch ghế massage bằng vải khô
- ❸ Không sử dụng khăn ẩm hoặc chất tẩy rửa

**BẢO QUẢN**

- ❶ Rút phích cắm ra khỏi ổ điện
- ❷ Không được đặt sản phẩm ở nơi có ánh nắng trực tiếp
- ❸ Không đặt các vật nặng lên sản phẩm

Nếu da bị hồng hay máy móc có trục trặc vui lòng ngưng sử dụng sản phẩm này liên hệ ngay trung tâm dịch vụ khách hàng ở miền Nam (khu vực) của bạn thông qua tìm kiếm

Nếu không sử dụng trong thời gian dài, vui lòng rút dây nguồn ra!

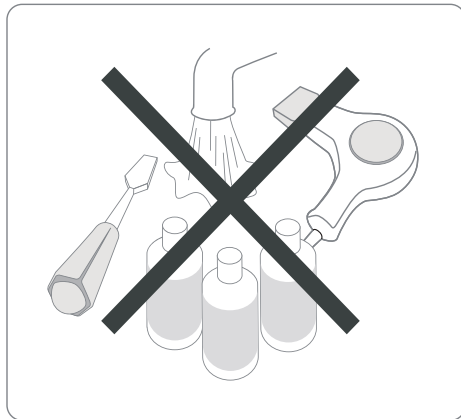

- Những đối tượng không được phép sử dụng ghế massage : Những người bị khuyết tật hoặc những người thiếu kinh nghiệm sử dụng sản phẩm ( trừ khi họ được giám sát ). Hoặc được người hướng dẫn sử dụng sản phẩm, họ chịu trách nhiệm về sản phẩm.
- Trẻ em đảm bảo rằng luôn có người giám sát để tránh trẻ bị thương hoặc nghịch ghế massage
- Nếu dây nguồn bị hỏng bắt buộc phải dây nguồn khác hoặc dây nguồn tương tự mua tại trung tâm nơi bán.
- Bề mặt nhiệt sẽ nóng lên, người bị nhạy cảm với nhiệt hạn chế sử dụng sản phẩm
- Không sử dụng sản phẩm dưới điện áp không đúng của thiết bị cho phép.
- Sản phẩm này được sử dụng 3 lõi được nối đất phải có thiết bị điện tiếp đất an toàn.
- Phần da mà bị hồng phải thay thế kịp thời ( liên hệ với nơi bán )
- Không để nước xâm nhập vào bộ điều khiển

**TRƯỜNG HỢP XẢY RA**

**HƯỚNG GIẢI QUYẾT**

Âm thanh bị ồn khi đang hoạt động

Đây là âm thanh do máy thiết kế có sẵn ( không bị ảnh hưởng đến máy )

Đã cắm điện nhưng ghế massage không hoạt động

Kiểm tra lại xem nguồn dây điện đã được cắm vào ổ điện chữ T chưa, xem lại dây nguồn có bị hỏng hay không. Cầu chì có bị hỏng hay không nếu hỏng cần thay thế ngay.

Phần lưng không thể di chuyển xuống được

Kiểm tra lại xem phía sau máy có vật mắc kẹt ở phần chân hay lưng không. Kiểm tra xem dây nguồn có kết nối hay không.

Trong quá trình sử dụng, có thể vận hành bộ điều khiển nhưng không vận hành ghế

Sau một thời gian dài hoạt động, nếu nhiệt độ máy quá cao ghế massage sẽ tự động ở trạng thái bảo vệ nhiệt độ. Vui lòng tắt nguồn và sử dụng sau 30p đến 50p để giải nhiệt cho máy.

Trong quá trình sử dụng : Bảng điều khiển và ghế massage không hoạt động

Sau khi ghế chạy chương trình đã được cài đặt sẵn, nếu hết thời gian vui lòng bấm trên nút điều khiển.

Nếu có trường hợp xảy ra để tránh tai nạn, vui lòng không sử dụng và rút phích cắm điện ra và liên hệ ngay trung tâm chúng tôi để kịp thời xử lý.



