



HAWONKOO

옛지있는 안국 생활 가전



HAWONKOO

옛지있는 안국 생활 가전

풍성하고
즐거워
좋은가위

모두가 풍요롭고 즐거운 명절 연휴를 맞이하시기를
진심으로 기원합니다

Woki

오렌지

과즙 짜는기구

OJH-120-GR





HAWONKOO
옛지있는 안국 생활 가전

Description	3
Safety advice and caution	3
Electric safety	4
Use and care	4
Instructions for use	5
Cleaning	6

Instruction Manual
Orange Juicer
MODEL: OJH-120-GR





Dear customer,

Many thanks for choosing to purchase our product.

Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Description

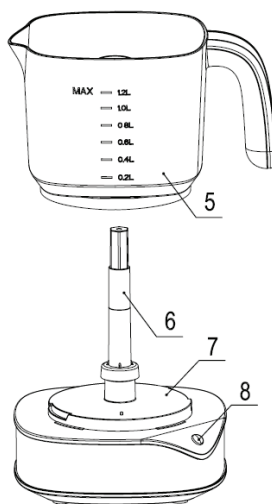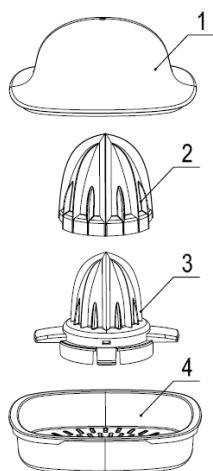

1. Protective cover
2. Orange cone
3. lemon cone
4. Filter
5. Jug
6. Transmission shaft
7. Motor base
8. Lamp

Safety advice and caution

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.
- Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section before use.

Electric safety

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not use or store the appliance outdoors.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Do not force the electrical connection wire. Never use the electric wire to lift up, carry or unplug the appliance.
- Ensure that the electric cable does not get trapped or tangled.
- Check the state of the electric cable. Damaged or knotted cables increase the risk of electric shock.
- Do not touch the plug with wet hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Use and care

- 1) Fully unroll the appliance's power cable before each use.
- 2) Do not turn the appliance over while it is in use or connected to the mains.

Use and care

- 3) Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
- 4) This appliance is for household use only, not professional or industrial use.
- 5) This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- 6) This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
- 7) This appliance should be stored out of reach of children and/or the disabled.
- 8) Do not store the appliance in a vertical position.
- 9) Store the appliance in a dry place, free from dust and out of direct sunlight.
- 10) Never leave the appliance unattended while in use.
- 11) Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

- 1) Unroll the cord completely before plugging in.
- 2) Connect the appliance to the mains.
- 3) Cut the citrus fruit/s to be squeezed in half.
- 4) Turn on the appliance by pushing down on the piece of citrus fruit, once it has been placed on the juicing cone.
- 5) To stop the appliance, simply stop applying pressure to the cone.
- 6) Remove both the cone and the filter to empty the jug.
- 7) Pour juice out of the jug and into glasses to serve directly.

Instructions for use

- 8) If you process a large quantity of fruit, you must periodically clean the filter and remove the remains of the pulp.
- 9) The appliances are operated for 15s, during which two halves of fruit are squeezed. The operation is carried out 10 times with rest periods of 15s

Cleaning

- Unplug the appliance from the mains and let it cool before starting any cleaning.
- Except for the power unit and the mains connection, all the parts can be cleaned with detergent and water or in washing up liquid. Rinse thoroughly to remove all traces of detergent.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- It is advisable to clean the appliance regularly and remove any food remains.
- The following parts can be cleaned in the dishwasher: Protective cover, Cone, Filter, Jug



HAWONKOO

옛지있는 안국 생활 가전

Cấu trúc sản phẩm	3
Lời khuyên và cảnh báo an toàn	3
An toàn điện	4
Hướng dẫn sử dụng và bảo trì	5
Hướng dẫn sử dụng	6
Hướng dẫn vệ sinh	7

SÁCH HƯỚNG DẪN SỬ DỤNG



MÁY VẮT CAM

MODEL: OJH-120-GR



Cảm ơn quý khách hàng đã tin dùng sản phẩm của chúng tôi.

Nhờ công nghệ và thiết kế hiện đại và sự hoạt động trơn tru của thiết bị đã vượt qua cả những tiêu chuẩn khắt khe nhất sẽ đem lại sự hài lòng tuyệt đối và độ bền cao cho người sử dụng.

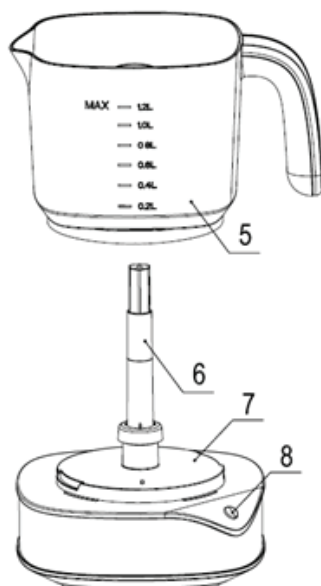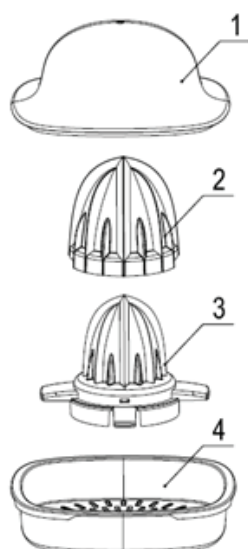Cấu trúc sản phẩm

1. Nắp bảo vệ
2. Đầu vắt cam
3. Đầu vắt chanh
4. Lưới lọc
5. Bình chứa
6. Trục xoay
7. Mô tơ
8. Đèn báo

Lời khuyên và cảnh báo an toàn

- Đọc kỹ hướng dẫn sử dụng trước khi dùng và giữ lại sách hướng dẫn sử dụng cho lần tham khảo tiếp theo. Không tuân thủ các hướng dẫn có thể dẫn đến sự cố không mong muốn.
- Làm sạch các linh kiện của sản phẩm tiếp xúc trực tiếp với thực phẩm như phần hướng dẫn vệ sinh sản phẩm trước khi dùng.

An toàn điện

- Không sử dụng sản phẩm khi dây nguồn, phích cắm bị hỏng.
- Đảm bảo điện áp sử dụng phù hợp với điện áp của sản phẩm như khuyến cáo trên tem.
- Phích cắm của thiết bị phải vừa khít với ổ cắm điện. Không thay đổi phích cắm. Không sử dụng bộ chuyển đổi phích cắm.
- Không đặt, để sản phẩm ngoài trời.
- Không sử dụng sản phẩm khi sản phẩm bị rơi, va đập vào sàn nhà nếu có dấu hiệu bị hư hỏng hoặc rò rỉ.
- Không buộc dây nguồn của sản phẩm. Không cầm nắm dây nguồn để nhấc, di chuyển, hoặc rút phích cắm điện.
- Đảm bảo dây nguồn không bị vướng hoặc rối.
- Kiểm tra tình trạng của dây nguồn. Dây nguồn bị hỏng hoặc bị thắt nút sẽ tăng nguy cơ điện giật.
- Không chạm vào dây nguồn khi tay ướt.
- Sản phẩm này không khuyến cáo sử dụng bởi người (bao gồm trẻ em) bị suy giảm thể chất, giác quan và tinh thần, hoặc thiếu kinh nghiệm. Trừ phi họ được giám sát và hướng dẫn về cách sử dụng thiết bị bởi những người chịu trách nhiệm an toàn.
- Trẻ em cần được giám sát để đảm bảo không chơi gần thiết bị.
- Nếu dây nguồn bị hỏng, cần được thay thế bởi chính hãng, hoặc các trung tâm bảo hành ủy quyền của hãng.

Hướng dẫn sử dụng và bảo trì

- 1) Tháo bỏ hoàn toàn dây buộc dây nguồn của thiết bị trước khi sử dụng.
- 2) Không lật ngược thiết bị khi đang sử dụng hoặc được kết nối nguồn điện.
- 3) Ngắt kết nối điện của sản phẩm nếu không sử dụng hoặc trước khi vệ sinh.
- 4) Sản phẩm chỉ phù hợp sử dụng cho hộ gia đình, không phù hợp để sử dụng cho nhà hàng.
- 5) Sản phẩm này không phải đồ chơi. Trẻ em cần được giám sát để không chơi cùng thiết bị.
- 6) Sản phẩm này chỉ nên sử dụng bởi người đã trưởng thành. Đảm bảo sản phẩm này không được sử dụng bởi những người khuyết tật, trẻ em hoặc những người không thao tác được với sản phẩm.
- 7) Sản phẩm nên được để xa tầm tay của trẻ nhỏ.
- 8) Không cất giữ thiết bị ở vị trí thẳng đứng.
- 9) Cất giữ sản phẩm ở nơi khô ráo, thoáng mát, không bụi và tránh xa ánh sáng mặt trời.
- 10) Không để sản phẩm vận hành mà không có sự giám sát.
- 11) Nhà sản xuất sẽ không đảm bảo trách nhiệm pháp lý với bất kỳ việc sử dụng sai hoặc không tuân thủ sách hướng dẫn sử dụng.

Xử lý sự cố

- 1) Tháo bỏ hoàn toàn dây buộc dây nguồn của thiết bị trước khi sử dụng.
- 2) Kết nối thiết bị với nguồn điện.
- 3) Cắt trái cây có múi thành 2 nửa.
- 4) Khởi động thiết bị bằng cách nhấn miếng trái cây đã cắt lên trên đầu vắt.
- 5) Để kết thúc quá trình, chỉ cần ngừng nhấn miếng trái cây vào đầu vắt.
- 6) Nhấc đầu vắt và lưới lọc khỏi thiết bị để lấy được bình chứa nước trái cây đã vắt.
- 7) Rót nước trái cây vào bình đựng hoặc cốc để dùng trực tiếp.
- 8) Nếu bạn dùng thiết bị để vắt 1 lượng lớn trái cây, bạn cần làm sạch lưới lọc và loại bỏ phần bã còn lại thường xuyên.

****Lưu ý: Thiết bị nên hoạt động trong khoảng 15 giây trong quá trình nhấn trái cây vào đầu vắt. Tần suất hoạt động là 10 lần với thời gian nghỉ khoảng 15 giây.***

Hướng dẫn vệ sinh

- Rút phích cắm điện khỏi nguồn điện, để thiết bị nguội trước khi bắt đầu vệ sinh.
- Ngoại trừ bộ nguồn và kết nối nguồn điện, tất cả các bộ phận khác đều có thể làm sạch bằng chất tẩy rửa thông thường và nước. Xả kỹ bằng nước sạch để loại bỏ các chất tẩy rửa còn bám lại.
- Làm sạch thiết bị bằng khăn ẩm cùng vài giọt nước rửa sau đó lau khô.
- Không sử dụng dung môi hoặc các sản phẩm chứa pH axit hoặc kiềm như chất tẩy trắng, hoặc các sản phẩm mài mòn để làm sạch thiết bị.
- Không nhúng thiết bị vào nước hoặc bất kỳ dung dịch chất lỏng nào, hoặc đặt thiết bị dưới vòi nước chảy trực tiếp.
- Nên vệ sinh thiết bị thường xuyên để loại bỏ các bã trái cây còn sót lại.
- Các phần sau đây của thiết bị có thể vệ sinh trong máy rửa bát: nắp bảo vệ, các đầu ép, lưới lọc, bình chứa.