


Our company is certified with the ISO
9001 Quality Management System
Công ty chúng tôi đã đạt được chứng
nhận của Hệ thống quản lý chất lượng
ISO 9001

Joyoung

Operating Instructions Hướng dẫn sử dụng

Slow Cooker
Nồi nấu chậm
JSC-316

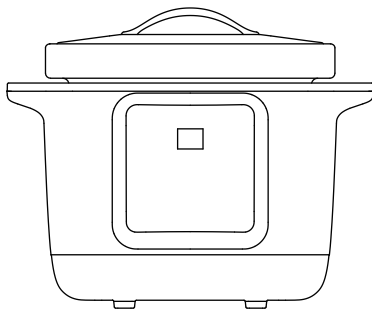

Lưu ý an toàn khi sử dụng

1. Vui lòng tuân thủ nghiêm ngặt các lưu ý an toàn khi sử dụng này để tránh gây nguy hiểm, thương tích cho bản thân và người khác.
2. Nếu bỏ qua các ký hiệu dưới đây, sử dụng sản phẩm sai cách, có thể dẫn đến thương tích hoặc thiệt hại về tài sản.
3. Dưới đây là ý nghĩa của các ký hiệu được sử dụng trong tài liệu này.

 Các thao tác bị cấm tuyệt đối

 Các thao tác bắt buộc phải tuân theo

 Các thao tác cần thường xuyên lưu ý

1. Vui lòng đặt sản phẩm xa tầm tay trẻ em. Không để trẻ tự ý sử dụng thiết bị nhằm tránh nguy cơ bị điện giật, bỏng hoặc gây ra thương tích khác.
2. Vui lòng không chèn các vật lạ như mặt kim loại, dây điện hoặc kim nhỏ vào bên trong hay các khe hở của sản phẩm, nếu không, có thể gây ra chập điện hoặc dẫn đến sản phẩm hoạt động bất thường
-  3. Khi vệ sinh, khi không sử dụng hoặc khi sản phẩm gặp sự cố, vui lòng rút phích cắm điện để tránh rò rỉ điện hoặc khởi động ngoài ý muốn.
4. Vui lòng không đặt sản phẩm này trực tiếp trên lửa hoặc gần bất kỳ nguồn nhiệt hay nguồn lửa nào, để tránh hư hỏng, trục trặc hoặc thậm chí là nguy hiểm.
5. Vui lòng không đặt sản phẩm này trên các bề mặt không ổn định, ẩm ướt, nhiệt độ cao, trơn trượt hoặc không chịu nhiệt (như khăn trải bàn nhựa, vải bông, thảm, v.v.), để tránh nguy cơ điện giật, cháy nổ, rơi đổ gây tai nạn hoặc thiệt hại tài sản.
-  6. Vui lòng sử dụng ổ cắm điện riêng có dòng điện định mức từ 10A trở lên và điện áp xoay chiều 220V, để tránh gây ra các sự cố như cháy nổ hoặc điện giật.
7. Vui lòng không cắm hoặc rút phích cắm bằng tay ướt để tránh bị điện giật. Khi rút phích cắm, phải nắm vào phần thân phích cắm, không được kéo dây nguồn vì có thể làm hỏng dây.
8. Nếu dây nguồn bị hỏng, để đảm bảo an toàn, cần được thay thế bởi nhà sản xuất, trung tâm bảo hành của hãng hoặc kỹ thuật viên chuyên nghiệp.
9. Trước khi sử dụng, vui lòng đảm bảo dây nguồn được cắm chặt vào ổ cắm. Nếu không, tiếp xúc kém có thể dẫn đến hư hỏng, chập điện hoặc cháy nổ.


10. Sản phẩm này chỉ dành cho mục đích sử dụng trong gia đình. Công ty sẽ không chịu trách nhiệm đối với bất kỳ tai nạn hoặc thương tích nào do sử dụng cho mục đích thương mại, sử dụng sai cách hoặc không tuân thủ hướng dẫn sử dụng này.
11. Sản phẩm này chỉ được sử dụng trong nhà, không sử dụng ở nơi ẩm ướt hoặc ngoài trời để tránh nguy cơ điện giật và hư hỏng do linh kiện xuống cấp.
12. Sản phẩm này không dành cho người bị suy giảm về thể chất, giác quan, trí tuệ hoặc thiếu kinh nghiệm và kiến thức sử dụng (bao gồm cả trẻ em), trừ khi có người giám sát chịu trách nhiệm về sự an toàn và hướng dẫn cụ thể khi sử dụng. Cần giám sát trẻ em trong suốt quá trình sử dụng để đảm bảo trẻ không chơi đùa với sản phẩm.
13. Khi sử dụng, vui lòng không đổ nước quá 80% dung tích lòng nồi để tránh nước sôi tràn ra gây bỏng. Vui lòng không chạm vào các bộ phận nhiệt độ cao như lỗ thoát hơi. Nếu cần mở nắp, nên sử dụng khăn hoặc găng tay cách nhiệt để tránh bị bỏng do nhiệt độ cao.
14. Khi sản phẩm gặp sự cố, vui lòng mang đến trung tâm bảo hành để sửa chữa. Tuyệt đối không tự ý tháo rời hoặc thay thế linh kiện, tránh nguy cơ cháy nổ, điện giật hoặc gây thương tích.
15. Sau khi mở bao bì, vui lòng vứt ngay túi ni lông vào thùng rác để tránh nguy cơ trẻ nhỏ chơi đùa dẫn đến ngạt thở.
16. Khi sử dụng lần đầu, có thể xuất hiện mùi lạ trong vài phút, đây là hiện tượng bình thường.
17. Vui lòng không vận hành sản phẩm khi không có thực phẩm trong nồi để tránh làm hỏng linh kiện.
18. Lòng nồi và nắp đều là hàng dễ vỡ. Hãy cẩn thận để tránh va phải vật cứng hoặc làm rơi rớt gây nứt vỡ.
19. Vui lòng không nấu lòng nồi trên lửa trần và tránh thay đổi nhiệt độ đột ngột. Chỉ vệ sinh lòng nồi sau khi đã nguội hoàn toàn để tránh hiện tượng nứt vỡ do co giãn nhiệt.
20. Vui lòng giữ bên trong thiết bị luôn sạch sẽ, không có vật lạ, đồng thời đảm bảo mặt ngoài của lòng nồi khô ráo. Lòng nồi cần được đặt đúng vị trí, lắp khớp nhẹ nhàng để tránh ảnh hưởng đến hiệu quả sử dụng.

21. Vui lòng không vận hành sản phẩm khi không có lòng nồi hoặc không có thức ăn trong lòng nồi để tránh hư hỏng linh kiện.
22. Vui lòng không để nước canh hoặc súp rơi vào bên trong thân máy để tránh chập mạch.
23. Vui lòng không nấu thức ăn trực tiếp trong nồi để tránh hư hỏng linh kiện.
24. Vui lòng chú ý thời gian nấu để tránh việc nấu quá lâu làm cạn nước. Nếu xảy ra tình trạng này, vui lòng ngắt điện ngay lập tức.
25. Khi không sử dụng trong thời gian dài, vui lòng vệ sinh sản phẩm sạch sẽ, lau khô rồi cất giữ.
26. Vui lòng không di chuyển sản phẩm trong quá trình vận hành.
27. Vui lòng không nhúng sản phẩm vào nước hoặc để nước bắn vào.

Lời nói đầu

Kính gửi Quý Khách hàng,


Joyoung xin chân thành cảm ơn Quý Khách hàng đã tin dùng sản phẩm Nồi nấu chậm của Joyoung. Toàn bộ nội dung trong tài liệu này chỉ nhằm mục đích tham khảo cho người dùng trong quá trình sử dụng và bảo trì sản phẩm. Hình ảnh cũng chỉ mang tính chất minh họa, vui lòng tham khảo sản phẩm thực tế. Nếu có bất kỳ vấn đề nào chưa được đề cập, xin vui lòng liên hệ với Bộ phận chăm sóc khách hàng để được hỗ trợ.

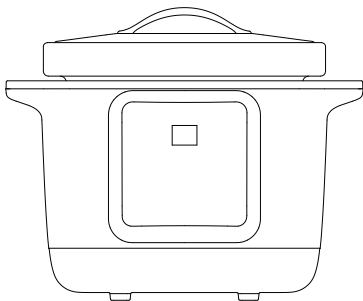

Hãy bắt đầu và tận hưởng hành trình nấu nướng của bạn!


Tên gọi và chức năng của các bộ phận

1 Tên gọi các bộ phận

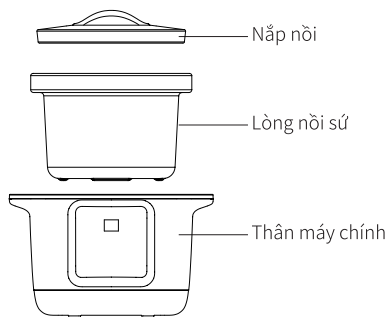

Lưu ý: Sản phẩm chỉ mang tính chất tham khảo, hình dáng cụ thể có thể khác so với thực tế.

2 Bảng điều khiển

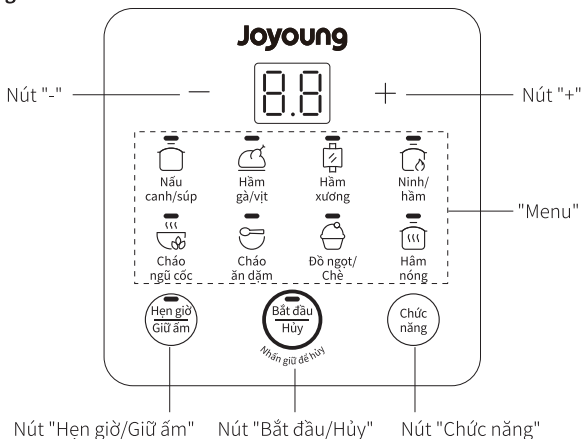

Cách sử dụng sản phẩm

① Nút chức năng

- Dùng để chọn các chức năng nấu ăn.
- Ở chế độ chờ, vui lòng nhấn nút "Chức năng" để chọn lần lượt các chức năng "Nấu canh/súp", "Hầm gà/vịt", "Hầm xương", "Ninh/hầm", "Cháo ngũ cốc", "Cháo ăn dặm", "Đồ ngọt/Chè", "Hâm nóng". Trong quá trình chọn, đèn báo chức năng tương ứng sẽ nhấp nháy, màn hình sẽ hiển thị thời gian nấu mặc định. Sau khi chọn chức năng mong muốn, nhấn nút "Bắt đầu/Hủy" để thiết bị bắt đầu hoạt động theo chức năng đã chọn. Để hủy chức năng, vui lòng nhấn giữ nút "Bắt đầu/Hủy" lần nữa.
- **Lưu ý:** Khi chọn chức năng, bạn có thể điều chỉnh thời gian nấu phù hợp tùy theo sở thích bằng cách nhấn nút "+" hoặc "-".

② Nút "+", Nút "-"

- Sau khi chọn chức năng, vui lòng nhấn nút "+" hoặc "-" để thiết lập thời gian hẹn giờ.
- Nhấn nhanh nút "+" hoặc "-" sẽ tăng hoặc giảm thời gian 6 phút. Nhấn giữ nút "+" hoặc "-" khoảng 1 giây để tăng hoặc giảm 6 phút/lần (đối với thời gian chọn dưới 1 giờ, mỗi lần tăng hoặc giảm sẽ là 5 phút).
- Sau khi đã thiết lập thời gian hẹn giờ, nhấn nút "Bắt đầu/Hủy" để bắt đầu hoạt động theo chức năng đã chọn. Thời gian nấu sẽ được hiển thị dưới dạng đếm ngược.

- Bảng thời gian nấu tương ứng với từng chức năng

Thời gian nấu và phạm vi điều chỉnh hẹn giờ cho từng chức năng					
Chức năng	Thời gian mặc định	Thời gian hẹn giờ mặc định	Thời gian hẹn giờ tối đa	Giữ ấm	Thời gian hẹn giờ
Nấu canh/súp	1.8	6.0	24H	12H	1.3-2.8
Hầm gà/vịt	2.0	6.0	24H	12H	1.5-3.0
Hầm xương	2.2	6.0	24H	12H	1.7-3.2
Ninh/hầm	3.0	6.0	24H	12H	2.5-4.0
Cháo ngũ cốc	1.8	6.0	24H	12H	1.3-2.8
Cháo ăn dặm	1.5	6.0	24H	12H	1.0-2.5
Đồ ngọt/Chè	2.5	6.0	24H	12H	2.0-3.5
Hâm nóng	45	6.0	24H	12H	30-1.5
Giữ ấm	12H (Đếm xuôi)				

Lưu ý:

1. Trong quá trình nấu, vui lòng chú ý lượng nước trong nồi để tránh tình trạng cạn nước gây cháy nồi. Sau khi nấu xong, thiết bị sẽ tự động chuyển sang chế độ giữ ấm.
2. Khi nấu cháo, tổng nguyên liệu không được vượt quá 80% dung tích lòng nồi để tránh trào. Tỷ lệ gạo:nước khuyến nghị là 1:8 để món cháo đạt độ nhuyễn ngon hơn. Đối với các loại đậu, nên ngâm trước từ 2-6 giờ.
3. Vào mùa hè hoặc khi nhiệt độ môi trường cao, nên giảm thời gian hẹn giờ để tránh thực phẩm bị hư hỏng.
4. Có thể điều chỉnh thời gian nấu phù hợp bằng nút "+" hoặc "-" tùy theo lượng nguyên liệu. Trong điều kiện thời tiết lạnh, nên tăng thời gian nấu bằng cách nhấn "+" để đảm bảo món ăn được nấu chín hoàn toàn.
5. Bảng tỷ lệ gạo và nước khuyến nghị khi nấu cháo đặc/cháo loãng

Lượng gạo \ Tỷ lệ	Cháo đặc 1: 10	Cháo loãng 1: 8	Cháo đặc/Cháo loãng 1: 6.5
0,5 cốc 70g	800mL	640mL	520mL
1 cốc 140g	1600mL	1280mL	1040mL

③ Hẹn Giờ

- Ở chế độ chờ, sau khi nhấn nút "Chức năng" để chọn chế độ nấu hoặc sau khi cài đặt thời gian nấu cho chức năng đó, bạn có thể nhấn nút "Hẹn giờ" để thiết lập thời gian bắt đầu nấu.
- Nhấn các nút "+" hoặc "-" để điều chỉnh thời gian hẹn giờ. Trong 10 giờ đầu, thời gian tăng/giảm sẽ là 6 phút. Sau 10 giờ, thời gian tăng/giảm sẽ là 1 giờ. Nếu nhấn giữ "+" hoặc "-" trong 2 giây, thời gian sẽ tăng/giảm liên tục theo quy tắc:
 - Dưới 10 giờ: Tăng/Giảm 6 phút mỗi lần nhấn
 - Trên 10 giờ: Tăng/Giảm 1 giờ mỗi lần nhấn
 - Dưới 1 giờ: Tăng/Giảm 5 phút mỗi lần nhấnThời gian hẹn giờ tối đa là 24 giờ.
- Sau khi đã cài đặt thời gian mong muốn, nhấn nút "Bắt đầu/Hủy" để thiết bị bắt đầu đếm ngược. Nếu có hẹn giờ, đèn báo hẹn giờ sẽ sáng.
- Khi thời gian đếm ngược còn lại nhỏ hơn hoặc bằng thời gian nấu đã cài đặt, đèn báo hẹn giờ sẽ tắt và thiết bị sẽ tự động chuyển sang chế độ nấu.

Lưu ý:

1. Thời gian hẹn giờ là thời điểm thiết bị hoàn tất quá trình nấu. Có thể hẹn trước tối đa 24 giờ.
2. Để cài đặt thời gian nấu, vui lòng tham khảo "Thời gian nấu và phạm vi điều chỉnh hẹn giờ cho từng chức năng".
3. Chức năng giữ ấm không thể sử dụng cùng với chức năng hẹn giờ.
4. Nếu thiết bị đang ở trong trạng thái hoạt động, giữ ấm, chờ hoặc đã bắt đầu hẹn giờ thì việc nhấn nút này sẽ không có tác dụng.

④ Giữ ấm


- Khi ở chế độ chờ, nhấn nút "Giữ ấm", đèn giữ ấm sẽ nhấp nháy. Sau đó nhấn nút "Bắt đầu/Hủy", thiết bị sẽ khởi động và chuyển sang chế độ giữ ấm ngay lập tức. Sau 12 giờ, chức năng giữ ấm sẽ tự động kết thúc.

- Sau khi chức năng nấu đã chọn kết thúc, thiết bị sẽ tự động chuyển sang chức năng giữ ấm, chức năng này sẽ tự động kết thúc sau 12 giờ.

⑤ Bắt đầu/Hủy

- Ở trạng thái chờ, nút này sẽ không có tác dụng. Sau khi chọn chức năng mong muốn, nhấn nút này để thiết bị bắt đầu hoạt động.
- Khi đang hoạt động, nhấn giữ nút này để hủy quá trình nấu và chuyển về trạng thái chờ.

Sơ đồ điện

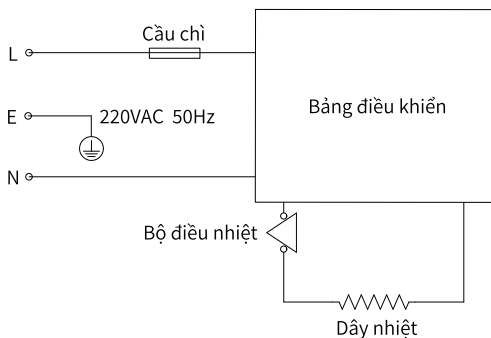

Phân tích và khắc phục sự cố

Mã lỗi	Nguyên nhân	Khắc phục sự cố
E3	Thiết bị sẽ phát cảnh báo khi điện áp nguồn vượt quá mức cho phép.	Thiết bị sẽ phát cảnh báo khi điện áp nguồn vượt quá $280V \pm 10V$. Sau khi điện áp giảm 10V so với mức cảnh báo, thiết bị sẽ tự động trở lại trạng thái bình thường.
E4	Thiết bị sẽ phát cảnh báo khi điện áp nguồn thấp hơn mức cho phép.	Thiết bị sẽ phát cảnh báo khi điện áp nguồn thấp hơn $150V \pm 10V$. Sau khi điện áp tăng 10V so với mức cảnh báo, thiết bị sẽ tự động trở lại trạng thái bình thường.

Vệ sinh và bảo dưỡng

- Sau khi sử dụng, vui lòng rút phích cắm điện và chờ thân máy nguội hẳn rồi mới vệ sinh.
- Vui lòng không sử dụng các chất như dung môi công nghiệp, xăng, bột tẩy, bàn chải cứng hoặc bụi nhùi sắt để lau chùi, nhằm tránh làm hỏng bề mặt sản phẩm.
- Vui lòng không ngâm nhúng toàn bộ sản phẩm vào nước để rửa. Chỉ nên dùng khăn ẩm vắt khô để lau bên trong và bên ngoài thân máy, tránh nước thấm vào gây rò điện hoặc hư hỏng thiết bị.
- Nếu sau khi vệ sinh bằng chất tẩy rửa thông thường mà lòng nồi sứ hoặc nắp vẫn còn mùi, có thể cho một ít baking soda vào lòng nồi, thêm một chút nước, bật thiết bị và đun sôi. Sau đó dùng miếng rửa chén lau sạch, mùi hôi sẽ được loại bỏ.
- Khi sản phẩm không được sử dụng trong thời gian dài, vui lòng vệ sinh sản phẩm sạch sẽ, lau khô hoàn toàn trước khi cất giữ.

Tuyên bố

- Nồi sứ và nắp sứ là các bộ phận dễ vỡ, không nằm trong phạm vi bảo hành.
- Các dữ liệu trong hướng dẫn sử dụng này được cung cấp bởi cơ sở dữ liệu của Trung tâm Nghiên cứu và Phát triển Joyoung.

Thông tin cơ bản và trọn bộ sản phẩm

Mã sản phẩm	JSC-316	
Thông số kỹ thuật	Điện áp định mức	220V
	Tần số định mức	50Hz
	Công suất định mức	400W
	Dung tích định mức	3.0L
Chi tiết đóng gói	Thân máy chính	1
	Nồi sứ (3L)	1
	Hướng dẫn sử dụng	1

Safety Precautions

1. Please strictly observe these important safety precautions to prevent hazards and injuries to yourself and others.
2. Please be aware that improper use of the product, disregarding the symbols below, may result in personal injury or property damage.
3. The meanings of the symbols used in this document are as follows.



Absolutely prohibited operations



Mandatory operations to follow



Daily attention required operations

1. Please keep this product out of reach of children. Children are prohibited from operating it alone to prevent electric shock, burns, or other injuries.
2. Please do not insert foreign objects such as metal shavings, wires, or needles into the product's interior or crevices, as this may cause electric shock or abnormal operation.
3. When cleaning, if the product malfunctions, or when not in use, please be sure to unplug the power cord to prevent electric leakage or accidental startup.
4. Please do not place this product directly on fire or near any heat sources or fire sources, as this may cause damage, malfunction, or even danger.
5. Please do not place this product on unstable, damp, high-temperature, smooth, or non-heat-resistant surfaces (such as plastic tablecloths, cotton cloths, carpets, etc.), to avoid accidents and property damage caused by electric shock, fire, or falling.
6. Please use a separate power socket with a rated current of 10A or above and an AC voltage of 220V to prevent fires, electric shocks, and other accidents.
7. Please do not insert or pull out the plug with wet hands to avoid electric shock. When unplugging, please hold the plug body and do not pull the power cord, as this may damage the power cord.
8. If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service department, or similarly qualified professionals.
9. Before use, please ensure that the power cord is securely connected to the socket. Otherwise, poor contact may lead to component damage, short circuits, or other fire hazards.


10. This product is intended for household use only. The company will not be held responsible for any accidents or injuries caused by commercial use, improper use, or failure to comply with this instruction manual.
11. This product is for indoor use only. Please do not use it in damp places or outdoors to prevent electric shock and damage caused by component aging.
12. This product is not intended for use by persons with sensory or mental disabilities, or those lacking relevant experience or knowledge (including children), unless they are supervised and instructed by a professional. Please ensure children are properly supervised and do not play with this product.
13. When in use, please do not exceed 80% of the inner pot's capacity when adding water to prevent boiling water from overflowing and causing burns. Please do not touch high-temperature parts such as the steam vent. If you need to open the lid, it is recommended to use a towel or heat-insulating gloves to prevent burns from high temperatures.
14. If the product malfunctions, please send it to an after-sales service department for repair. Please do not disassemble the product or replace parts yourself, as this may cause fire, electric shock, or injury.
15. After opening the package, please immediately dispose of the plastic bag in a trash can to prevent children from playing with it and causing a suffocation hazard.
16. A slight odor may appear during the first use, which usually lasts for a few minutes and is a normal phenomenon.
17. Please do not power on and dry boil the appliance when there is no food inside, as this may cause damage to the components.
18. The inner pot and inner lid are fragile. Please be careful to avoid collision with hard objects or dropping them from a height, which may cause breakage.
19. Please do not use an open flame to cook with the inner pot, and avoid sudden temperature changes. The inner pot must be completely cooled before cleaning to prevent it from cracking due to thermal expansion and contraction.
20. Please keep the inside of the machine clean and free of debris, and the outer surface of the inner pot dry. The inner pot should be placed freely up and down to avoid affecting the use effect.

21. Please do not power on and dry boil the appliance when the inner pot is not in place or when there is no food in the inner pot, as this may cause damage to the components.
22. Please do not splash water or soup into the interior of the slow cooker to prevent short circuits on the circuit board.
23. Please do not cook food directly in the pot, as this may cause damage to the components.
24. Please pay attention to the cooking time to avoid prolonged heating that may dry out the water. If the above situation occurs, please immediately cut off the power.
25. When not in use for a long time, please clean the appliance thoroughly, dry it, and then store it.
26. Please do not move the product during operation.
27. Please do not immerse the appliance in water or expose it to splashing water.

Preface

Dear User,


Thank you for choosing Joyoung Slow Cooker. Please note that all content in this manual is for user reference during use and maintenance. The actual product may vary, and images are for reference only. If you have any further questions regarding its use, please consult your local after-sales service center.

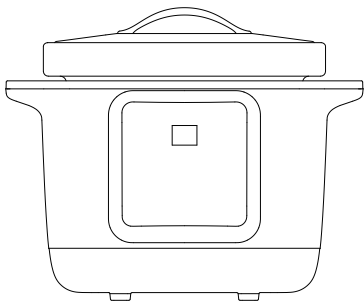

Start here and enjoy cooking!


Component Names and Functions

1 Names of Components

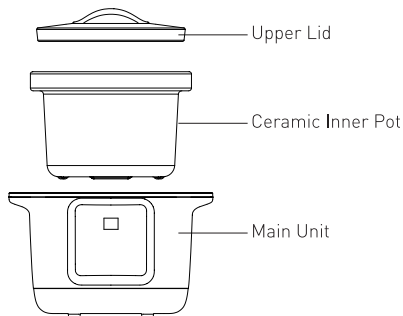

Note: The product is for reference only, and the actual appearance may vary.

2 Control Panel

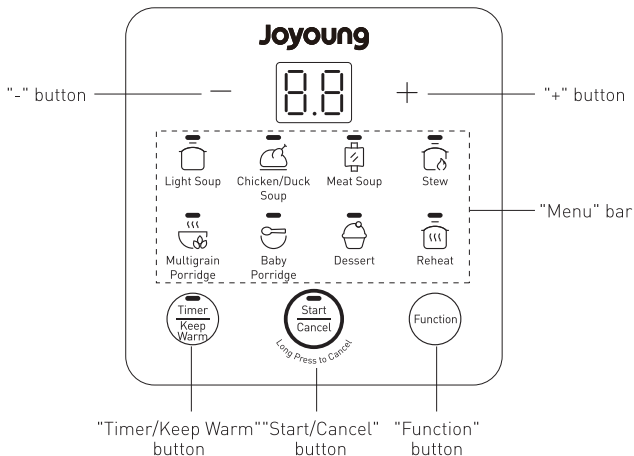

Product Usage

①Function Button

- Used to select cooking functions.
- In standby mode, please press the "Function" button to select functions sequentially: "Light Soup", "Chicken/Duck Soup", "Meat Soup", "Stew", "Multigrain Porridge", "Baby Porridge", "Dessert", "Reheat". During this process, the corresponding function indicator light will flash, and the digital display will show the required cooking time. After selecting the function, please press the "Start/-Cancel" button, and the machine will begin working according to your selected function. To cancel the function, please long-press the "Start/Cancel" button again.
- **Note:** When selecting a function, you can adjust the cooking time using "+" "/" "-" buttons according to your cooking needs, for your convenience.

②"+" Button, "-" Button

- After the function selection is complete, please press the "+" or "-" button to set the timer.
- A short press of the "+" or "-" button will increase or decrease the time by 6 minutes. After a long press (1 second) of the "+" or "-" button, the minute display will continuously increase or decrease in 6-minute intervals (for times less than 1 hour, the step is 5 minutes).
- After the timer setting is complete, please press the "Start/Cancel" button, and the machine will enter the corresponding working state, displaying the function cooking time in a countdown manner.

- Cooking Time Table for Each Function

Adjustment range of cooking time and reservation time for each function					
Function	Default Time	Appointment Default	Max. Appointment	Keep Warm	Timer Setting
Light Soup	1.8	6.0	24H	12H	1.3-2.8
Chicken/Duck Soup	2.0	6.0	24H	12H	1.5-3.0
Meat Soup	2.2	6.0	24H	12H	1.7-3.2
Stew	3.0	6.0	24H	12H	2.5-4.0
Multigrain Porridge	1.8	6.0	24H	12H	1.3-2.8
Baby Porridge	1.5	6.0	24H	12H	1.0-2.5
Dessert	2.5	6.0	24H	12H	2.0-3.5
Reheat	45	6.0	24H	12H	30-1.5
Keep Warm	12H (Counting up)				

Note:

1. During the cooking process, please pay attention to the water level to prevent dry burning. After the cooking is complete, the machine will automatically switch to keep warm mode.
2. When using the porridge function, please do not exceed 80% of the inner pot's capacity to prevent overflow. A rice-to-water ratio of 1:8 is recommended for better stewing results. For beans, it is recommended to soak them for 2-6 hours beforehand.
3. In summer or high-temperature conditions, it is recommended to appropriately reduce the appointment time to prevent food spoilage.
4. You can appropriately adjust the time using the "+" and "-" buttons based on the quantity. In low-temperature or freezing weather, you can appropriately extend the time using the "+" and "-" buttons.
5. Recommended Rice-to-Water Ratio Table for Porridge/Congee

Rice quantity \ Ratio	Cook porridge 1: 10	Porridge 1: 8	Cook porridge/Porridge 1: 6.5
0.5Cup 70g	800mL	640mL	520mL
1Cup 140g	1600mL	1280mL	1040mL

③Delay Timer

- In standby mode, please press the "Function" button to select a cooking function, or after completing the timer setting for a function, you can then press the "Timer" button to set it.
- Please press the "+" or "-" button: for times before 10 hours, the minutes will increase or decrease in 6-minute intervals; for times after 10 hours, the hours will increase or decrease in 1-hour intervals. After long-pressing the "+" or "-" button for 2 seconds, for times before 10 hours, the minutes will continuously increase or decrease in 6-minute intervals; for times after 10 hours, the hours will continuously increase or decrease in 1-hour intervals (for times less than 1 hour, the step is 5 minutes). The maximum appointment time range is 24 hours.
- After setting the desired time, please press the "Start/Cancel" button, and the machine will enter countdown mode. If an appointment is set, the appointment indicator light will illuminate.
- When the remaining time is less than or equal to the required cooking time, the "Timer" light will turn off, and the cooking function will begin.

Note:

1. The appointment time refers to the cooking completion time, with a maximum appointment of 24 hours.
2. For cooking timer settings, please refer to the "Cooking Timer Table for Each Function."
3. The keep warm function cannot be used with the appointment function.
4. If the machine is already in working mode, keep warm mode, standby mode, or the start of an appointment function, pressing this button will be ineffective.


④ Keep Warm

- In standby mode, please press the "Keep Warm" button, and the "Keep Warm" light will flash. Then, press the "Start/Cancel" button to directly activate the keep warm function. The keep warm function will automatically end after 12 hours.
- After the function finishes running, it will automatically switch to the keep warm function, which will automatically end after 12 hours.

⑤ Start/Cancel

- In standby mode, pressing this button is ineffective. After selecting a function, please press this button, and the machine will enter the working state.
- In working mode, please long-press this button to cancel the working state and switch to standby mode.

Electrical Schematic Diagram

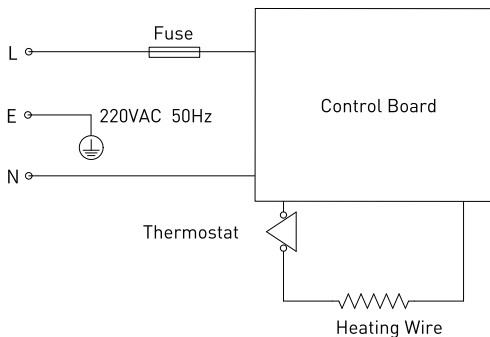

Troubleshooting and Solution

Error Code	Possible Cause	Solution
E3	High grid voltage alarm	Alarms at $280V \pm 10V$, recovers when voltage decreases by 10V
E4	Low grid voltage alarm	Alarms at $150V \pm 10V$, recovers when voltage increases by 10V

Cleaning and Maintenance

- After use, please unplug the power cord and wait for the main unit to cool down before cleaning.
- Please do not use banana oil, gasoline, decontamination powder, hard brushes, or stainless steel wire balls to wipe the surface, as this may damage it.
- Please do not immerse the entire appliance in water for cleaning. The inside and outside of the appliance can be wiped with a wrung-out damp cloth to prevent water ingress, electric leakage, or malfunction.
- If there is still an odor on the ceramic inner pot and inner lid after cleaning with ordinary detergent, you can pour baking soda into the ceramic inner pot, add a small amount of water, turn on the appliance to heat and boil, and then scrub with a scouring pad to remove the odor.
- When the product is not in use for a long time, please clean the slow cooker thoroughly, dry it, and then store it.

Statement

- Ceramic pots and lids are fragile and are not covered by the warranty.
- The data in this manual is provided by the Joyoung R&D Center database.

Basic product information and packing details

Model	JSC-316	
Product Specifications	Rated Voltage	220V
	Rated Frequency	50Hz
	Rated Power	400W
	Rated Capacity	3.0L
Packing Details	Electric Stew Pot	1
	Ceramic Inner Pot (3L)	1
	Instruction Manual	1

