


Our company is certified with the ISO
9001 Quality Management System
Công ty chúng tôi đã đạt được chứng
nhận của Hệ thống quản lý chất lượng
ISO 9001

Joyoung

Operating Instructions Hướng dẫn sử dụng

Slow Cooker
Nồi Nấu Chậm
JSC-107

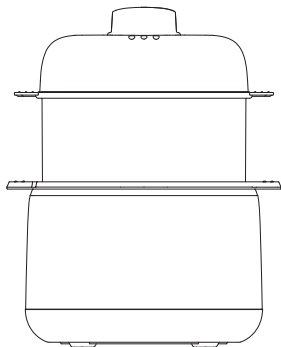

Chú ý an toàn

1. Những chú ý này là những nội dung quan trọng về an toàn nhằm ngăn ngừa nguy hiểm, tổn thương cho bạn và người khác, xin vui lòng tuân thủ.
2. Bỏ qua các ký hiệu trong bảng dưới đây và sử dụng sản phẩm sai cách có thể dẫn đến thương vong và tổn thất vật chất.
3. Dưới đây là ý nghĩa của các ký hiệu trong văn bản này.

Các thao tác tuyệt đối cấm

Các thao tác buộc phải tuân thủ

Các thao tác cần chú ý hàng ngày

-  1. Vui lòng đặt xa tầm tay trẻ em, nghiêm cấm trẻ em thao tác, tránh bị điện giật, bỏng hoặc gây ra các thương tích khác.
2. Cấm chèn các vật kim loại, dây sắt, mũi kim hoặc các dị vật khác vào bên trong sản phẩm hoặc các khe hở, nếu không sẽ gây ra điện giật hoặc hoạt động không bình thường.
-  3. Khi vệ sinh, sản phẩm có sự cố hoặc không sử dụng, để tránh hồ điện hoặc khởi động ngoài ý muốn, vui lòng rút phích cắm nguồn điện.
4. Không đặt sản phẩm trực tiếp lên lửa hoặc bất kỳ nơi nào gần nguồn nhiệt, nguồn lửa, nếu không sản phẩm sẽ bị hỏng hoặc gặp sự cố, thậm chí gây nguy hiểm.
5. Không đặt sản phẩm trên bề mặt không bằng phẳng/chắc chắn, ẩm ướt, nhiệt độ cao, trơn trượt, hoặc không chịu được nhiệt (như khăn trải bàn nhựa, vải bông, thảm, v.v..) để tránh điện giật, cháy, rơi gây thương tích và thiệt hại tài sản.
6. Vui lòng sử dụng riêng ổ cắm điện có dòng điện định mức là 6A trở lên và điện áp xoay chiều là 220V để tránh gây ra hỏa hoạn, điện giật và các tai nạn khác.
7. Không được cắm hoặc rút phích cắm bằng tay ướt để tránh bị điện giật. Khi rút phích cắm, phải cầm vào tay cầm của phích cắm, không được kéo dây điện, nếu không sẽ dễ làm hỏng dây điện.
8. Nếu dây điện mềm bị hỏng, để tránh nguy hiểm cần phải được bên chế tạo, bộ phận bảo hành hoặc thợ chuyên nghiệp tương tự tiến hành thay đổi.
9. Trước khi sử dụng, phải đảm bảo dây điện và ổ cắm kết nối chắc chắn, nếu không sẽ do tiếp xúc kém mà gây hỏng thiết bị, dẫn đến chập mạch, hỏa hoạn hoặc các nguy hiểm khác.

10. Sản phẩm này chỉ dùng cho gia đình. Công ty chúng tôi không chịu trách

nhiệm cho bất kỳ tai nạn hay thương tích nào gây ra do sử dụng cho mục đích thương mại, cách sử dụng không phù hợp hoặc không tuân thủ hướng dẫn sử dụng trong sách hướng dẫn này.

11. Sản phẩm này chỉ sử dụng trong nhà, không được sử dụng ở những nơi ẩm ướt và ngoài trời để tránh điện giật và lão hóa thiết bị gây ra tai nạn.
12. Sản phẩm này không phù hợp với những người sau: Người bị suy giảm chức năng giác quan hoặc tâm lý, người thiếu kinh nghiệm hoặc kiến thức liên quan (bao gồm trẻ em). Trừ khi họ sử dụng sản phẩm dưới sự giám sát và hướng dẫn của chuyên gia. Hãy chú ý trẻ em, không để trẻ em tiếp xúc đùa nghịch với sản phẩm này.
13. Khi sử dụng, không đổ nước quá 80% dung tích của lòng nồi để tránh nước sôi trào ra gây bỏng. Không được chạm vào các bộ phận có nhiệt độ cao như lỗ thoát hơi. Nếu cần mở nắp, nên sử dụng khăn hoặc găng tay cách nhiệt để tránh bị bỏng do nhiệt độ cao.
14. Khi sản phẩm gặp sự cố, vui lòng đem sản phẩm đến bộ phận dịch vụ sau bán hàng của để bảo trì, không tự ý tháo rời sản phẩm hoặc thay thế linh kiện để tránh gây ra hỏa hoạn, điện giật hoặc thương tích.
15. Sau khi mở bao bì, hãy ngay lập tức vứt túi nhựa vào thùng rác để tránh trẻ em chơi đùa và gây nguy hiểm ngạt thở.
16. Lần đầu cắm điện có thể xuất hiện một số mùi lạ, thường kéo dài vài phút, đây là hiện tượng bình thường.
17. Không cắm điện khi không có thực phẩm bên trong để tránh gây hư hỏng linh kiện.
18. Lòng nồi và nắp lòng nồi là các vật dễ vỡ, cần tránh va chạm với vật cứng hoặc rơi từ trên cao xuống gây vỡ.
19. Không trực tiếp dùng lửa đun lòng nồi, tránh thay đổi nhiệt độ nóng lạnh đột ngột, và chỉ vệ sinh lòng nồi khi đã nguội hoàn toàn để tránh nứt vỡ do giãn nở nhiệt.
20. Đảm bảo lòng sản phẩm không chứa tạp chất, bề mặt ngoài lòng nồi khô ráo, lòng nồi có thể đặt vào lấy ra dễ dàng để tránh ảnh hưởng đến hiệu quả sử dụng.
21. Vui lòng không cắm điện khi không có lòng nồi hoặc lòng nồi không có thực phẩm để tránh hư hại linh kiện.
22. Không để nước, canh trào khỏi lòng nồi để tránh bị chập mạch.
23. Không đun nấu thức ăn trực tiếp trong nồi, tránh hư hại linh kiện.


24. Vui lòng chú ý thời gian nấu, tránh đun nấu thời gian dài dẫn đến cạn nước, nếu xuất hiện sự cố như bên trên đề cập, vui lòng ngắt nguồn điện.
25. Nếu trong thời gian dài không sử dụng, vui lòng vệ sinh dụng cụ, chờ khô rồi cất.
26. Trong thời gian nấu, vui lòng không di chuyển sản phẩm.
27. Không được ngâm sản phẩm vào nước hoặc làm bị ướt.

Nhắc nhở

- Trước khi lần đầu sử dụng, vui lòng vệ sinh sạch sẽ các bộ phận tiếp xúc trực tiếp với thực phẩm rồi mới nấu. Lần đầu sử dụng nếu thấy lượng ít khói dầu bốc lên là hiện tượng bình thường.
- Âm thanh "lách cách" phát ra do sự co giãn của các bộ phận bên trong sản phẩm khi nhiệt độ thay đổi trong quá trình sử dụng là hiện tượng bình thường.
- Sau khi sử dụng, bề mặt lòng nồi có chút biến sắc là hiện tượng bình thường.
- Trong quá trình hấp hoặc khi mở nắp, hãy cẩn thận với hơi nước nóng bốc ra từ nồi. Giữ tay và mặt tránh xa các lỗ thoát hơi nước của sản phẩm để tránh bị bỏng.
- Nếu sản phẩm từng bị rơi, xuất hiện hư hỏng rõ rệt hoặc có dấu hiệu bất thường khi sử dụng, để tránh nguy hiểm, cần được nhà sản xuất, bộ phận bảo trì hoặc thợ sửa chữa chuyên nghiệp tiến hành thay đổi.

Giới thiệu

Vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng và bảo quản cẩn thận.
Cảm nhận niềm vui nấu ăn từ đây!

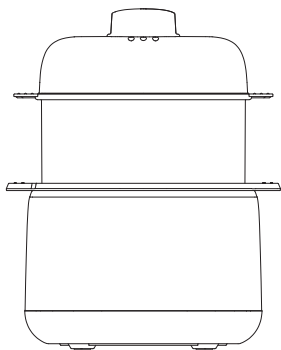

Mục lục

Chương 1: Tên và chức năng các bộ phận

(gồm giới thiệu giao diện)


Chương 2: Cách sử dụng

Chương 3: Sơ đồ nguyên lý điện

Chương 4: Phân tích và khắc phục sự cố

Chương 5: Vệ sinh và bảo dưỡng


Tên và chức năng của các bộ phận (gồm giới thiệu giao diện)

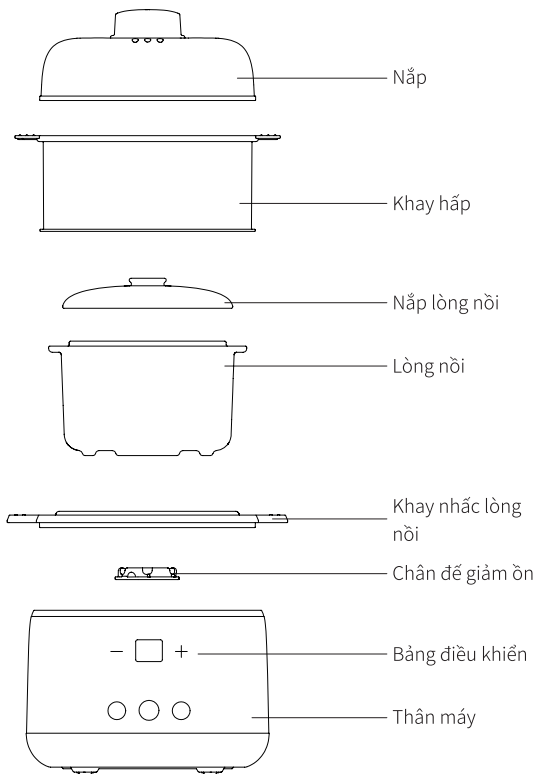

Lưu ý: Hình ảnh chỉ mang tính chất minh họa. Vui lòng lấy sản phẩm thật làm chuẩn.

Cách sử dụng sản phẩm

Joyoung

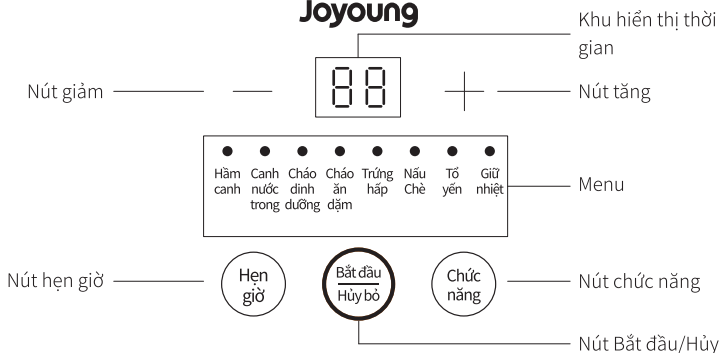

Bảng điều khiển JSC-107

Hướng dẫn sử dụng

1. Nút chức năng

- Dùng để chọn chức năng nấu ăn.
- Ở trạng thái chờ, nhấn nút "Chức năng" có thể lựa chọn lần lượt các chức năng như "hầm canh, canh nước trong, cháo dinh dưỡng, cháo ăn dặm, trứng hấp, nấu chè, tổ yến, giữ nhiệt", trong quá trình này đèn chỉ thị chức năng tương ứng sẽ nhấp nháy, màn hình hiển thị thời gian nấu cần thiết. Sau khi chọn chức năng, bạn cần nhấn "Bắt đầu/Hủy" để bắt đầu nấu.

Chú ý:

1. Khi chọn chức năng, bạn có thể dựa vào nhu cầu nấu ăn của mình, lựa chọn nút hẹn giờ "+" hoặc "-" để thiết lập thời gian nấu ăn, thuận tiện cho bạn sử dụng.

2. Nút "+", "-"

- Khi đã chọn chức năng, nhấn vào phím "+" hoặc "-" để đặt thời gian hẹn giờ.
- Nhấn giữ nút "+" hoặc "-" để thời gian tăng dần theo mức 0.1 (6 phút).
- Khi đã đặt hẹn giờ xong, cần nhấn "Bắt đầu/Hủy" để bắt đầu nấu, hiển thị thời gian nấu theo dạng đếm ngược.

- Thời gian nấu của các chức năng

Chức năng	Hầm canh	Canh nước trong	Cháo dinh dưỡng	Cháo ăn dặm	Trứng hấp	Nấu chè	Tổ yến	Giữ nhiệt
Thời gian	2.5h	2h	2h	2.5h	0.9h	3h	1h	8h

Chú ý:

1. Trong quá trình nấu, người dùng cần chú ý đến sự thay đổi của lượng nước, tránh để nồi bị cạn. Sau khi nấu xong, nồi sẽ tự động chuyển sang chế độ giữ ấm.
2. Khi dùng chức năng nấu cháo, tổng lượng nấu không được vượt quá 80% dung tích của lòng nồi để tránh tràn nồi. Kiến nghị gạo và nước đong theo tỉ lệ 1:8, hiệu quả hầm nấu sẽ tốt hơn. Nguyên liệu từ các loại đậu nên ngâm trước từ 2-6 giờ.
3. Mùa hè hoặc khi nhiệt độ cao, nên giảm thời gian hẹn giờ để tránh thực phẩm bị hỏng.
4. Có thể điều chỉnh thời gian nấu phù hợp bằng nút "+" hoặc "-" tùy theo lượng nguyên liệu. Trong điều kiện thời tiết lạnh, nên tăng thời gian nấu bằng cách nhấn "+" để đảm bảo món ăn được nấu chín hoàn toàn.
5. Khi dùng khay hấp, có thể tự chủ động điều chỉnh thời gian nấu dựa vào từng loại nguyên liệu.

3. Hẹn giờ

- Ở trạng thái chờ, sau khi nhấn nút "Chức năng" để chọn chức năng nấu, hoặc hoàn thành cài đặt chức năng hẹn giờ, có thể nhấn nút "Hẹn giờ" để cài đặt.
- Lưu ý:
Khi nhấn nút này, thời gian hẹn giờ mặc định là 5 giờ. Sử dụng nút "+" và "-" để cài đặt thời gian. Mỗi lần nhấn nút "+", thời gian sẽ tăng thêm 0,5 giờ nếu dưới 10 giờ và tăng thêm 1 giờ nếu trên 10 giờ. Nhấn giữ nút "+" hoặc "-" để điều chỉnh nhanh.
- Sau khi cài đặt thời gian xong, nhấn nút "Bắt đầu/Hủy" để bắt đầu nấu.

Lưu ý:

1. Thời gian hẹn giờ là thời gian nấu xong, thời gian hẹn giờ tối đa là 24 giờ.
2. Chức năng trứng hấp, tổ yến và giữ nhiệt không thể hẹn giờ.


4. Giữ nhiệt

- Sau khi nấu xong nồi sẽ tự động chuyển sang trạng thái Giữ nhiệt, đèn giữ nhiệt sẽ sáng, thời gian hiển thị sẽ tăng dần theo đơn vị 0,1 giờ, thời gian giữ nhiệt tối đa là 8 giờ, quá 8 giờ sẽ chuyển sang chế độ chờ.
- Chọn chức năng "Giữ nhiệt" sẽ trực tiếp bắt đầu giữ nhiệt, đèn giữ nhiệt sẽ sáng, thời gian hiển thị sẽ tăng dần theo đơn vị phút, thời gian giữ nhiệt tối đa là 8 giờ,


quá 8 giờ sẽ chuyển sang chế độ chờ.

- Sau khi nấu xong tự động chuyển sang chức năng Giữ nhiệt.

5. Các bước sử dụng cơ bản



Gắn chân đế giảm ồn



Đặt chân đế giảm ồn vào khớp dưới đáy của hộc chứa nước, sau đó xoay ngược hoặc thuận theo chiều kim đồng hồ 30° để cố định



Sau khi đổ nước vào hộc chứa đến mức nước đề xuất, lần lượt đặt khay nhấc nồi sứ, nồi sứ và nắp nồi vào


Thời gian hoạt động và trạng thái của từng chức năng					
Chức năng	Thời gian mặc định	Phạm vi điều chỉnh thời gian chế biến	Có hẹn giờ không	Phạm vi hẹn giờ (Thời gian hoàn thành việc chế biến)	Thời gian giữ nhiệt
Hầm canh	2 giờ 30 phút	2 giờ 30 phút - 4 giờ	Mặc định 5 giờ	Thời gian cài đặt chức năng - 24 giờ	8 giờ
Canh nước trong	2 giờ	2 - 4 giờ	Mặc định 5 giờ	Thời gian cài đặt chức năng - 24 giờ	8 giờ
Cháo dinh dưỡng	2 giờ	2 - 4 giờ	Mặc định 5 giờ	Thời gian cài đặt chức năng - 24 giờ	8 giờ
Cháo ăn dặm	2 giờ 30 phút	2 giờ 30 phút - 4 giờ	Mặc định 5 giờ	Thời gian cài đặt chức năng - 24 giờ	8 giờ
Trứng hấp	54 phút	/	/	/	8 giờ
Nấu Chè	3 giờ	3 - 4 giờ	Mặc định 5 giờ	Thời gian cài đặt chức năng - 24 giờ	8 giờ
Tổ yến	1 giờ	/	/	/	8 giờ
Giữ nhiệt	① Sau khi thời gian hoạt động của chức năng kết thúc, thiết bị sẽ chuyển sang giữ ấm, hiển thị thời gian đếm xuôi với mức tăng là 0,1 giờ (6 phút). Bộ phận gia nhiệt sẽ tắt trong 45 phút đầu, sau đó sẽ gia nhiệt 4 giây và tắt 45 giây. ② Trực tiếp nhấn nút "Chức năng" cũng có thể chuyển sang giữ ấm. Thiết bị sẽ gia nhiệt với công suất tối đa trong 15 phút đầu, sau đó gia nhiệt 4 giây và tắt 45 giây.				

Thời gian hoạt động và trạng thái của từng chức năng

Trạng thái hoạt động và chỉ báo

- 1) Trạng thái cấp điện: Khi cắm điện, tất cả đèn báo và màn hình số sáng toàn bộ trong 1 giây, phát ra âm báo trong 1 giây, sau đó thiết bị sẽ vào trạng thái chờ, ngoại trừ màn hình số hiển thị "--", các đèn chức năng khác đều tắt.
- 2) Chọn chức năng: Nhấn nút "Chức năng" nhiều lần để chọn chức năng mong muốn, đèn của chức năng được chọn sẽ nhấp nháy, màn hình số hiển thị thời gian hoạt động mặc định của chức năng tương ứng, các đèn khác đều tắt, có thể nhấn nút "+" và "-" để điều chỉnh thời gian hoạt động.
- 3) Các chức năng hỗ trợ hẹn giờ: Sau khi chọn chức năng, nhấn nút "Hẹn giờ" để hẹn giờ, màn hình số hiển thị thời gian hẹn giờ mặc định là 5 giờ, có thể nhấn nút "+" và "-" để điều chỉnh. Sau khi cài đặt xong, nhấn "Bắt đầu/Hủy bỏ" để thiết bị bắt đầu hoạt động.
- 4) Trạng thái hoạt động: Đèn của chức năng đã chọn sẽ sáng liên tục, các đèn chức năng khác tắt, màn hình số hiển thị thời gian đếm ngược. Nếu đang ở chế độ hẹn giờ, đèn "Hẹn giờ" sẽ sáng và màn hình số hiển thị thời gian hẹn giờ đếm ngược. Khi gần đến thời điểm bắt đầu chức năng, đèn hẹn giờ tắt, thiết bị sẽ bắt đầu hoạt động.
- 5) Kết thúc chức năng: Thiết bị sẽ chuyển sang giữ ấm, đèn "Giữ nhiệt" sáng và màn hình số bắt đầu hiển thị thời gian đếm xuôi. Khi thời gian giữ ấm kết thúc, thiết bị sẽ chuyển sang trạng thái chờ.

Sơ đồ nguyên lý điện

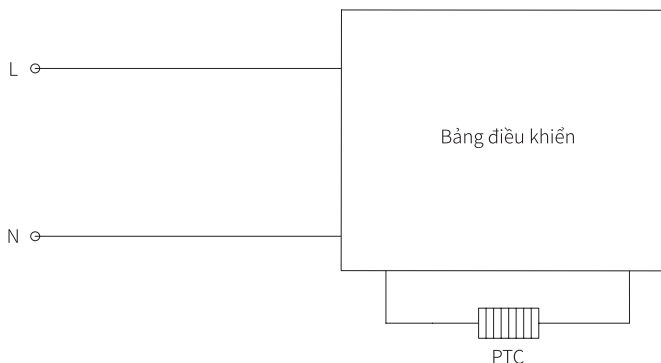

Phân tích và khắc phục sự cố

Mã số cảnh báo	Nguyên nhân sự cố	Cách xử lý
E1	Không thể tắt đun nóng	Lập tức ngắt nguồn điện đồng thời mang tới địa điểm bảo trì chỉ định để sửa chữa
E2	Không thể bật đun nóng	Nhấn nút Hủy để hủy cảnh báo đồng thời mang tới địa điểm bảo trì chỉ định để sửa chữa
E5	Cảnh báo đun cạn	Nhấn nút Hủy để hủy cảnh báo
E6	Điện áp lưới điện quá cao	Khi điện áp lưới điện trở lại bình thường có thể tiếp tục vận hành
E7	Điện áp lưới điện quá thấp	Khi điện áp lưới điện trở lại bình thường có thể tiếp tục vận hành

Vệ sinh và bảo dưỡng

- Sau khi dùng xong bắt buộc phải rút phích cắm, chờ nồi nguội mới bắt đầu vệ sinh.
- Không dùng dầu chuối, xăng, bột tẩy rửa, bàn chải cứng hoặc bụi nhùi sắt để lau chùi, tránh làm hỏng bề mặt.
- Không ngâm toàn bộ nồi vào nước để vệ sinh. Có thể lau chùi bên trong và bên ngoài thân sản phẩm bằng khăn ẩm đã vắt kỹ để tránh nước vào, rò rỉ điện hoặc gây ra sự cố.
- Sau khi dùng nước vệ sinh thông dụng để vệ sinh xong nếu lòng nồi và nắp lòng nồi vẫn còn mùi, có thể đổ ít baking soda vào lòng nồi, thêm một ít nước, khởi động và đun sôi, sau đó dùng miếng bọt biển rửa sạch, sẽ loại bỏ được mùi hôi.
- Khi không sử dụng sản phẩm trong thời gian dài, hãy làm sạch nồi nấu chậm, để khô rồi cất.

Thông số sản phẩm

Mã sản phẩm	JSC-107
Điện áp định mức	220V
Tần số định mức	50Hz
Công suất định mức	200W
Dung tích định mức	1.0L

Safety Precautions

1. The precautions are crucial for preventing danger, injury, or other safety issues to you and other people, please adhere to them strictly.
2. Ignoring the markings below and misusing the product may lead to personal injury and property damage.
3. The following explains the meanings of the markings in this document.

Prohibited Actions

-  1. Place the product out of reach of children and do not allow children to operate it alone to prevent electric shock, burns, or other injuries.
2. Do not insert metal shavings, iron wires, needles, or other foreign objects into the product or its gaps, as this can cause electric shock or abnormal operation.

Requirements That Must Be Followed

Precautions in Daily Operation

-  3. When cleaning or there are any malfunctions or the product is not in use, be sure to unplug the power plug to prevent electric leakage or accidental activation.
4. Do not place the product directly on a fire or near any heat source, as this can damage the product, cause malfunctions, or even pose a danger.
5. Do not place the product on unstable, damp, hot, slippery, or non-heat-resistant surfaces (such as tables with plastic tablecloths, cotton cloths, or carpets, etc.) to prevent electric shocks, fires, falling off, and other incidents that could cause harm and property damage.
-  6. Use a power outlet with a rated current of at least 6A and an AC voltage of 220V separately to prevent fires, electric shocks, and other accidents.
7. Do not insert or remove the plug with wet hands to avoid electric shock. When unplugging, grasp the plug handle, not the power cord, to prevent damage to the power cord.
8. If the power cord is damaged, it must be replaced by the manufacturer, its service department, or similarly qualified professionals to avoid danger.
9. Before use, ensure the power cord is securely connected to the socket, as poor contact may cause device damage, leading to short circuits or fire hazards.

10. This product is intended for household use only. The company will not be held responsible for any accidents or injuries resulting from commercial use, improper use, or failure to follow the operating instructions.
11. This product is for indoor use only. Do not use it in damp areas or outdoors to prevent electric shocks and damage from component aging.
12. This product is not suitable for individuals with sensory or psychological impairments, lack of experience or knowledge (including children), etc. Unless they use this product under the supervision and guidance of professionals. Keep an eye on children to ensure they do not play with this product.
13. When adding water to the pot, do not exceed 80% of the inner pot's capacity to prevent hot water from spilling and causing burns. Avoid touching high-temperature areas such as the steam outlet. If you need to open the lid, use a towel or heat-resistant gloves for protection to prevent burns.
14. If the product malfunctions, please take it to local after-sales services department for repair. Do not disassemble the product or replace parts yourself to avoid fire, electric shock, or injury.
15. After opening the package, dispose of the plastic bags in the trash immediately to prevent children from playing with them and causing suffocation hazards.
16. It is normal that some peculiar smells may occur and last a few minutes when first powered up.
17. Do not power the device without food inside to prevent component damage from dry heating.
18. The inner pot and inner lid are fragile, please be cautious of collisions with hard objects or falling from heights to avoid breakage.
19. Do not cook with the inner pot over an open flame, avoid sudden temperature changes, and wait for the inner pot to cool completely before cleaning to prevent it from cracking due to thermal expansion and contraction.
20. Keep the machine interior clean and free of debris, ensure the inner pot is dry on the outside, and ensure it can be put in and taken out smoothly to avoid affecting performance.
21. Do not power the device without the inner pot inside or with the inner pot empty without food, to prevent component damage from dry heating.
22. Avoid splashing water or soup into the electric stew pot to prevent short circuits in the circuit board.

23. Do not cook food directly in the outer pot to prevent component damage.
24. Pay attention to cooking times to avoid overheating and drying out the water.
Immediately cut off the power if this occurs.
25. If not used for an extended period, clean and dry the appliance before storing it.
26. Do not move the product while it is in operation.
27. The appliance shall not be submerged in water or sprayed with water.


Warm Tips

- Before using this product for the first time, please thoroughly clean all parts that come into contact with food before cooking. It is a normal phenomenon if a small amount of cooking fumes are produced during the initial use due to evaporation.
- The "clicking" sound caused by the contraction or expansion of components due to internal temperature changes during use is normal.
- It is normal for the stainless-steel surface of the inner pot to slightly discolor after use.
- During the steaming process or when removing the steam cover, be sure to pay attention to the hot steam coming from the pot, and keep your hands and face away from the steam vents of the machine to avoid burns from the steam.
- If the product has been dropped and shows obvious damage or abnormal operation, it must be replaced by professionals from the manufacturer, its maintenance department, or a similar department to avoid danger.

PREFACE

Please read the instructions carefully before using the product and keep it for future reference.


Begin your culinary adventure and enjoy the art of cooking!

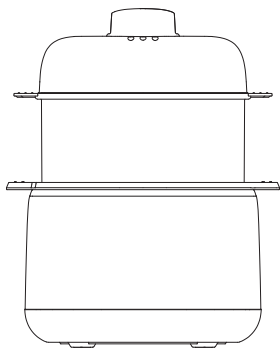

Contents


- Chapter 1: Components and Functions
(Including Interface Introduction)
- Chapter 2: Product Usage Methods
- Chapter 3: Electrical Schematic Diagram
- Chapter 4: Troubleshooting
- Chapter 5: Cleaning and Maintenance

Components and Functions (Including Interface Introduction)

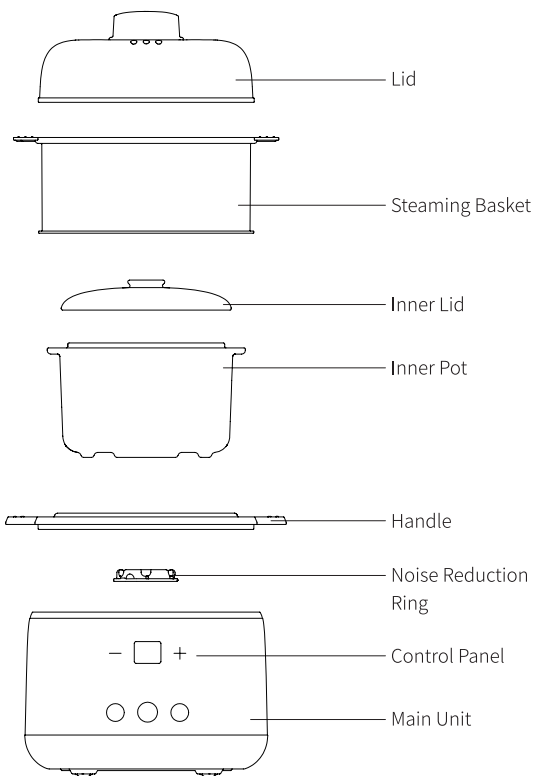

Note: The product illustration is for reference only, and the specific design shall be subject to the actual product.

Product Usage Methods

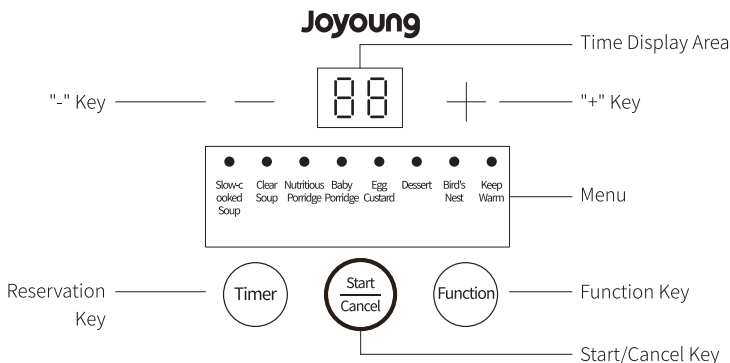

JSC-107 Control Panel

Operating Instructions

1. Function Key

- Used to select cooking functions.
- In standby mode, pressing the "Function" key allows you to cycle through options such as "Slow-cooked Soup, Clear Soup, Nutritious Porridge, Baby Porridge, Egg Custard, Dessert, Bird's Nest, and Keep Warm". The corresponding function indicator light will flash, and the digital display will show the required cooking time. After selecting a function, press "Start/Cancel" to begin cooking.

Note:

1. When selecting a function, you can adjust the cooking time using the "+" and "-" keys according to your needs.

2. "+" Key and "-" Key

- After selecting a function, press the "+" or "-" key to set the cooking time.
- Holding down the "+" or "-" key will increment the time in steps of 0.1 hours (6 minutes).
- After setting the cooking time, press "Start/Cancel" to start cooking, with the cooking time of the function displayed in a countdown format.

- Cooking Time Required for Each Function

Function	Slow-cooked Soup	Clear Soup	Nutritious Porridge	Baby Porridge	Egg Custard	Dessert	Bird's Nest	Keep Warm
Time	2.5h	2h	2h	2.5h	0.9h	3h	1h	8h

Note:

1. During the machine's cooking process, please monitor the water level to prevent the pot from drying out. When cooking finishes, the machine automatically switches to keep warm function;
2. When using the porridge function, do not exceed 80% of the inner pot's capacity to avoid overflow. The rice-to-water ratio is recommended to be 1:8 for better stewing results. Legumes shall be soaked for 2-6 hours before cooking;
3. In summer or high-temperature conditions, it is suggested to shorten the timer setting to prevent food spoilage;
4. Set the cooking time with the "+" and "-" keys based on the quantity. In cold weather, consider increasing the time using the "+" and "-" keys.
5. When using the steaming basket, the cooking time can be adjusted according to the ingredients.

3. Reservation

- In standby mode, press the "Function" key to select a cooking function, or after setting the function's timer, press the "Reservation" key to make a reservation.
- Note: Pressing this key defaults to a 5-hour reservation. Press the "+" and "-" keys to set the time. Pressing the "+" key once will increment by 0.5 hours within 10 hours, and by 1 hour above 10 hours. Holding down the "+" and "-" keys allows for rapid adjustment.
- After setting the time, press "Start/Cancel" to start cooking.


Note:

1. The reservation time is the time for the cooking to be completed, with a maximum reservation of 24 hours;
2. The Custard, Bird's Nest, and Keep Warm functions cannot use the reservation function;


4. Keep Warm

- After the function completes, the machine automatically enters the keep-warm state, with the keep-warm indicator light illuminated, and the time in the clock area accumulates in 0.1-hour increments. The maximum keep-warm time is 8 hours; the machine switches to standby mode when exceeding 8 hours.
- Holding the "Keep Warm" function button directly activates the keep-warm setting, with the indicator light on, and the time in the clock area accumulates in minute increments. The maximum warming time is 8 hours, the machine switches to standby mode when exceeding 8 hours.
- Once the function operation ends, it automatically switches to keep warm function.

5. Basic Operation Steps



Put in the Noise Reduction Ring



Align the Noise Reduction Ring with the bottom notch of the water tank and put it in, then rotate it 30° clockwise or counterclockwise to secure it.



After filling the water tank to the recommended water level, place the handle, the stew pot, and the lid in sequence.


Operating Hours and Status of Each Function					
Function	Default Cooking Time	Cooking Time Range	Default Preset Time	Preset Time Range	Keep Warm Duration
Slow-Cooked Soup	2.5h	2.5-4h	5h	Function Setting Time – 24:00	8h
Clear Soup	2h	2-4h	5h	Function Setting Time – 24:00	8h
Nutritious Porridge	2h	2-4h	5h	Function Setting Time – 24:00	8h
Baby Porridge	2.5h	2.5-4h	5h	Function Setting Time – 24:00	8h
Steamed Eggs	0.9h	/	/	/	8h
Dessert	3h	3-4h	5h	Function Setting Time – 24:00	8h
Bird's Nest	1h	/	/	/	8h
Keep Warm	① After the program finishes, the cooker will enter the Keep Warm mode with forward timing displayed, increasing in increments of 0.1 h. Heating is turned off for the first 45 minutes, and afterward it operates in a cycle of 4 seconds on and 45 seconds off. ② You can also switch to the Keep Warm function by pressing the "Function" button. The cooker heats at full power during the first 15 minutes, and then operates in a cycle of 4 seconds on and 45 seconds off.				

Operating Hours and Status of Each Function

Working and Indicator Status

- 1) Power-On State: When powered on, all indicator lights and segments of the digital display illuminate for approximately 1 second, and the buzzer sounds for 1 second. The cooker then enters standby mode, with all function lights off except the digital display showing "--".
- 2) Selecting a Function: Press the "Function" button repeatedly to select the desired menu function. The corresponding function light will flash, and the digital display will show the default working time for that function. All other function lights remain off. The working time can be adjusted using the "+" and "-" buttons.
- 3) Reservation (if required): For functions that support reservation, press the "Reservation" button after selecting a function to enter reservation mode. The display shows the default reservation time of 5 hours. The "+" and "-" buttons can be used to adjust the reservation time. Press "Start/Cancel" to begin operation.
- 4) Working State: During operation, the selected function light remains on while other function lights stay off. The display shows a countdown timer. If a reservation was set, the reservation indicator lights up and the display shows the reservation countdown. When the reservation time is nearly complete, the reservation light turns off and the cooker begins the selected function.
- 5) After the selected function finishes, the cooker enters Keep Warm mode. The Keep Warm indicator lights up, and the display shows elapsed time. Once the Keep Warm duration is complete, the cooker returns to standby mode.

Electrical Schematic Diagram

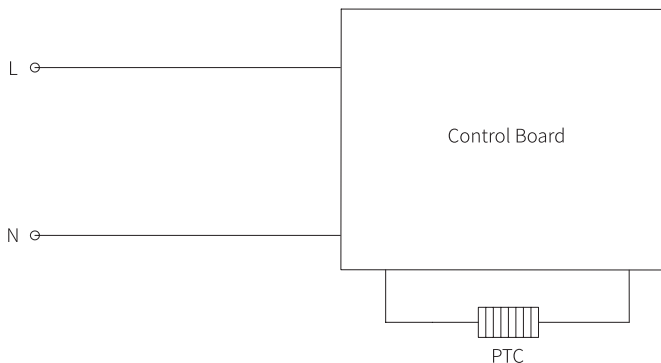

Fault Analysis and Troubleshooting

Alarm Codes	Fault Reason	Handling Method
E1	Unable to turn off heating	Power off immediately and take the appliance to the designated repair point for repair
E2	Unable to turn on heating	Press the Cancel key to stop the alarm and take the appliance to the designated repair point for repair
E5	Dry burning alarm	Press the Cancel key to stop the alarm
E6	Overvoltage	Continue to operate once the grid voltage returns to normal
E7	Undervoltage	Continue to operate once the grid voltage returns to normal

Cleaning and Maintenance

- After use, the power plug must be unplugged and the appliance must cool down before starting to clean.
- Do not use thinner, gasoline, detergent powder, hard brushes, or steel wool to wipe to avoid damaging the surface.
- Do not immerse the entire machine body in water for cleaning. The interior and exterior of the body can be wiped with a damp cloth wrung out to prevent water ingress, electric leakage, or malfunctions.
- If there is still odor on the ceramic pot or inner lid after cleaning with regular detergent, you can pour some baking soda into the ceramic pot and add a little water, turn on the machine to heat and boil, then use a scouring pad to scrub to remove the odor.
- If not used for an extended period, clean and dry the electric slow cooker before storing it.

Product Specifications

Model	JSC-107
Rated Voltage	220V
Rated Frequency	50Hz
Rated Power	200W
Rated Capacity	1.0L

