技术要求：
1材质：128g铜版纸
2：工艺：骑马订
3：尺寸：100*70mm
4.应符合0FC.507.002《说明书及类似印刷品技术条件》的要求。
5.字体:阿里巴巴普惠体 3.0
思源黑体
6.颜色:C:0 M:0 Y:0 K:60
PANTONE 429 C5.



FLYCO


FT7105VN
Hướng Dẫn Sử Dụng

FLYCO
Shanghai Flyco Electrical Appliance Co., Ltd.
Address: No. 503, East Guangfulin Road, Songjiang District, Shanghai, China
Shanghai Flyco Electrical Appliance Co., Ltd.
Địa chỉ: Số 503, Đường Đông Quang Phúc Lâm, Quận Tùng Giang, Thượng Hải, Trung Quốc
http://www.flyco.com
Made in China

ENGLISH 1–12
TIẾNG VIỆT 13–24

⚠ Please read this user manual carefully before the use of the product and keep it properly.
⚠ Vui lòng đọc kỹ hướng dẫn sử dụng này trước khi sử dụng sản phẩm và giữ gìn cẩn thận.

Product Introduction

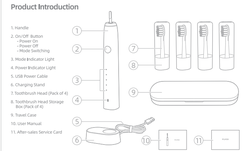

1. Handle
2. On-Off Button
- Power On
- Power Off
- Mode Switching
3. Mode Indicator Light
4. Power Indicator Light
5. USB Power Cable
6. Charging Stand
7. Toothbrush Head (Pack of 4)
8. Toothbrush Head Storage Box (Pack of 4)
9. Travel Case
10. User Manual
11. After-sales Service Card

Precautions

1. Keep the charging stand dry. Do not unplug or plug in the USB power cable plug with wet hands to prevent electric shock.
2. Do not immerse the electric toothbrush or the charging stand in water or other liquids during use.
3. Do not place metal objects on the charging stand.
4. Keep this product away from strong magnetic fields (such as induction cookers) when it is charging.
5. This product is only used for cleaning teeth, gums and tongue. Do not use it for any other purposes.
6. Users with orthodontics, dental fillings, dental implants, etc. should use it under the guidance of a dentist.
7. Users with pacemakers or other implanted devices, consult a doctor or the relevant device manufacturer before use.
8. Supervise children carefully to ensure they don't play with this product. People with physical disabilities,mental disorders, and those lacking relevant experience and knowledge (including children) must use it under the supervision and guidance of a guardian.
9. The handle of the electric toothbrush can be cleaned with clean water, but do not soak it in water for a long time.
10. Do not clean the toothbrush head, the handle of the electric toothbrush or the charging stand in a dishwasher.
11. Do not scald or boil the toothbrush head in boiling water.
12. Do not use salt water, hot water above 60℃, thinners, gasoline, alcohol or other chemicals to clean the electric toothbrush and the charging stand.
13. Each user should use his/her own brush head. Please do not share the toothbrush head with others.
14. Please replace the toothbrush head every three months. If there are signs of wear, replace it in advance. Do not use toothbrush heads not provided by our company.
15. This product contains a built-in rechargeable battery. Do not throw it into fire, heat it, or charge, use, or place it in high-temperature environments.
16. The USB power cord cannot be replaced. If it is damaged, this appliance (charging stand) should be discarded.

17. Do not use a charging stand not provided by our company to charge the electric toothbrush.
18. During use and charging, the electric toothbrush and the charging stand may slightly heat up. This is a normal phenomenon and does not affect its performance.
19. If the electric toothbrush or the charging stand is damaged, do not use it anymore. Deal with it according to the type of malfunction. If necessary, send it to the maintenance department of our company for repair.
20. Please prevent this product from falling or being subjected to impacts.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
22. The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
23. Caution: Use only an external supply with the following specifications: safety extra low voltage (SELV) unit that complies with standard IEC 60335 with the output of 5V⎓ 1A.
24. Battery type: Lithium-ion
25. Normal temperature range for charging the battery: 5℃-35℃
26. Do not expose the appliance or battery to excessive temperatures.
27. Be aware of the risk of terminals of the battery-operated appliance or battery being shorn-circuited by metal objects.
28. If the appliance contains batteries that are non-replaceable, When the battery is at the end of life, the appliance shall be properly disposed of.
29. For details regarding safe removal and disposal of used batteries, please refer to 'Environmental Protection Information'.
30. Do not contact leaking batteries with skin or eyes; if this occurs, immediately rinse well with water and seek medical care.

Instructions for Use



Attach the Toothbrush Head
1. Align the toothbrush head so that the direction of the bristles is the same as the front side of the toothbrush handle.
2. Firmly insert the toothbrush head downward onto the metal shaft (Figure ②).
(A small gap between the toothbrush head and the toothbrush handle is normal.)

Start Brushing Teeth
Warm Reminder: To avoid toothpaste splashing, put the toothbrush head into your mouth before turning on the device.
1. Wet the bristles and squeeze an appropriate amount of toothpaste onto the bristles.
2. Place the bristles of the toothbrush at a 45-degree angle on the teeth (Figure ③) and press with proper force.
3. Press the switch button to turn on the electric toothbrush. The electric toothbrush is set to the clean mode by default and starts working for 2 minutes. If you need to select other modes, press the switch button again within 5 seconds after turning it on.

Instructions for Use

4. Move the toothbrush slowly in small back-and-forth motions. This allows the bristles to reach the gaps between teeth. Do not apply excessive force.
5. The electric toothbrush has a smart timer function. It pauses every approximately 30 seconds to remind the user to change the brushing area. The electric toothbrush will automatically turn off after running for about 2 minutes (Figure ④).

Function Modes
1. The electric toothbrush is set to the clean mode by default when it leaves the factory.
2. Mode Switching: Press the switch button again within 5 seconds after power-on to switch the mode. You can also press the switch button again within 5 seconds after resuming work from a pause to switch the mode. If you press the switch button more than 5 seconds after resuming work, it will pause again.
3. Memory Mode: When the device is powered off manually or automatically in any mode, the electric toothbrush will enter the last used memory mode. The next time you turn on the device, it will start with the memory mode by default.
4. This electric toothbrush offers five brushing modes:
- Clean Mode: Effectively removes dental plaque, suitable for daily cleaning needs, with a duration of approximately 2 minutes.

Instructions for Use

- White Mode: While effectively cleaning, it also whitens the teeth, with a duration of approximately 2 minutes.
- Polish Mode: Conducts deep cleaning and effectively removes tooth stains, with a duration of approximately 2 minutes.
- Sensitive Mode: Gentle cleaning for users with sensitive teeth and gums, with a duration of approximately 2 minutes.
- Gum Care Mode: Has a massaging effect, with a duration of approximately 2 minutes.

⚠ 1. It will be switched off automatically after pausing for about 30 seconds.
2. When the effective working time exceeds 110 seconds, pressing the switch button will not pause the device but directly power it off.

Battery Status (when the toothbrush handle is not placed on the charging stand)
After pressing the On-Off button of the electric toothbrush, the power indicator light on the handle will display the battery power status.
1. The green power indicator light remains continuously lit: The battery is fully charged, and the electric toothbrush can be used normally.
2. The orange power indicator light remains continuously lit: The battery power is low. Please charge it as soon as possible.
3. The orange power indicator light is flashing: The battery is exhausted. Please charge it as soon as possible.

Instructions for Use

Charging
Warm Reminder: When charging the appliance, it is necessary to use a low-power circuit output adapter with an output voltage not exceeding 5V and an output current not exceeding 1A.
1. When the orange light of the battery indicator on the electric toothbrush is on, it indicates that the battery power of the electric toothbrush is low. Please charge it in time.
2. Insert the USB cable of the charging stand into the power adapter, then plug it into the power socket, and place the electric toothbrush on the charging stand.
3. When the handle of the electric toothbrush is correctly placed on the charging stand, the electric toothbrush starts charging, and the battery indicator light flashes green.
4. When the electric toothbrush is fully charged, the battery indicator light remains steadily green.
5. During the charging process, if the battery indicator light flashes orange, it means that foreign objects are detected or a communication error occurs between the handle and the charging stand. In this case, please remove the foreign objects on the charging stand or take the handle off the charging stand and place it again.
6. It takes about 12 hours to charge continuously. If a power adapter of different specifications is used, the charging time may vary.
7. A fully-charged electric toothbrush can provide about 300 minutes of brushing time, but the actual brushing time may be less than expected due to differences in brushing habits.

⚠ Do not place metal objects on the charging stand, otherwise it may affect the charging of the electric toothbrush and may cause the metal objects to overheat.

Care and Maintenance



Cleaning
1. Rinse the toothbrush head and bristles after each brushing, and keep it ventilated (Figure ⑤).
2. Remove the toothbrush head from the handle and rinse the connection of the toothbrush head with warm water at least once a week (Figure ⑥).
3. Regularly remove the toothbrush head and rinse the metal shaft with warm water to ensure residual toothpaste is removed (Figure ⑦).
4. Regularly wipe the surface of the product with a damp cloth (Figure ⑧).

⚠ 1. Do not wash the toothbrush head, handle, charging stand, or travel case in the dishwasher.
2. Unplug the USB power cable before cleaning the charging stand.
3. Do not clean the product with isopropyl alcohol, vinegar, or bleach, as it may cause discoloration or cracking of the product.
4. Do not press the rubber seal ring on the metal shaft with sharp objects, as it may cause damage.

Care and Maintenance

Replacing the Toothbrush Head
A worn-out toothbrush head may affect the cleaning effect. It is recommended to replace the toothbrush head every three months. If there are signs of wear on the toothbrush head, replace it in advance. To ensure your normal use, please use the toothbrush head officially designated by Flyco.

Storage
If you plan to leave the electric toothbrush unused for a long time, first clean and dry the product, and store it in a cool and dry place, avoiding direct sunlight.

FAQ

FAQ	Possible Causes	Solutions
Failure to turn on	Battery power is exhausted	Put it on the charging stand to charge
	The switch is out of order	Return to after-sales service for repair
Poor brushing effect	The toothbrush head is damaged or worn	Purchase a Flyco electric toothbrush head for replacement
	The toothbrush head is dirty	Thoroughly clean the toothbrush head
	The battery power is low	Put it on the charging stand to charge
Indicator light does not light up	Failure of the indicator light or circuit	Return to after-sales service for repair
Unable to charge normally	The electric toothbrush or charging stand is damaged	Return to after-sales service for repair
	Poor contact between the charging stand and the toothbrush	Remove the foreign matter and recharge
After fully charged, the brushing time is short	The charging environment temperature is too low or too high	Charge in an environment between 5℃ and 35℃
	The use environment temperature is too low or the brushing force is too large	Use it in a warm indoor environment
		The brushing time is related to the number of daily brushings, the use mode and the brushing force

Environmental Protection Information

Electromagnetic Fields (EMF): This product complies with relevant standards and regulations regarding electromagnetic fields. According to current scientific evidence, when used correctly and according to this user manual, the product is safe to use. This product is safe.
Environmental Protection: The built-in rechargeable battery of this product contains substances that may pollute the environment, and the battery should be disposed of safely. Before discarding the electric toothbrush, it is necessary to remove the battery and send it to the designated recycling station of the place for disposal. You can also dispose of discarded electric toothbrush and send to the designated maintenance department of the company, where the maintenance department will decompose and recycle the battery.
Disassemble the Battery: Cut off the power supply and let the electric toothbrush operate until the battery is exhausted. Tap the bottom of the handle with a hammer to remove the bottom cover, then tap the bottom of the handle again to pry open the handle shell, take out the core and remove the battery.

Warm Reminder: Please protect your eyes, hands and the workbench surface when disassembling the battery.


⚠ Only remove the rechargeable battery when discarding the electric toothbrush.

Product Specifications

Product: Electric Toothbrush	**Charging Stand Model:** CB01
Model: FT7105VN	**Input Parameter of Charging Stand:** 5V⎓ 1A
Rated Voltage: 3.6V⎓	**Rated Input Power:** 2W
Waterproof Degree: IPX7	**Date of Manufacture:** Please refer to the product body
Product Size: 29.4mm×26mm×250mm	

Please keep this user manual for future use.

Giới Thiệu Sản Phẩm

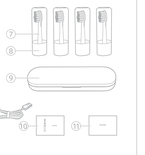

1. Tay cầm
2. Nút Bật/Tắt
- Bật nguồn
- Tắt nguồn
- Chuyển chế độ
3. Đèn báo chế độ
4. Đèn báo nguồn
5. Cáp Sạc USB
6. Đế sạc
7. Đầu bàn chải (hộp 4 chiếc)
8. Hộp đựng đầu bàn chải (hộp 4 chiếc)
9. Hộp đựng du lịch
10. Hướng Dẫn Sử Dụng
11. Thẻ Bảo Hành Hậu Mãi

Lưu Ý

1. Giữ đế sạc khô ráo. Không rút/cắm dây sạc USB bằng tay ướt để tránh điện giật.
2. Không nhúng bàn chải điện hoặc đế sạc vào nước khi sử dụng.
3. Không đặt vật kim loại lên đế sạc.
4. Giữ sản phẩm này tránh xa các từ trường mạnh (ví dụ: bếp từ) khi đang sạc.
5. Sản phẩm chỉ dùng để làm sạch răng, lợi và lưỡi. Không dùng cho mục đích khác.
6. Người đang có niềng răng, trám răng, cấy ghép răng, v.v. nên sử dụng sản phẩm dưới sự hướng dẫn của nha sĩ.
7. Đối với các vấn đề liên quan đến máy tạo nhịp tim hoặc thiết bị cấy ghép khác, hãy tham khảo ý kiến bác sĩ hoặc nhà sản xuất thiết bị trước khi sử dụng.
8. Giám sát trẻ em cẩn thận để đảm bảo chúng không chơi đùa với sản phẩm này. Người khuyết tật về thể chất, tinh thần và những người thiếu kinh nghiệm và kiến thức (bao gồm cả trẻ em) phải được sự hướng dẫn và giám sát từ người chịu trách nhiệm về sự an toàn của người đó.
9. Tay cầm của bàn chải điện đánh răng điện có thể được làm sạch bằng nước sạch, nhưng không được ngâm trong nước quá lâu.
10. Không làm sạch đầu bàn chải, tay cầm bàn chải điện đánh răng điện hoặc đế sạc trong máy rửa bát.
11. Không luộc đầu bàn chải.
12. Không sử dụng nước muối, nước nóng trên 60℃, chất làm loãng, xăng, cồn hoặc các hóa chất khác để làm sạch bàn chải điện đánh răng điện và đế sạc.
13. Sản phẩm này là thiết bị sử sinh cá nhân. Vui lòng không dùng chung đầu bàn chải với người khác.
14. Hãy thay đầu bàn chải mỗi ba tháng. Nếu có dấu hiệu bị mòn, hãy thay sớm hơn. Không sử dụng đầu bàn chải không do công ty chúng tôi cung cấp.
15. Sản phẩm này chứa pin sạc tích hợp. Không được vứt vào lửa, hơ nóng, sạc, sử dụng hoặc đặt trong môi trường nhiệt độ cao.

16. Dây sạc USB không thể thay thế. Nếu bị hỏng, thiết bị này (đế sạc) cần được loại bỏ.
17. Không sử dụng đế sạc không do công ty chúng tôi cung cấp để sạc bàn chải điện.
18. Trong quá trình sử dụng và sạc, bàn chải điện và đế sạc có thể hơi nóng lên. Đây là hiện tượng bình thường. Vui lòng yên tâm sử dụng.
19. Nếu bàn chải điện hoặc đế sạc bị hỏng, không nên tiếp tục sử dụng. Xử lý tùy theo loại sự cố. Nếu cần thiết, gửi đến bộ phận bảo trì của công ty chúng tôi để sửa chữa.
20. Hãy bảo vệ sản phẩm này tránh bị rơi hoặc va đập.
21. Thiết bị này không dành cho người (bao gồm trẻ em) có khả năng thể chất, giác quan hoặc tinh thần suy giảm, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người chịu trách nhiệm đảm bảo an toàn cho họ.
Trẻ em cần được giám sát để đảm bảo không nghịch thiết bị.
22. Thiết bị này chỉ được cung cấp điện bằng điện áp cực thấp an toàn tương ứng với thông số ghi trên thiết bị.
23. CẢNH BÁO: Chỉ sử dụng nguồn điện bên ngoài có các thông số sau: đơn vị điện áp cực thấp an toàn (SELV) phù hợp với tiêu chuẩn IEC 60335 với đầu ra 5V⎓ 1A.
24. Loại pin: Pin lithium-ion
25. Dải nhiệt độ bình thường để sạc pin: 5℃–35℃.
26. Không để thiết bị hoặc pin tiếp xúc với nhiệt độ quá cao.
27. Lưu ý nguy cơ ngắn mạch các cực của thiết bị sử dụng pin hoặc pin bị đoản mạch do tiếp xúc với vật kim loại.
28. Thiết bị này có chứa pin không thể thay thế. Khi pin hết tuổi thọ, thiết bị cần được xử lý đúng cách.
29. Để biết thông tin chi tiết về việc tháo và xử lý pin đã qua sử dụng một cách an toàn, vui lòng tham khảo "Thông Tin Bảo Vệ Môi Trường".
30. Không để da hoặc mắt tiếp xúc với pin bị rò rỉ. Nếu xảy ra, hãy rửa sạch ngay với nước và tìm kiếm sự chăm sóc y tế.

Hướng Dẫn Sử Dụng



Lắp đầu bàn chải
1. Căn chỉnh đầu bàn chải sao cho hướng của lông bàn chải trùng với mặt trước của tay cầm bàn chải.
2. Gắn chặt đầu bàn chải theo chiều xuống trục kim loại (Hình ②).
(Một khe hở nhỏ giữa đầu bàn chải và tay cầm là điều bình thường.)

Bắt đầu đánh răng
Gợi ý nhẹ nhàng: Để tránh vảng kem đánh răng, hãy đưa đầu bàn chải vào miệng trước khi bật thiết bị.
1. Làm ướt lông bàn chải và cho lượng kem đánh răng vừa đủ lên.
2. Đặt lông bàn chải vào răng theo góc 45 độ (Hình ③) và ấn nhẹ vừa phải.
3. Nhấn nút nguồn để bật thiết bị. Thiết bị điện đánh răng điện được đặt sẵn ở chế độ làm sạch theo mặc định khi xuất xưởng (Hình ③). Nếu cần chọn chế độ khác, nhấn nút nguồn thêm lần nữa trong vòng 5 giây sau khi bật.
4. Di chuyển bàn chải đánh răng chậm rãi bằng các chuyển động nhỏ qua lại. Điều này giúp lông bàn chải tiếp cận kẽ răng. Không ấn quá mạnh.

Hướng Dẫn Sử Dụng

5. Bàn chải điện được trang bị chức năng hẹn giờ thông minh. Tạm dừng khoảng 30 giây một lần để nhắc người dùng đổi vùng đánh răng. Bàn chải điện sẽ tự tắt sau khoảng 2 phút sử dụng (Hình ④).

Chế độ hoạt động
1. Bàn chải điện được cài mặc định ở chế độ "sạch" khi xuất xưởng.
2. Chuyển đổi chế độ: Nhấn lại nút công tắc trong vòng 5 giây sau khi bật nguồn để chuyển chế độ. Bạn cũng có thể nhấn lại nút công tắc trong vòng 5 giây sau khi tiếp tục hoạt động từ trạng thái tạm dừng. Nếu bạn nhấn nút công tắc trong vòng 5 giây sau khi tiếp tục hoạt động từ trạng thái tạm dừng để chuyển chế độ, thiết bị sẽ tạm dừng.
3. Tắt / Tạm dừng: Nhấn giữ nút nguồn để tắt. Nếu bạn nhấn nút công tắc sau hơn 5 giây kể từ khi bật nguồn, thiết bị sẽ tạm dừng hoạt động. Nhấn nút công tắc một lần nữa để tiếp tục hoạt động. Nhấn nút công tắc trong vòng 5 giây sau khi tiếp tục hoạt động từ trạng thái tạm dừng để chuyển chế độ. Nếu bạn nhấn nút công tắc sau hơn 5 giây kể từ khi tiếp tục hoạt động, thiết bị sẽ tạm dừng.
4. Chế độ ghi nhớ: Khi thiết bị được tắt thủ công hoặc tự động ở bất kỳ chế độ nào, hệ thống sẽ lưu lại chế độ đã sử dụng gần nhất. Lần bật tiếp theo, bàn chải sẽ khởi động ở chế độ này.
5. Bàn chải điện này có năm chế độ:
-Chế độ sạch: Loại bỏ hiệu quả mảng bám răng, phù hợp dùng hàng ngày, thời gian hoạt động khoảng 2 phút.
-Chế độ trắng: Trong khi làm sạch hiệu quả, chế độ này cũng giúp làm trắng răng, với thời gian khoảng 2 phút.
-Chế độ đánh bóng: Thực hiện làm sạch sâu và loại bỏ hiệu quả các vết ố trên răng, với thời gian khoảng 2 phút.
-Chế độ nhạy cảm: Thiết kế đánh cho người dùng có răng và nướu nhạy cảm, với thời gian khoảng 2 phút.
-Chế độ chăm sóc nướu: Có tác dụng massage, với thời gian khoảng 2 phút.

Hướng Dẫn Sử Dụng

⚠ **1. Thiết bị sẽ tự động tắt sau khi tạm dừng khoảng 30 giây.**
2. Khi thời gian hoạt động hiệu quả vượt quá 110 giây, việc nhấn nút công tắc sẽ không tạm dừng thiết bị mà sẽ tắt nguồn trực tiếp.

Tình trạng pin (khi tay cầm bàn chải đánh răng không được đặt trên đế sạc):
Sau khi nhấn nút công tắc của bàn chải điện, đèn báo pin trên tay cầm sẽ hiển thị mức dung lượng pin.
1. Đèn màu xanh sáng liên tục: Pin đã được sạc đầy, và bàn chải điện có thể được sử dụng bình thường.
2. Đèn báo pin màu cam sáng liên tục: Pin yếu. Vui lòng sạc bàn chải điện kịp thời.
3. Đèn báo pin màu cam nhấp nháy: Pin đã cạn. Vui lòng sạc bàn chải điện kịp thời.

Hướng Dẫn Sử Dụng

Đang sạc
Gợi ý nhẹ nhàng: Khi sạc thiết bị, cần sử dụng bộ đổi nguồn đầu ra công suất thấp với điện áp đầu ra không vượt quá 5V và dòng điện đầu ra không vượt quá 1A.
1. Khi đèn màu cam của chỉ báo pin trên bàn chải điện sáng, điều đó cho biết pin của bàn chải đánh răng đang yếu. Vui lòng sạc kịp thời.
2. Cắm cáp USB của đế sạc vào bộ đổi nguồn, sau đó cắm vào ổ điện, rồi đặt bàn chải điện lên đế sạc.
3. Khi tay cầm bàn chải điện được đặt đúng cách lên đế sạc, thiết bị sẽ bắt đầu sạc và đèn báo pin sẽ nhấp nháy màu xanh lá.
4. Khi bàn chải điện được sạc đầy, đèn báo pin sẽ sáng màu xanh lá đi đều.
5. Trong quá trình sạc, nếu đèn báo pin nhấp nháy màu cam, điều đó có nghĩa là phát hiện có vật lạ hoặc xảy ra lỗi giao tiếp giữa tay cầm và đế sạc. Trong trường hợp này, vui lòng loại bỏ vật lạ trên đế sạc hoặc nhấc tay cầm ra khỏi đế và đặt lại.
6. Thời gian sạc liên tục khoảng 12 giờ. Nếu có thể sạc đầy thiết bị. Nếu sử dụng bộ đổi nguồn có thông số khác, thời gian sạc có thể thay đổi.
7. Một bàn chải điện được sạc đầy có thể sử dụng được khoảng 300 phút, nhưng thời gian sử dụng thực tế có thể ngắn hơn tùy theo thói quen đánh răng.

⚠ **Không đặt vật kim loại lên đế sạc, nếu không có thể ảnh hưởng đến việc sạc của bàn chải điện và có thể khiến vật kim loại bị quá nhiệt.**

Bảo Dưỡng và Vệ Sinh



Làm sạch
1. Rửa đầu bàn chải và lông bàn chải sau mỗi lần sử dụng, và giữ nơi thoáng khí (Hình ⑤).
2. Tháo đầu bàn chải khỏi tay cầm và rửa phần tiếp nối của đầu bàn chải bằng nước ấm ít nhất một lần mỗi tuần (Hình ⑥).
3. Thường xuyên tháo đầu bàn chải và rửa trục kim loại bằng nước ấm để đảm bảo loại bỏ phần kem đánh răng còn sót lại (Hình ⑦).
4. Thường xuyên lau bề mặt sản phẩm bằng khăn ẩm (Hình ⑧).

⚠ **1. Không rửa đầu bàn chải, tay cầm, đế sạc hoặc hộp du lịch bằng máy rửa chén.**
2. Rút cáp sạc USB ra khỏi nguồn điện trước khi vệ sinh đế sạc.
3. Không làm sạch sản phẩm bằng cồn isopropyl, giấm hoặc thuốc tẩy vì có thể gây đổi màu hoặc nứt vỡ sản phẩm.
4. Không ấn vòng cao su trên trục kim loại bằng vật sắc nhọn vì có thể gây hư hỏng.

Bảo Dưỡng và Vệ Sinh

Thay thế đầu bàn chải
Đầu bàn chải bị mòn có thể ảnh hưởng đến hiệu quả làm sạch. Khuyến nghị thay đầu bàn chải mỗi ba tháng. Nếu có dấu hiệu bị mòn trên đầu bàn chải, hãy thay thế sớm hơn. Để đảm bảo sử dụng bình thường, vui lòng sử dụng đầu bàn chải do Flyco chỉ định chính thức.

Bảo quản
Nếu bạn dự định không sử dụng bàn chải điện trong thời gian dài, hãy vệ sinh và làm khô sản phẩm trước, sau đó bảo quản ở nơi khô ráo, thoáng mát, tránh ánh nắng trực tiếp.

Câu Hỏi Thường Gặp

Câu Hỏi Thường Gặp	Nguyên nhân có thể	Giải pháp
Không bật được	Pin đã hết	Đặt lên đế sạc để sạc
	Công tắc bị hỏng	Gửi về trung tâm bảo hành để sửa chữa
Hiệu quả đánh răng kém	Đầu bàn chải bị hỏng hoặc mòn	Mua đầu bàn chải điện Flyco để thay thế
	Đầu bàn chải bị bẩn	Đầu bàn chải bẩn
	Pin yếu	Đặt lên đế sạc để sạc
Đèn báo không sáng	Đèn báo hoặc mạch điện bị hỏng	Gửi về trung tâm bảo hành để sửa chữa
Không thể sạc bình thường	Bàn chải điện hoặc đế sạc bị hỏng	Gửi về trung tâm bảo hành để sửa chữa
	Có dị vật giữa đế sạc và bàn chải	Loại bỏ dị vật và sạc lại
	Nhiệt độ môi trường sạc quá thấp hoặc quá cao	Sạc trong môi trường từ 5℃ đến 35℃
Sau khi sạc đầy, thời gian sử dụng ngắn	Nhiệt độ môi trường sử dụng quá thấp hoặc lực đánh răng quá mạnh	Sử dụng ở môi trường trong nhà ấm áp
		Thời gian đánh răng phụ thuộc vào số lần đánh mỗi ngày, chế độ sử dụng và lực đánh

Thông Tin Bảo Vệ Môi Trường

Trường điện từ (EMF): Sản phẩm này tuân thủ các tiêu chuẩn và quy định liên quan đến trường điện tử. Theo bằng chứng khoa học hiện tại, khi được sử dụng đúng cách và theo hướng dẫn sử dụng, sản phẩm này an toàn.
Bảo vệ môi trường: Pin sạc tích hợp trong sản phẩm này chứa các chất có thể gây ô nhiễm môi trường, và pin cần được xử lý đúng cách. Trước khi vứt bỏ bàn chải điện, cần tháo pin và gửi đến trạm tái chế được chỉ định tại địa phương để xử lý. Bạn cũng có thể mang bàn chải điện đã bỏ đi đến bộ phận bảo trì được chỉ định của công ty, nơi pin sẽ được tháo rời và tái chế.
Tháo pin: Ngắt nguồn điện và để bàn chải điện hoạt động cho đến khi pin cạn kiệt. Gõ nhẹ đáy tay cầm bằng búa để tháo nắp đậy, sau đó gõ lại đế lách vỏ tay cầm và lấy lõi bên trong ra để tháo pin.
Gợi ý nhẹ nhàng: Vui lòng bảo vệ mắt, tay và bề mặt bàn làm việc khi tháo pin.

⚠ **Chỉ tháo pin sạc khi loại bỏ bàn chải điện.**

Thông Số Kỹ Thuật Sản Phẩm

Sản phẩm: Bàn chải điện	**Mã đế sạc:** CB01
Mẫu mã: FT7105VN	**Thông số đầu vào đế sạc:** 5V⎓ 1A
Điện áp định mức: 3.6V⎓	**Công suất đầu vào định mức:** 2W
Mức độ chống nước: IPX7	**Ngày sản xuất:** Vui lòng tham khảo thân máy sản phẩm
Kích thước sản phẩm: 29.4mm×26mm×250mm	

Vui lòng giữ lại hướng dẫn sử dụng này để tham khảo sau này.

FT7105VN 说明书	
编制/日期	
校对/日期	
审核/日期	
批准/日期	