Operation Instruction Manual

Soymilk Maker

S-26338

PREFACE

Thank you for choosing our soymilk maker. We have written this manual to aid you in using and maintaining this product safely and properly.
Please read this manual carefully before using, and keep it for your reference.

IMPORTANT SAFEGUARDS

Safety use

Warning:

1. This product is not for individuals who are body, sensory or mentally disabl(by (including children), or for those who lack of experience and knowledge, unless there are adequate supervising or instructing to use the product. Please make sure children are not playing with this product.
2. Please use 3 pin plug with rated current as 15A and alternating voltage as 220-240V.
3. Please ensure the plug is plug on. If the plug go fully, the machine might be possibility to cause fire due to electric shock or overheating.
4. Do not damage the power cord and plug of socket. Never conduct anything as below to power cord: modifying, bending, stretching, placing at high temperature. Area, placing heavy objects on top or bundling cable and machine together. When the power cord is damaged, please contact customer service.
5. Never use for other purposes which are not mentioned in the manual.
6. Never try to modify, disassembly or repair by unauthorized technician.
7. Please do not submerge the core product in water, or under running water.
8. Never apply external force to the water inlet/outlet nozzle.
9. Never process high fiber food like mango, licorice etc. to avoid unable to crush evenly and block the inlet/outlet nozzle.
10. Use provided glass cup and place at the circle groove of the machine. The placing glass cup may affect operation of inlet/outlet nozzle.
11. The product must be kept at least 30cm away from the ignition source to avoid damage to the product or the risk of fire.

SAVE THESE INSTRUCTIONS

Notice:

1. Please do not open the blender cover when cooking.
2. When room temperature is above 30℃, preset time must not exceed 8 hours.
3. Do not put glass cup on flame or induction cooker to heat.
4. Please do not touch the machine after cooking or hot drying, the glass cup, nozzle, blender and blender cup is hot.
5. If there are uncrushed ingredients in blender may required to clean, please select "Clean/Dry" key.
6. Each cooking must follow recipe using measuring cup to add in ingredients accordingly.
7. Do not unplug when auto cleaning in process.
8. During preset function, small variances between cooking complete time from standard preset time is normal and doesn't affect the quality of drink. (Only applicable to Preset function)
9. Please do not drink if there is abnormal interruption of power supply more than 5 minutes.
10. Careful with the sharp blades when washing blender manually.
11. Please ensure to put waste water disposal cup in place before auto cleaning.
12. After adding ingredients into blender compartment, please ensure the blender's surrounding is clean and overfluid is covered airtight.
13. Please use purified water for each cooking.
14. Cooking using colored ingredients may cause discoloration.
15. Never add water inside blender compartment when making drinks.
16. This product can only be used with Joyoung blender mixers attitude.
17. This product can only be used in areas which temperature range from 4°C~40°C
18. Please cut soft food like tofu, banana, remove seeds and cut cube for cooking.
19. Cooking time will adjust automatically according to voltage. Open up the blender cover after auto clean process.
20. When making drinks containing rice, it is normal for the blanding jar to have slightly sticky rice inside.
21. During cooking, it is strictly prohibited to move the machine to avoid food spillage, which may cause burns or electric shock. Do not touch the blending jar cover or vent valve to avoid burns.
22. It is prohibited to use this product empty (without ingredients in the cup) or overloaded (with ingredients exceeding the rated value).

Tip for use

- Please drink as soon as possible while it is still fresh.
- Infants, individuals with kidney failure and gastrointestinal dysfunction should choose soymilk with low concentrations or reduce consumption if necessary.

COMPONENTS AND FUNCTIONS

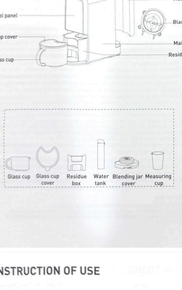

HOW TO USE

* For the first time using, please touch "Clean / Dry" once, select the "Deep Cleaning" function (the cleaning time is displayed as 20 minutes, which means deep cleaning), and touch "Start/Cancel." for high-temperature cleaning and altitude detection.

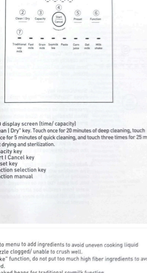

1. LED display screen (time/ capacity)
2. "Clean / Dry" key. Touch once for 20 minutes of deep cleaning, touch twice for 5 minutes of quick cleaning, and touch three times for 25 minutes of hot drying and sterilization.
3. Capacity key
4. Start \ Cancel key
5. Preset key
6. Function selection key
7. Function manual

INSTRUCTION OF USE

1. Put the ingredients (Eg: beans/rice) and fill up the water tank (purified water) Max level. Open the blender cover, add in the ingredients and select preference "Function". Please refer the menus for the water level and ingredients quantity with measuring cup provided.

2. Function selection
Press "Function" key to select preference cooking menu. Press once, the light will flashes upon function selected.

3. Select capacity
Press the "Capacity" key
The capacity increases by 100ml, with each press, available from 300ml, to 1200ml, ("Paste"ranges from 300ml, to 800ml,, and "Milkshake" cannot be selected for capacity).

4. Start/Cancel key
Press "Start/Cancel" key to cook; Long press for 2 secs to cancel. After the machine program is started, the process can be cancelled before blending jar enters water; When blending jar is filled with water, canceling the program will enter the "cleaning" program, which automatically crushes the ingredients inside blending jar and discharges them from the discharge nozzle. Do not drink the discharged drinks at this time to avoid the risk of drinking the ingredients that are not cooked.

5. Auto cleaning "Clean / Dry"
The machine will automatically after each cooking is finished. Please do not remove the residue box, but glass cup can be removed. Pour out remaining water from residue box after cleaning is done.
* Note: Do not touch the inner blender surface to prevent burns.

1. Please refer to menu to add ingredients to avoid uneven cooking (liquid overflow/ nozzle clogged/ unable to crush well).
2. For "Milkshake", function, do not put too much high fiber ingredients to avoid nozzle clogged.
3. Do not use soaked beans for traditional soymilk function.
4. You can prepare a filter for soymilk to function for better taste.
5. Corn juice may have residual corn husks, which is a normal phenomenon.
6. Please do not add hard food in (such as rock candy, ice cubes etc) to avoid machine damage.
7. It is recommended to power on first and then add ingredients to the blanding jar.

Menu function

1. These are recommended menus for reference only. Due to different types and characteristics of ingredients used in practice, the drinks performance may vary.
2. The quantities of ingredients are all calculated based on medium sized ingredients

Function	Recipe	Capacity	Preference Ingredients Ratios (use measuring cup provided)
Traditional soymilk	Traditional soymilk	300	Dry beans approx 25g
		600	Dry beans approx 45g
		900	Dry beans approx 65g
		1200	Dry beans approx 80g
Grain milk	Classic grain milk	300	Dry beans approx 15g Rice approx 10g Millet approx 5g Cracked corn approx 5g Wheat approx 5g
		600	Dry beans approx 30g Rice approx 20g Millet approx 10g Cracked corn approx 10g Wheat approx 10g
		900	Dry beans approx 45g Rice approx 30g Millet approx 15g Cracked corn approx 15g Wheat approx 15g
		1200	Dry beans approx 60g Rice approx 40g Millet approx 20g Cracked corn approx 20g Wheat approx 20g

Function	Recipe	Capacity	Preference Ingredients Ratios (use measuring cup provided)
Fast milk	Fast soymilk	300	Dry beans approx 25g
		600	Dry beans approx 45g
		900	Dry beans approx 65g
		1200	Dry beans approx 80g
Soymilk tea	Soymilk black tea	300	Dry beans approx 25g Black tea 1g Sugar 7g (1 teaspoon)
		600	Dry beans approx 45g Black tea 2g Sugar 15g (3 teaspoons)
		900	Dry beans approx 65g Black tea 3g Sugar 15g (3 teaspoons)
		1200	Dry beans approx 80g Black tea 4g Sugar 15g (3 teaspoons)
Oat milk	Oat milk	300	Instant oatmeal approx 9g Cashew 6g approx 7 cashews
		600	Instant oatmeal approx 18g Cashew 12g approx 6 cashews
		900	Instant oatmeal approx 27g Cashew 18g approx 9 cashews
		1200	Instant oatmeal approx 36g Cashew 24g approx 12 cashews
Corn juice	Corn juice	300	Fresh corn grain approx 40g Millet approx 10g Sugar 15g
		600	Fresh corn grain approx 80g Millet approx 20g Sugar 15g
		900	Fresh corn grain approx 120g Millet approx 30g Sugar 20g
		1200	Fresh corn grain approx 160g Millet approx 40g Sugar 20g

Function	Recipe	Capacity	Preference Ingredients Ratios (use measuring cup provided)
Paste	Rice oatmeal paste	300	Rice approx 15g Instant oatmeal approx 15g Walnut kernel 4g approx 1 walnut kernel
		600	Rice approx 30g Instant oatmeal approx 30g Walnut kernel 8g approx 1-1/2 pieces
		800	Rice approx 38g Instant oatmeal approx 38g Walnut kernel 10g approx 2 walnut kernel
Milkshake	Banana milkshake	/	Banana 240g approx 2 bananas Milk 240g

Preset function

1. Add in ingredients using measuring cup into blending jar and fill up purified water at Max level.
Close the blender cover and water tank with the glass cup in position.

2. Select "Function"
Press to select the desired preset function, the selected function indicator light flashes. (Milkshake function cannot be reserved)

3. Select capacity
Press the "Capacity" key
The capacity increases by 100ml, with each press, available from 300ml, to 1200ml, ("Paste"ranges from 300ml, to 800ml,, and "Milkshake" cannot be selected for capacity).

4. Set time
Press the "Preset" key to set desired time. Each time you press, time increases 15 minutes. Default time is 8hours, preset time from 1 - 24 hours.

5. Start Cooking
Press the "Start" key to start counting down; long press for 2 seconds to cancel selected function.

CLEANING / MAINTENANCE & CARE / HOT DRY

Blending cup cleaning

1. Select "Clean / Dry"
Touch once for 20 minutes of deep cleaning, touch twice for 5 minutes of quick cleaning, and touch three times for 25 minutes of hot drying and sterilization.

2. Start washing
Press the "Clean / Dry" key once, then press "Start/ Cancel" key to start. Long press "Start/Cancel"for 2 seconds to cancel.

Maintenance & Care

After using the machine for sometime, oily residues may scale on the blanding jar and stainless steel blade. Add in special cleaning agent for soybean milker into blending jar. Press the "Clean / Dry" key once for 20 minutes of deep cleaning, then press "Start/Cancel"to start. After the machine has been working for 30 times, it will automatically run into 20 minutes of deep cleaning when powered on.

Hot dry

Press the "Clean/Dry" key 3 times to enter 25 minutes of hot drying and sterilization. Keep the blending jar cover close but steam valve off to go through hot dry process. Long press "Start/Cancel" for 2 seconds to pause/stop. Do not touch the blending jar throughout the process to avoid injured from steam air.

Note: Open up the blending jar cover to dry off is sufficient after each cooking for all functions, there is no need to use the "hot dry" function.

Cleaning Parts

1. All 7 items above can be removed from the machine and wash under running water tap. But do not immerse blending jar cover in water
2. When there is any blockage at the water outlet nozzle caused by excessive beans, scoop out the cooking ingredients manually from blending jar and press the "Clean/Dry" key for cleaning.
3. After many times of cooking process, if there is any leftovers stick on the steam lid (steam vent cover), you may remove the blanding jar cover and steam valve for cleaning.
4. After cleaning the machine parts is finished, fix back into the machine after wipe or dry off, place and store at dry and well-ventilated room.

Trouble removal

Fault phenomenon	Cause analysis	Countermeasure
LED display screen indicator not light up	The plug didn't plug in fully	Fix the plug into machine fully
	Control panel not working	Please contact customer service
Indicator light on, machine not working	Function not selected	Select the preference function
	No water in water tank or water in tank isn't placed correctly	Add water into the water tank (Max) and put it in place
	Temperature sensor or water level electrode error	Please contact customer service
Water can't get into blender or no outflow from water function	Breakdown of pump	Please contact customer service
	Filter at the bottom of water tank clogged	Remove the filter from the bottom of water tank,install back in place after wash

Fault phenomenon	Cause analysis	Countermeasure
The motor can't stop work.	Water seepage into the head	Please contact customer service
Heating from time to time	Breakdown of temperature sensor	Please contact customer service
The function keys no response	Sensing interval is shor	Resize it 2 minutes after power off
	Control panel key not work	Please contact customer service
The ingredients can't be broken into pieces	Too much/little ingredient	Add right amount of ingredients
	Machine not working	Please contact customer service
Overflow	Select the wrong function-work	Choose the right function
	Wrong function selected	Choose the right function
	Too much ingredients	Add right amount of ingredients according to measuring cup and water needed
	Machine not working	Please contact customer service
Outcome too thick (straw)	The blender is dirty	Ensure blender is thoroughly clean & dry
	Too much ingredients	Add right amount of ingredients according to measuring cup and water needed
The time of making drinks too long, others are normal	Water temperature is too low	Use warm water
Drinks does not flow into glass cup	Wrong function selected	Choose the right function
	Glass cup doesn't place correctly	Put glass cup in place
	Water outlet nozzle break-down	Please contact customer service
Remaining water does not flow into waste water disposal cup	Waste water cup not in place	Put waste water cup in place
Abnormal whistle sound	Glass cup not in place	Put glass cup in place
	Breakdown of water outlet	Please contact customer service
	Friction in machine	It's normal to have whistle sound
Abnormal interruption of power supply	Power cut within 20 sec	Resume back to normal cooking after power is on
	Power cut more than 30 sec	Power on press "Clean/Dry"for cleaning cooking residues inside the blender.To restart,add in ingredients to start cooking

Error code

Error prompt. LED control display shows error messages, other display lights are off and the buzzer sounds.

Exception code	Explanation	Suggested countermeasures
E01	Zero-crossing signal loss	Please contact customer service
E02	Blending jar cover is not installed or doesn't install correctly	Check Blending jar cover to make sure it well installed
E03	Input voltage too high, above 260V	Please contact customer service
E04	Input voltage too low, below 176V	Please contact customer service
E05	NTC short circuit	Please contact customer service
E06	NTC open circuit	Please contact customer service
E07	Serial communication failur	Please contact customer service
E08	Abnormal motor signal	Too much ingredient, please add ingredients according to the recipes in the manual
E10	Abnormal motor signal	Please contact customer service
	No current while heating	Too much ingredient, please add ingredients according to the recipes in the manual
E11	No current while heating	Please contact customer service
E12	Abnormal standby current	Please contact customer service
E13	Heating timeout	Please contact customer service
E23	Glass cup doesn't place correctly	Check glass cup to put in place
E24	Full residue box or not placed properly	Place the residual box correctly according to the instructions or pour out the remaining water in the residual box
E25	Abnormal rotary valve signal	Fill up water into water tank (Max)/ Clean the discharge valve or power off for cleaning, or please contact customer service
E28	No water in water tank or filter at the bottom of water tank clogged	Fill up water into water tank (Max)/ Wash the filter at the bottom of water tank.
E38	Too much ingredient	Too much ingredient, please add ingredients according to the recipes in the manual

Note: Please do not disassembly the machine personally, please contact Customer Service for repair.