技术要求：
1. 尺寸：100 ×70mm
2. 材质：128g/㎡ 铜版纸
3. 工艺：骑马钉
4. 应符合0FC.507.002《 说明书及类似印刷品技术条件》的要求。
5.字体：阿里巴巴普惠体 3.0（85 Bold）
阿里巴巴普惠体 3.0（55 Regular）
阿里巴巴普惠体 3.0（45 Light）
6. 颜色：C: 0 M: 0 Y: 0 K: 60
PANTONE 429 C

FLYCO
Shanghai Flyco Electrical Appliance Co., Ltd.
Address: No. 555, East Guangfulin Road, Songjiang District, Shanghai, China
Shanghai Flyco Electrical Appliance Co., Ltd.
Địa chỉ: Số 555, Đường Đông Quang Phúc Lâm, Quận Tùng Giang, Thượng Hải, Trung Quốc
http://www.flyco.com
Made in China



FLYCO


FS928VN/FS929VN
Hướng Dẫn Sử Dụng

ENGLISH 1-10
Tiếng Việt 11-20

⚠ Please read this user manual carefully before the use of the product and keep it properly.
⚠ **Vui lòng đọc kỹ hướng dẫn sử dụng này trước khi sử dụng sản phẩm và giữ gìn cẩn thận.**

Product Introduction

1. Protective Cover
2. Head Cover
3. Head Cover Release Button
4. On/Off Button/Travel Lock
5. LED Display
6. Shaving Head Holder
7. Shaving Head
8. Sideburns Trimmer
9. Push-button of Sideburns Trimmer
10. USB Power Cable
11. Cleaning Brush
12. User Manual
13. After-sales Service Card

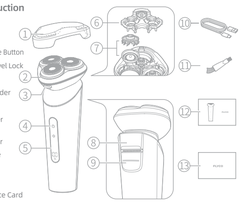

Precautions

1. Keep the USB power cable dry. Do not plug and unplug the USB power cable with wet hands to avoid electric shock.
2. Ensure that the rated voltage marked on the electric shaver corresponds to the output voltage of the charging device used.
3. If the electric shaver has been damaged, do not use it again, handle it according to the type of malfunction, when necessary send it to the company's maintenance department.
4. Do not directly pull the USB power cable when removing and inserting the charging plug.
5. This product can only be charged with the supporting USB power cable.
6. Please check whether the shaving head is damaged or deformed before use, so as not to damage your skin.
7. Do not use salt water, hot water above 60℃, diluent, gasoline, alcohol or other chemicals to clean the electric shaver.
8. When traveling, ensure that the protective cover is placed on the electric shaver to protect the shaving head.
9. In the process of use and charging, the electric shaver will get slightly heated, which is a normal phenomenon, please use it with confidence.
10. Please do not charge the electric shaver for a long time.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.
12. Suitable for cleaning under an open water tap.
WARNING: Detach the hand-held part from the supply cord before cleaning it in water.

13. The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
14. WARNING: Use only an external supply with the following specifications: safety extra low voltage (SELV) unit that complies with standard IEC 60335 with the output of 5V⎓1A.
15. Battery type: Lithium-ion.
16. Normal temperature range for charging the battery: 5℃~35℃.
17. Do not expose the appliance or battery to excessive temperatures.
18. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
19. This appliance contains batteries that are non-replaceable. When the battery is at the end of life, the appliance shall be properly disposed of.
20. For details regarding safe removal and disposal of used batteries, please refer to "Environmental Protection Information".
21. Do not contact leaking batteries with skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Instructions for Use



Charging
1. When the display shows "05%", indicating low battery and reminding you to charge (Figure 1).
2. Connect the power adapter and USB cable, insert the USB Type-C end of the cable into the electric shaver and ensure it is connected as shown in Figure 2, then plug the power adapter into the power outlet.
3. When the power is connected, the display will light up, and the digital display will increase with the extension of charging time, indicating that it is charging (Figure 3).
4. It takes about 1 hour of continuous charging to be fully charged, and after it's full, it will display "100%", indicating that the shaver has been fully charged (Figure 4).

Battery Life
The LED display of this product can show the remaining power. A fully charged electric shaver can be used for about 60 minutes, but the shaving time may be shorter than expected due to different shaving habits, cleaning habits, and beard types.

Instructions for Use



Shaving
1. Press the On/Off button to turn the electric shaver on (Figure 5).
2. Move the electric shaving head against the growth direction of the beard on the skin in a straight and circuitous motion (Figure 6).
3. The hair on the neck can also be shaved (Figure 7).
4. Slide the sideburn trimmer button downward to eject the trimmer for precise grooming of sideburns, mustache, or beard (Figure 8).

Shaving Finished
Press the On/Off button again to turn the shaver off, then put on the protective cover to prevent damages to the shaving head.

⚠ Do not use the shaver when the shaving head is damaged, so as not to hurt your skin.

Instructions for Use



Travel Lock
1. Press and hold the electric shaver On/Off button for 3 seconds, the " " symbol on the LED display will flash, indicating that it is now locked (Figure 9).
2. Repeat the above operation, the LED display will show the " " symbol flashing with a countdown of 3 seconds, indicating that it is now unlocked (Figure 9).

Smart Display Content
1. When the electric shaver is turned on, the LED display will show the " " symbol lighting up, indicating that the electric shaver has entered the working state (Figure 10).
2. When the LED display shows the " " symbol flashing, prompting that the electric shaver needs to be cleaned (Figure 11).
3. When the electric shaver is overloaded, it will automatically shut down, the LED display will show both the " " and " " symbols flashing simultaneously, entering locked rotor protection, the electric shaver needs to be cleaned (Figure 12).

Care and Maintenance



Cleaning with Water
1. Before cleaning, ensure the electric shaver is detached from the power adapter and the On/Off button is switched off (Figure 13).
2. Press the head release button to open the head cover (Figure 14).
3. Directly wash the shaver shaving head under the faucet (Figure 15). Warm water is preferred, but hot water above 60 ℃ is not allowed.
4. After rinsing, carefully shake off excess water and let the shaver air dry completely.

Storage
It is recommended to cover the protective cover to prevent the shaving head from being damaged and to avoid dust accumulation inside.

Replacing the Shaving Head
For optimal shaving results, it is recommended to replace the shaving head every two years. Please be sure to use the original Flyco electric shaver FRB shaving head. The shaving head can be purchased at designated Flyco dealers.

⚠ The handheld part can be cleaned in water only when the power cable is disconnected from it, This electric shaver can be used for shaving directly while connected to the power adapter for charging.

Care and Maintenance



Deep Cleaning
1.In the open head cover, rotate the holder release knob counterclockwise to remove the holder (Figure 16).
2. Remove the shaving head (Figure 17).
3.Separate the shaving head and clean it thoroughly with a cleaning brush (Figure 18).
4.After cleaning, reassemble the shaving head and holder in the reverse order into the head cover.

Maintenance and Care
1. It is recommended to clean the shaving head every two months, and drip lubricating oil onto the shaving head for lubrication after cleaning.
2.The electric shaver shall be cleaned regularly to ensure better shaving effect.

⚠ It is not allowed to clean the shaving head with a towel or tissue, as it may damage the shaving head.

FAQ

FAQ	Possible Causes	Solutions
Poor shaving effect	The shaving head is damaged or worn	Please purchase Flyco's FRB shaving head for replacement
	The shaving head is dirty	Thoroughly clean the shaving head
	Low battery	Connect the power supply and charge it
The shaver is not working after startup	Battery exhausted	Connect the power supply and charge it
	On/Off button not working	Return to after-sales service for repair
The LED display doesn't light up	Fault of LED display or circuit	Return to after-sales service for repair
Skin sensitization after shaving	It takes some time for your skin to get used to the shaver	The symptoms will disappear after 2-3 weeks' adaptation
Charging failure	The electric shaver or USB power cable is damaged	Return to after-sales service for repair
	The ambient temperature for charging is too low or too high	Charge in an environment between 5℃ and 35℃
Less than 60 minutes' shaving time after fully charged	The shaving time is related to shaving method, cleaning habit and beard density	

Environmental Protection Information

Environmental Protection: The built-in rechargeable battery of this product contains substances that may pollute the environment, and the battery should be disposed of safely. Before discarding the electric shaver, it is necessary to remove the battery and send it to the officially designated recycling station for disposal. You can also send discarded electric shavers to the designated maintenance department of the company, where the maintenance department will decompose and recycle the battery.

Disassemble the Battery: Cut off the power and let the electric shaver run until the battery is depleted. Unscrew all screws on the electric shaver, disassemble the shaver, and remove the battery.

⚠ Only remove the rechargeable battery when discarding the electric shaver.


Product Specifications

Product: Electric Shaver	**Product Size:** 162x65x61mm
Model: FS928VN/FS929VN	**Rated Current:** 1A
Rated Voltage: 5V⎓	**Date of Manufacture:** Please refer to the product body

Please keep this user manual for future use.

Giới Thiệu Sản Phẩm

1. Nắp Bảo Vệ
2. Nắp Đầu
3. Nút nhả nắp đậy
4. Nút Bật/Tắt / Khóa Du Lịch
5. Màn hình LED
6. Giá Đỡ Đầu Cạo
7. Đầu Cạo
8. Tông đơ cạo tóc mai
9. Nút bật tông đơ cạo tóc mai
10. Cáp Sạc USB
11. Bàn Chải Làm Sạch
12. Hướng Dẫn Sử Dụng
13. Thẻ Bảo Hành Hậu Mãi

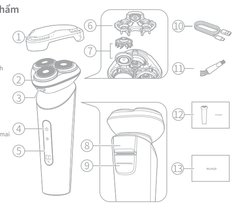

Lưu Ý

1. Giữ cáp sạc USB khô ráo. Không cắm hoặc rút cáp sạc USB khi tay ướt để tránh bị điện giật.
2. Đảm bảo rằng điện áp định mức ghi trên máy cạo râu điện phù hợp với điện áp đầu ra của thiết bị sạc được sử dụng.
3. Nếu máy cạo râu điện bị hư hỏng, không tiếp tục sử dụng mà hãy xử lý theo loại sự cố; khi cần thiết, hãy gửi đến bộ phận bảo trì của công ty.
4. Không kéo trực tiếp dây cáp sạc USB khi rút hoặc cắm phích sạc.
5. Sản phẩm này chỉ được sạc bằng cáp sạc USB đi kèm.
6. Vui lòng kiểm tra xem đầu cạo có bị hư hỏng hoặc biến dạng không trước khi sử dụng để tránh làm tổn thương da.
7. Không sử dụng nước muối, nước nóng trên 60°C, dung môi, xăng, cồn hoặc hóa chất khác để làm sạch máy cạo râu điện.
8. Khi đi du lịch, hãy đảm bảo gắn nắp bảo vệ vào máy cạo râu điện để bảo vệ đầu cạo.
9. Trong quá trình sử dụng và sạc, máy cạo râu điện có thể hơi nóng, đây là hiện tượng bình thường, xin yên tâm sử dụng.
10. Vui lòng không sạc máy cạo râu điện quá lâu.
11. Thiết bị này không dành cho người (bao gồm trẻ em) có khả năng thể chất, giác quan hoặc tinh thần suy giảm, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người chịu trách nhiệm đảm bảo an toàn cho họ. Trẻ em cần được giám sát để đảm bảo không nghịch thiết bị.
12. Thích hợp để vệ sinh dưới vòi nước mở.
CẢNH BÁO: Tháo phần tay cầm ra khỏi dây nguồn trước khi vệ sinh trong nước.

13. Thiết bị này chỉ được cung cấp điện bằng điện áp cực thấp an toàn tương ứng với thông số ghi trên thiết bị.
14. CẢNH BÁO: Chỉ sử dụng nguồn điện bên ngoài có các thông số sau: đơn vị điện áp cực thấp an toàn (SELV) phù hợp với tiêu chuẩn IEC 60335 với đầu ra 5V⎓1A.
15. Loại pin: Pin lithium-ion.
16. Dải nhiệt độ bình thường để sạc pin: 5°C~35°C.
17. Không để thiết bị hoặc pin tiếp xúc với nhiệt độ quá cao.
18. Cần thận với nguy cơ các cực của thiết bị sử dụng pin hoặc pin bị đoản mạch do tiếp xúc với vật kim loại.
19. Thiết bị này có chứa pin không thể thay thế. Khi pin hết tuổi thọ, thiết bị cần được xử lý đúng cách.
20. Để biết thông tin chi tiết về cách tháo và xử lý an toàn pin đã qua sử dụng, vui lòng tham khảo phần "Thông Tin Bảo Vệ Môi Trường".
21. Không để da hoặc mắt tiếp xúc với pin bị rò rỉ. Nếu xảy ra, hãy rửa sạch ngay với nước và tìm kiếm sự chăm sóc y tế.

Hướng Dẫn Sử Dụng



Đang sạc
1. Khi màn hình hiển thị "05%", cho biết pin yếu và nhắc bạn cần sạc (Hình 1).
2. Kết nối bộ đổi nguồn và cáp USB, cắm đầu USB Type-C của cáp vào máy cạo râu điện và đảm bảo kết nối đúng như minh họa trong Hình 2, sau đó cắm bộ đổi nguồn vào ổ điện.
3. Khi kết nối nguồn, màn hình sẽ sáng lên và chỉ số kỹ thuật số sẽ tăng dần theo thời gian sạc, cho thấy máy đang sạc (Hình 3).
4. Sau khoảng 1 giờ sạc liên tục, thiết bị sẽ sạc đầy và hiển thị "100%", cho biết đã sạc xong (Hình 4).

Tuổi thọ pin
Màn hình LED của sản phẩm này có thể hiển thị mức năng lượng còn lại. Máy cạo râu điện sạc đầy có thể sử dụng trong khoảng 60 phút, tuy nhiên thời gian cạo thực tế có thể ngắn hơn do thói quen cạo, vệ sinh và loại râu khác nhau.

Hướng Dẫn Sử Dụng



Cạo râu
1. Nhấn nút Bật/Tắt để mở máy cạo râu điện (Hình 5).
2. Di chuyển đầu cạo của máy cạo râu điện ngược hướng mọc của râu trên da, theo chuyển động thẳng và chuyển động vòng (Hình 6).
3. Tốc độ cố cũng có thể được cạo (Hình 7).
4. Trượt nút tông đơ tỉa mai xuống để đẩy tông đơ ra, giúp tỉa chính xác phần mai, ria mép hoặc râu (Hình 8).

Kết thúc cạo râu
Nhấn lại nút Bật/Tắt để tắt máy cạo râu điện, sau đó đậy nắp bảo vệ để tránh làm hỏng đầu cạo.

⚠ **Không sử dụng máy cạo râu điện khi đầu cạo bị hỏng để tránh gây thương tích.**

Hướng Dẫn Sử Dụng



Khóa du lịch
1. Nhấn và giữ nút Bật/Tắt của máy cạo râu điện trong 3 giây, biểu tượng " " trên màn hình LED sẽ nhấp nháy, cho biết thiết bị đã được khóa (Hình 9).
2. Lặp lại thao tác trên, màn hình LED sẽ hiển thị biểu tượng " " nhấp nháy cùng với đếm ngược 3 giây, cho biết thiết bị đã được mở khóa (Hình 9).

Nội dung hiển thị thông minh
1. Khi bật máy, biểu tượng " " trên màn hình LED sẽ sáng, cho biết máy đã vào trạng thái hoạt động (Hình 10).
2. Khi màn hình LED hiển thị biểu tượng " " nhấp nháy, điều đó báo hiệu rằng máy cạo râu điện cần được vệ sinh (Hình 11).
3. Khi máy cạo râu điện bị quá tải, thiết bị sẽ tự động tắt, màn hình LED sẽ nhấp nháy đồng thời hai biểu tượng " " và " ", chuyển sang chế độ bảo vệ khóa rotor, và hiển thị nhắc nhở rằng máy cần được vệ sinh (Hình 12).

Bảo Dưỡng và Vệ Sinh



Vệ sinh bằng nước
1. Trước khi vệ sinh, đảm bảo máy cạo râu điện đã được ngắt kết nối khỏi bộ đổi nguồn và nút Bật/Tắt đã được tắt (Hình 13).
2. Nhấn nút nhả nắp đầu để mở nắp đậy (Hình 14).
3. Rửa trực tiếp đầu cạo của máy dưới vòi nước (Hình 15). Nên dùng nước ấm, không dùng nước nóng trên 60 ℃.
4. Sau khi rửa, hãy vẩy nhẹ một cách cẩn thận để loại bỏ nước thừa và để máy tự khô hoàn toàn.

Bảo quản
Khuyến nghị đậy nắp bảo vệ để tránh hư hỏng đầu cạo và tránh bụi tích tụ.

Thay thế đầu cạo
Để đảm bảo hiệu quả cạo tốt nhất, khuyến nghị thay đầu cạo mỗi hai năm. Vui lòng chắc chắn sử dụng đầu cạo FRB chính hãng của Flyco. Đầu cạo có thể mua tại các đại lý ủy quyền của Flyco.

⚠ **Phần tay cầm chỉ có thể rửa bằng nước khi đã ngắt kết nối khỏi dây nguồn.**
Máy cạo râu điện có thể được sử dụng trực tiếp để cạo trong khi đang được sạc thông qua bộ đổi nguồn.

Bảo Dưỡng và Vệ Sinh



Vệ sinh sâu
1. Trong trạng thái mở nắp đậy, vặn nút nhả giá đỡ ngược chiều kim đồng hồ để tháo giá đỡ (Hình 16).
2. Tháo đầu cạo (Hình 17).
3. Tách rời đầu cạo và vệ sinh kỹ bằng bàn chải làm sạch (Hình 18).
4. Sau khi làm sạch, lắp lại đầu cạo và giá đỡ vào nắp đậy theo thứ tự ngược.

Bảo trì và chăm sóc
1. Khuyến nghị vệ sinh đầu cạo mỗi hai tháng và nhỏ dầu bôi trơn lên đầu cạo sau khi vệ sinh để bôi trơn.
2. Máy cạo râu điện nên được vệ sinh định kỳ để đảm bảo hiệu quả cạo tốt hơn.

⚠ **Không được lau đầu cạo bằng khăn hoặc giấy, vì có thể làm hỏng đầu cạo.**

Câu Hỏi Thường Gặp

Câu Hỏi Thường Gặp	Nguyên nhân có thể	Giải pháp
Hiệu quả cạo kém	Đầu cạo bị hư hỏng hoặc mòn	Vui lòng mua đầu cạo FRB của Flyco để thay thế
	Đầu cạo bị bẩn	Vệ sinh kỹ đầu cạo
	Pin yếu	Kết nối nguồn điện và sạc
Máy cạo râu không hoạtđộng sau khi khởi động	Pin đã cạn	Kết nối nguồn điện và sạc
	Nút nguồn không hoạt động.	Gửi về trung tâm bảo hành để sửa chữa
Màn hình LED không sáng	Lỗi màn hình LED hoặc mạch	Gửi về trung tâm bảo hành để sửa chữa
Da bị kích ứng sau khi cạo	Da bạn cần thời gian để thích nghi với máy cạo	Triệu chứng sẽ hết sau 2–3 tuần thích nghi
Không sạc được	Máy cạo râu điện hoặc cáp sạc USB bị hỏng	Gửi về trung tâm bảo hành để sửa chữa
	Nhiệt độ môi trường để sạc quá thấp hoặc quá cao	Sạc trong môi trường 5°C đến 35°C
Thời gian cạo dưới 60 phút sau khi đã sạc đầy	Thời gian cạo liên quan đến phương pháp cạo, thói quen vệ sinh và mật độ râu	

Thông Tin Bảo Vệ Môi Trường

Bảo vệ môi trường: Pin sạc tích hợp trong sản phẩm này chứa các chất có thể gây ô nhiễm môi trường, cần được xử lý an toàn. Trước khi loại bỏ máy cạo râu điện, cần tháo pin và gửi đến trạm tái chế được chỉ định chính thức để xử lý. Bạn cũng có thể gửi máy cạo râu điện đã qua sử dụng đến bộ phận bảo trì được chỉ định của công ty, nơi pin sẽ được tháo rời và tái chế.
Tháo pin: Ngắt nguồn và để máy cạo râu điện chạy đến khi pin cạn. Tháo tất cả ốc vít trên máy cạo râu điện, tháo rời thiết bị và lấy pin ra.

⚠ **Chỉ tháo pin sạc khi vứt bỏ máy cạo râu điện.**

Thông số kỹ thuật sản phẩm

Sản phẩm: Máy cạo râu điện	**Kích thước sản phẩm:** 162×65×61mm
Mẫu mã: FS928VN/FS929VN	**Dòng điện định mức:** 1A
Điện áp định mức: 5V⎓	**Ngày sản xuất:** Vui lòng tham khảo thân máy sản phẩm

Vui lòng giữ lại hướng dẫn sử dụng này để tham khảo sau này.

FS928VN/FS929VN 说明书	
编制/日期	
校对/日期	
审核/日期	
批准/日期	