

HƯỚNG DẪN SỬ DỤNG

**MÁY HÚT BỤI
(CÓ CHỨC NĂNG THỔI BỤI)**



INSTRUCTION MANUAL

**VACUUM CLEANER AND BLOWER
MODEL: MK367**

Read this instruction manual carefully before using

Vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng

ENG


Instructions

1. Please charge the battery before use. Please use the supplied power cord to charge the product. There are instructions on the charger. The charging indicator light is red. The indicator light will be blue when fully charged. When the indicator light flashes, please charge it in time.
2. As the dust attached to the filter will reduce suction, affect the effect of the next use, after each use, please clean or clean and dry the filter.
3. The vacuum cleaner is wet and dry, but do not suck up too much water or liquid, because water will return to the motor, may damage the vacuum cleaner.
4. This product is equipped with USB charger, full charge can be used for about 20 minutes. Suitable for DC7.4V only. After use, unplug the power cord from the cigarette lighter in time.
5. ATTACH: Use Different Air nozzle in different occasions to improve efficiency. Fully charged before first use to maximize vacuum strength.


Product parameters

Product name	Rated voltage	Rated power	Product size	Product weight
Vacuum cleaner and blower	DC 7.4V	60W	≈185*165*57mm	≈400g


Cleaning method

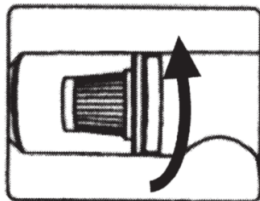

Rotate clockwise
to remove the
dust collector

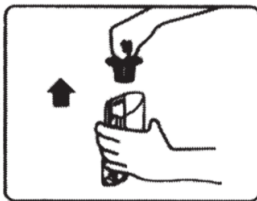


Pull out the
filter

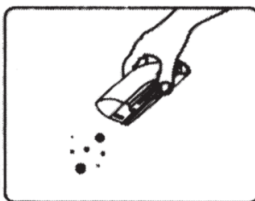

Empty the dust
out of the dust
bin and sit in
the garbage



Clean the
strainer

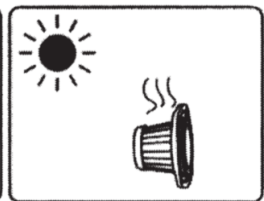

Clean the strainer
and dust collector
for next use

Pay attention

1. This product is electric, avoid electric shock.
2. If there is any breakage or damage to the power cord, be sure to stop using it or replace it from the manufacturer. So please keep the charger safe from damage.
3. Product should not be used for burning cigarette butts, matches, sharp object, etc., so as not to damage the products and personal injured.
4. Be sure to turn off the switch after each use and after running out of the power. Make sure it is switch off when charging, otherwise it will not be able to charge.
5. The indicator light is red when charging, and turns green when full.

6. Non-technical personnel, please do not dismantle or repair the product without authorization.
7. Do not drop the product into water. Keep the vacuum cleaner in a dry place and away from children.
8. Do not block the vent when using.
9. Please keep the machine clean to prolong its service life.

VIET


Hướng dẫn sử dụng

1. Vui lòng sạc pin trước khi sử dụng. Vui lòng sử dụng dây nguồn đi kèm để sạc sản phẩm. Có hướng dẫn trên củ sạc. Đèn báo đang sạc có màu đỏ. Đèn báo sẽ có màu xanh khi được sạc đầy. Khi đèn báo nhấp nháy, vui lòng sạc kịp thời.
2. Vì bụi bám vào bộ lọc sẽ làm giảm lực hút, ảnh hưởng đến hiệu quả của lần sử dụng tiếp theo, nên sau mỗi lần sử dụng, hãy vệ sinh hoặc lau khô bộ lọc.
3. Máy hút bụi có thể hút ướt và khô nhưng không hút quá nhiều nước hoặc chất lỏng, vì nước sẽ xâm nhập vào động cơ, có thể làm hỏng máy hút bụi.
4. Sản phẩm này được trang bị bộ sạc USB, sạc đầy có thể sử dụng trong khoảng 20 phút. Chỉ thích hợp cho DC7.4V. Sau khi sử dụng, hãy rút dây nguồn ra khỏi nguồn điện.
5. Lưu ý: Sử dụng đầu hút khác nhau trong các trường hợp khác nhau để nâng cao hiệu quả. Sạc đầy trước khi sử dụng lần đầu để tối đa hóa lực hút của máy.


Thông số sản phẩm

Tên sản phẩm	Điện áp	Công suất	Kích thước	Trọng lượng
Máy hút bụi (có chức năng thổi bụi)	DC 7.4V	60W	≈185*165*57mm	≈400g


Vệ sinh

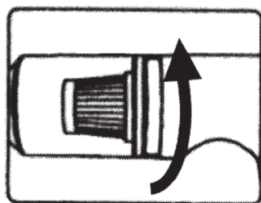

Xoay theo chiều kim đồng hồ để tháo hộp chứa bụi

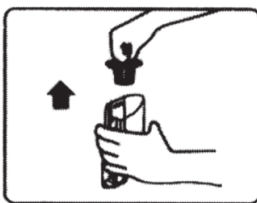


Kéo lưới lọc ra

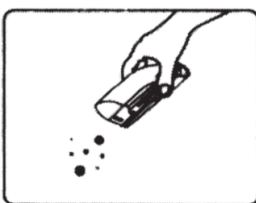

Đổ bụi bẩn vào thùng rác và làm sạch hộp chứa



Làm sạch lưới lọc

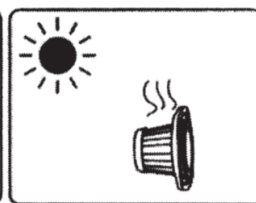

Làm khô lưới lọc và lắp vào máy

Lưu ý

1. Sản phẩm này dùng điện, tránh bị điện giật.
2. Nếu có bất kỳ hiện tượng đứt hoặc hư hỏng dây nguồn nào, hãy ngừng sử dụng hoặc liên hệ nhà cung cấp. Vì vậy hãy giữ bộ sạc an toàn không bị hư hỏng.
3. Không nên sử dụng sản phẩm để hút tàn thuốc nóng, diêm, vật sắc nhọn, v.v. để không làm hỏng sản phẩm và gây thương tích cho cá nhân.
4. Đảm bảo tắt công tắc sau mỗi lần sử dụng và sau khi hết pin. Hãy chắc chắn rằng máy đã tắt khi sạc, nếu không sẽ không thể sạc được.
5. Đèn báo màu đỏ khi sạc và chuyển sang màu xanh khi đầy.
6. Nhân viên không chuyên về kỹ thuật, vui lòng không tháo gỡ hoặc sửa chữa sản phẩm khi chưa được phép.
7. Không thả sản phẩm vào nước. Giữ máy hút bụi ở nơi khô ráo và tránh xa trẻ em.
8. Không chặn lỗ thông hơi khi sử dụng.
9. Hãy giữ máy sạch sẽ để kéo dài tuổi thọ của máy.

QUAY VIDEO MỞ HỘP HOẶC TRẢI
NGHIỆM SẢN PHẨM ĐỂ NHẬN
QUÀ TẶNG ĐẶC BIỆT



QUÉT QR ĐỂ XEM ĐỊA CHỈ TRUNG TÂM
BẢO HÀNH GẦN NHẤT

Hotline: 1900 1738
Website: www.KachiVietnam.com

