

HƯỚNG DẪN SỬ DỤNG

NỒI ÁP SUẤT

Model: **MAGIC ECO AC-243**



Tìm hiểu nhiều hơn về chúng tôi tại [www.facebook/magicvietnam.official](https://www.facebook.com/magicvietnam.official)
hoặc website công ty magicvietnam.vn



cảm ơn bạn đã lựa chọn và ủng hộ MAGIC Vietnam!

Hy vọng bạn hài lòng với sản phẩm & dịch vụ để MAGIC có cơ hội phục vụ, đồng hành cùng bạn và gia đình.

Mọi phản hồi/đánh giá về chất lượng sản phẩm & dịch vụ bạn vui lòng liên hệ đến số hotline **1800 8379** để MAGIC có thể tiếp nhận và khắc phục ngay nhé!


Ở phía sau, các bạn hãy quét mã **Zalo OA** để kích hoạt bảo hành điện tử, nhận thêm ưu đãi và hỗ trợ **24/7** từ MAGIC.


Một lần nữa cảm ơn và rất vui được đồng hành cùng bạn trong các bữa cơm ấm cúng cùng gia đình!

THÔNG SỐ SẢN PHẨM


Tên sản phẩm	NỒI ÁP SUẤT	Model sản phẩm	AC-243
Công suất	1300W	Điện áp	220V-240V (50-60Hz)
Dung tích	5L	Áp suất	50-60kPa
Kích thước sản phẩm	325x362x258 mm	Cân nặng	5Kg

CẤU TẠO SẢN PHẨM

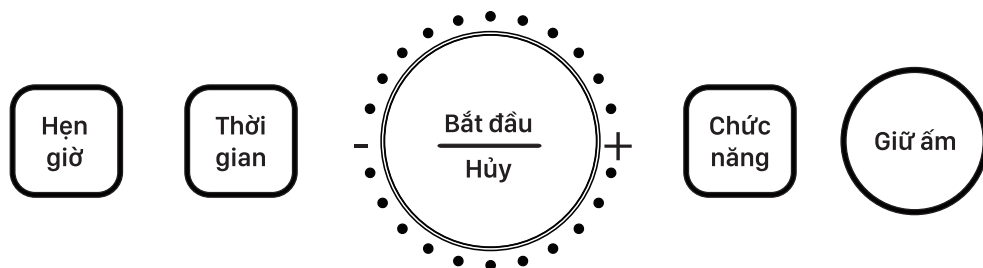

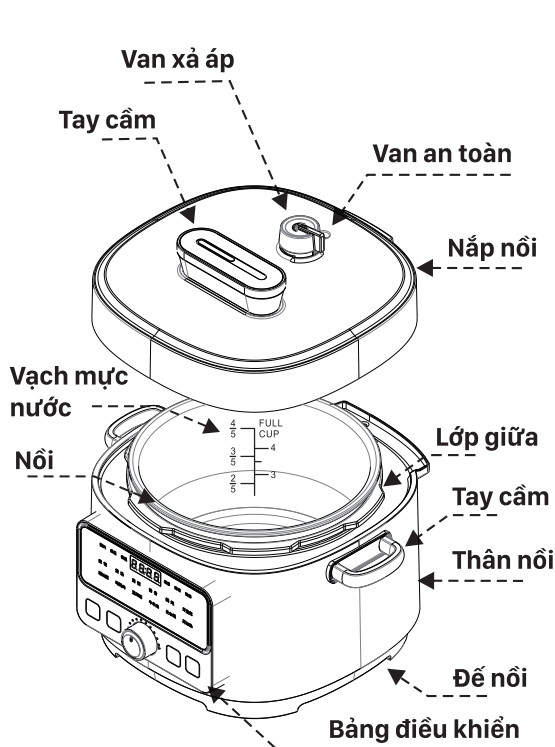

Hướng Dẫn Lắp và Tháo Vòng Đệm

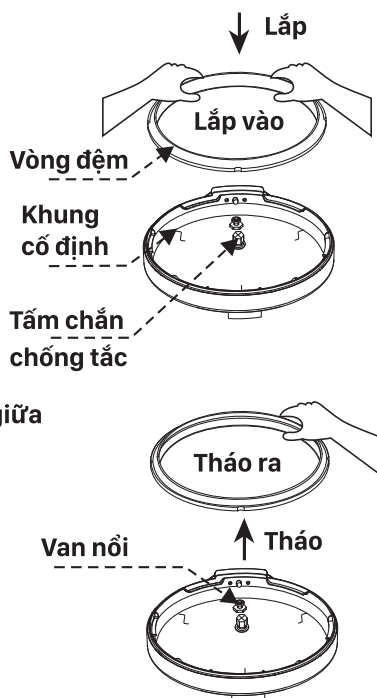

HƯỚNG DẪN SỬ DỤNG

MỞ NẮP ĐÚNG CÁCH

1. Trước khi sử dụng lần đầu, hãy lấy tất cả phụ kiện ra khỏi nồi, đọc kỹ hướng dẫn sử dụng, đặc biệt chú ý các lưu ý để tránh gây hư hỏng sản phẩm hoặc chấn thương.
2. Dùng tay xoay núm theo hướng chỉ dẫn đến vị trí mở, sau đó mở nắp.

KIỂM TRA VÒNG ĐỆM, VAN NỒI, VÀ VAN XẢ ÁP

1. Kiểm tra xem vòng đệm, van nồi và van xả áp có sạch không. Nếu có bụi bẩn, cần làm sạch ngay.
2. Kiểm tra xem van nồi có thể di chuyển tự do không. Nếu lỏng, hãy lắp đặt đúng vị trí.
3. Kiểm tra xem vòng đệm đã được lắp đặt đúng và chắc chắn chưa.

LẤY LỖI NỒI, CHO THỰC PHẨM VÀ NƯỚC VÀO

1. Lượng thực phẩm và nước không được vượt quá mức tối đa của lõi nổi.
2. Lưu ý lượng nước không được thấp hơn mức tối thiểu và không được vượt quá mức tối đa đã đánh dấu.

ĐẶT LỖI NỒI VÀO THÂN NỒI

1. Làm sạch đáy và mặt ngoài của lõi nổi cũng như bộ gia nhiệt, đảm bảo không còn bụi bẩn.
2. Khi lắp vào, xoay nhẹ lõi nổi để đảm bảo tiếp xúc tốt với bộ gia nhiệt.

ĐẶT NẮP AN TOÀN

1. Đóng nắp lại, xoay núm theo hướng chỉ dẫn đến vị trí đóng nắp hoàn toàn.
2. Kiểm tra các bộ phận khí thoát đã lắp đặt chắc chắn trước khi đóng nắp.
3. Lưu ý: Sản phẩm chỉ hoạt động khi nắp đã được đặt đúng cách.

ĐẶT VAN XẢ HƠI ĐÚNG VỊ TRÍ

1. Trước khi vận hành, đảm bảo van xả hơi đã ở trạng thái kín, biểu thị nổi áp suất đã sẵn sàng.

KẾT NỐI NGUỒN ĐIỆN


1. Kết nối nguồn điện, đèn báo sẽ sáng, biểu thị nổi áp suất chuyển sang trạng thái chờ.

AN TOÀN KHI MỞ NẮP

Sau khi nấu xong, nếu bên trong sản phẩm vẫn còn áp suất, tuyệt đối không được cưỡng ép mở nắp.


Nếu cần di chuyển sản phẩm, hãy cẩn thận và không lắc mạnh để tránh gây nguy hiểm hoặc hỏng hóc.

Hình 1

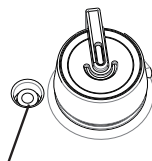

**Trạng thái
có áp suất**
(Van nổi đã nổi lên)

Hình 2

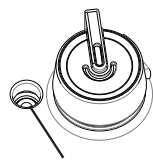

**Trạng thái
không có áp suất**
(Van nổi đã hạ xuống)

LỰA CHỌN CHỨC NĂNG

1. Sau khi chuẩn bị xong, xoay nắp nồi và chọn chức năng mong muốn. Đèn chức năng sẽ sáng nếu được chọn thành công. Nếu không sáng, hãy kiểm tra lại.
2. Nếu không thể chọn chức năng khác sau khi bắt đầu, hãy nhấn nút "Xác nhận/Lấy ra" để hủy lựa chọn cũ trước khi chọn lại.

3. Khi cần xả áp thủ công, vặn van xả hơi. Tránh đặt tay trực tiếp trên hoặc gần luồng hơi thoát ra.

4. Nếu có hơi nước đọng lại, hãy nhấn nút xả khí để xả sạch trước khi mở nắp.

LƯU Ý: Chỉ mở nắp khi van nổi đã hạ xuống hoàn toàn.

LỰA CHỌN ĐỘ CHÍN MỀM

Nhấn nút "Độ chín mềm" để chọn giữa các chế độ: Cứng, Trung, Mềm. Nếu không chọn, sản phẩm sẽ mặc định ở chế độ Cứng.

ĐIỀU CHỈNH THỜI GIAN GIỮ ÁP

Xoay núm điều chỉnh để tăng hoặc giảm thời gian giữ áp theo ý muốn.

CHỨC NĂNG HẸN GIỜ

Nhấn nút "Hẹn giờ/Đặt giờ," xoay núm để chọn thời gian mong muốn (lên đến 24 giờ). Sau khi hoàn tất hẹn giờ, sản phẩm sẽ tự động vận hành theo thời gian đã định.

Chức Năng	Thời Gian Giữ Áp Suất Mặc Định (phút)	Thời Gian Có Thể Điều Chỉnh (phút)	Độ Chín Mềm
Cơm nhanh	10	8 ~ 12	Cứng: 8 – Trung: 10 – Mềm: 12
Cơm chín mềm	12	12 ~ 16	Cứng: 10 – Trung: 12 – Mềm: 16
Canh dinh dưỡng	25	10 ~ 40	Cứng: 10 – Trung: 25 – Mềm: 40
Canh đậm đà	35	20 ~ 50	Cứng: 10 – Trung: 35 – Mềm: 50
Thịt bò/cừu	30	15 ~ 45	Cứng: 15 – Trung: 30 – Mềm: 45
Đậu hầm	40	20 ~ 60	Cứng: 20 – Trung: 40 – Mềm: 60
Cháo nhuyễn	25	10 ~ 40	Cứng: 10 – Trung: 25 – Mềm: 40

Nấu không nước	20	10 ~ 30	Cứng: 10 – Trung: 20 – Mềm: 30
Lẩu lửa nhỏ	\	\	\
Thịt kho tàu	15	10 ~ 20	Cứng: 10 – Trung: 15 – Mềm: 20
Thịt gà/vịt	20	10 ~ 30	Cứng: 10 – Trung: 20 – Mềm: 30
Thịt kho tương	10	8 ~ 20	Cứng: 8 – Trung: 10 – Mềm: 20



VỆ SINH & BẢO TRÌ

1. Trước khi vệ sinh, hãy rút phích cắm nguồn.
2. Dùng khăn lau khô thân nồi; không được nhúng toàn bộ nồi vào nước hoặc dùng vòi nước xịt trực tiếp.
3. Tháo vòng đệm để vệ sinh sạch sẽ, lau khô bằng khăn ẩm và lắp lại vào vị trí cũ.
4. Dùng nước sạch để rửa bên trong nắp nồi, bao gồm: van xả áp, bộ chống tràn, lõi van xả khí, và van nổi. Sau đó dùng khăn lau khô.
5. Dùng bọt biển mềm hoặc vải không kim loại để làm sạch bên trong nồi, sau đó lau khô mặt ngoài bằng khăn.



Thank you for choosing and supporting MAGIC Vietnam!

We hope that you are satisfied with our product and service, and that we have the opportunity to serve and accompany you and your family.

If you have any feedback or reviews regarding the quality of our product and service, please contact our hotline at **1800 8379** so that we can receive and promptly address them.


In addition, please scan the **Zalo OA** code to activate the electronic warranty, receive additional gifts, and enjoy promotion and **24/7** support from MAGIC.


Once again, thank you, and we are happy to accompany you in cozy meals with your family!

PRODUCT SPECIFICATIONS


Product Name	PRESSURE COOKER	Model	AC-243
Power	1300W	Voltage	220V-240V (50-60Hz)
Capacity	5L	Pressure	50-60kPa
Product size	325x362x258 mm	Product weight	5Kg

PRODUCT STRUCTURE

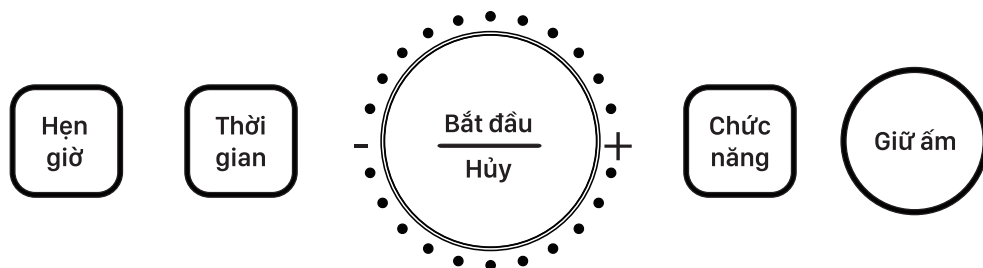

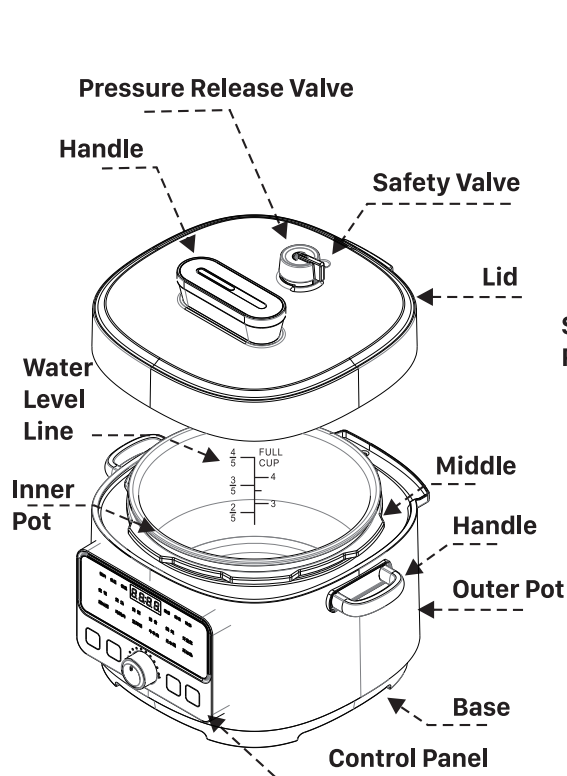

Instructions for Installing and Removing the Sealing Ring

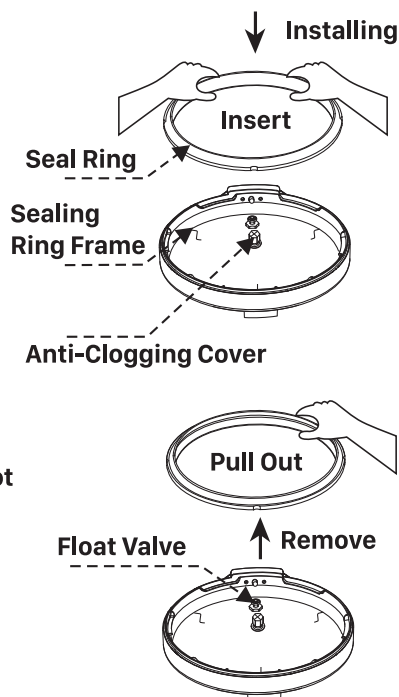

INSTRUCTIONS FOR USE

OPEN THE LID CORRECTLY

1. Before first use, remove all accessories from the pot, read the instructions carefully, and pay special attention to the precautions to avoid product damage or injury.
2. Turn the knob in the direction indicated to the open position, and then open the lid.

CHECK THE GASKET, THE FLOATING VALVE, AND THE PRESSURE RELEASE VALVE

1. Check if the gasket, the floating valve, and the pressure release valve are clean. If there is dirt, clean it immediately.
2. Check if the floating valve can move freely. If it is loose, install it in the correct position.
3. Check if the gasket is installed correctly and firmly.

REMOVE THE INNER POT, ADD FOOD AND WATER

1. The amount of food and water must not exceed the maximum level of the inner pot.
2. Note that the amount of water must not be lower than the minimum level and must not exceed the maximum level marked.

PUT THE INNER POT INTO THE POT BODY

1. Clean the bottom and exterior of the inner pot as well as the heating element, making sure there is no dirt.
2. When installing, gently rotate the pot core to ensure good contact with the heater.

SAFETY LID

1. Close the lid, turn the knob in the direction indicated to the fully closed position.
2. Check that the air vent parts are securely installed before closing the lid.
3. NOTE: The product only operates when the lid is properly closed.

SET THE STEAM RELEASE VALVE IN THE CORRECT POSITION

1. Before operating, make sure the steam release valve is in a closed state, indicating that the pressure cooker is ready.

CONNECT THE POWER SOURCE


1. Connect the power source, the indicator light will turn on, indicating that the pressure cooker is in standby state.

SAFETY WHEN OPENING THE LID

After cooking, if there is still pressure inside the product, absolutely do not force the lid to open

If the product needs to be moved, be careful and do not shake it vigorously to avoid danger or damage.

Figure 1

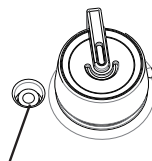

Pressurized state
(The float valve has risen)

Figure 2



Unpressurized state
(The float valve has fallen)

FUNCTION SELECTION

1. After preparation, turn the lid and select the desired function. The function light will light up if it is successfully selected. If it does not light up, check again.
2. If you cannot select another function after starting, press the "Confirm/Remove" button to cancel the previous selection before selecting again.

- When manually releasing pressure, turn the steam release valve. Avoid placing your hand directly on or near the steam outlet.
- If there is any condensation, press the air release button to release it before opening the lid.

NOTE: Open the lid only when the float valve is fully lowered.

CHOOSE THE SOFTNESS

Press the "Doneness" button to select between Hard, Medium, Soft. If not selected, the product will default to Hard.

ADJUST PRESSURE HOLD TIME

Turn the adjustment knob to increase or decrease the pressure hold time as desired.

TIMER FUNCTION

Press the "Timer/Set Time" button, turn the knob to select the desired time (up to 24 hours). After the timer is set, the product will automatically operate according to the set time.

Function	Default Pressure Holding Time (mins)	Adjustable Pressure Holding Time (mins)	Texture
Quick Rice	10	8 ~ 12	Firm: 8 – Medium: 10 – Soft: 12
Soft Rice	12	12 ~ 16	Firm: 10 – Medium: 12 – Soft: 16
Nutritious Soup	25	10 ~ 40	Firm: 10 – Medium: 25 – Soft: 40
Rich Soup	35	20 ~ 50	Firm: 10 – Medium: 35 – Soft: 50
Beef/Lamb	30	15 ~ 45	Firm: 15 – Medium: 30 – Soft: 45
Braised Beans	40	20 ~ 60	Firm: 20 – Medium: 40 – Soft: 60
Fine Porridge	25	10 ~ 40	Firm: 10 – Medium: 25 – Soft: 40

Dry Cooking	20	10 ~ 30	Firm: 10 – Medium: 20 – Soft: 30
Hot Pot	\	\	\
Braised Meat	15	10 ~ 20	Firm: 10 – Medium: 15 – Soft: 20
Chicken/Duck	20	10 ~ 30	Firm: 10 – Medium: 20 – Soft: 30
Braised Sauce	10	8 ~ 20	Firm: 8 – Medium: 10 – Soft: 20



CLEANING & MAINTENANCE

1. Before cleaning, unplug the power cord.
2. Use a towel to dry the pot body; do not immerse the entire pot in water or spray directly with water.
3. Remove the gasket to clean, dry with a damp cloth and reinstall it in its original position.
4. Use clean water to wash the inside of the pot lid, including: pressure relief valve, overflow preventer, air release valve core, and floating valve. Then use a dry towel.
5. Use a soft sponge or non-metallic cloth to clean the inside of the pot, then dry the outside with a towel.

Quét mã QR Zalo để
KÍCH HOẠT BẢO HÀNH ĐIỆN TỬ



SẢN PHẨM ĐƯỢC NHẬP KHẨU VÀ PHÂN PHỐI ĐỘC QUYỀN BỞI CÔNG TY TNHH TM XNK NGUỒN SỐNG VIỆT

Hồ Chí Minh: 235-237 Đường số 9A, KDC Trung Sơn, Bình Hưng, Bình Chánh, TP. HCM | Bảo hành: 028 7106 5858

Hà Nội: 382 Phạm Văn Đồng, Cổ Nhuế 2, Bắc Từ Liêm, Hà Nội | Bảo hành: 024 37 855 966

HOTLINE MUA HÀNG: 1800 8379