

TRUNG TÂM BẢO HÀNH ỦY QUYỀN CHÍNH HÃNG GIGACARE



1900 633 870

Website: gigacare.vn




Hà Nội: Toà D, Chung cư Bảo Nhân Dân, P. Xuân Phương, TP. Hà Nội
Hồ Chí Minh: 55 Minh Phụng, P. Đồng Hưng Thuận, TP. Hồ Chí Minh



DEHUMIDIFIER

User Manual

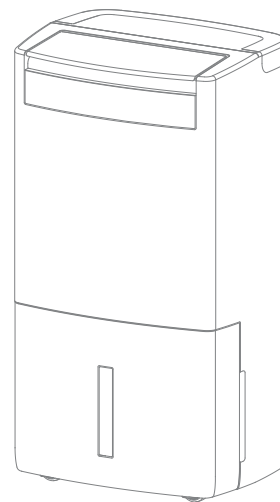

Model: **D6S-26L** | **D6E-26L**

Safety Instructions

1. Only install and operate this appliance as outlined in this instruction manual. At all times, use care when using this appliance.
2. Do not modify this appliance in any way to avoid danger.
3. Electrical equipment and installations regulated by national legislation must be followed.
4. Children must not use this appliance unsupervised.
5. For safety reasons, anyone with psychological, physical or any medical condition that may impair judgment should only use this appliance when under the supervision of a responsible adult.
6. For safety sake, never use a damaged power cable; always refer to the manufacturer or an authorized technical service centre if appliance requires repair.
7. It is essential that the appliance is connected to an efficient earth system checked by a qualified electrician.
8. The use of extension cables is not recommended.
9. The Air filter should be cleaned a minimum of once every two weeks.
10. Do not place the dehumidifier near any heating appliance.
11. The appliance should be transported upright or on its side. Any internal circuit water should be emptied before moving. Do not turn on the appliance for at least one hour before starting it.
12. Flammable substances or pressurised containers (eg aerosol cans) should be kept a minimum of 50cms away.
13. The appliance should not be installed in rooms containing sulphur, gas or oil.
14. Do not disconnect the appliance by pulling on the power cable; always disconnect the appliance before any cleaning or maintenance is undertaken.
15. Do not store anything on top of the appliance, especially heavy or hot objects.
16. Repairs must only be undertaken by authorised service centres of the manufacturer. Failure to comply may be dangerous.
17. Do not store the appliance covered with plastic bags.
18. Remember the environment when disposing of packaging around the appliance and when the appliance has reached its used by date.
19. A warning that the appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
20. A warning to keep ventilation openings clear of obstruction.
21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
22. Children shall not play with the appliance.
23. Cleaning and user maintenance shall not be made by children without supervision.

Connect to Mi Home APP

This product has worked with Mi Home and can be intelligently controlled by Mi Home APP.

Search for " Mi Home " in the app store or scan the QR code below to download Mi Home APP. Open the homepage of Mi Home APP, click " + " in the upper right corner to add the device according to the APP prompts.




Tips: Due to the upgrade and update of Mi Home APP, the actual operation may be slightly different from the description above. Please follow the current instructions in Mi Home APP.


Please note that "works with Mi Home" is used only for the software verification. Xiaomi are not responsible for the manufacturing, standard implementation and quality supervision of the products and enterprises.



Component Name

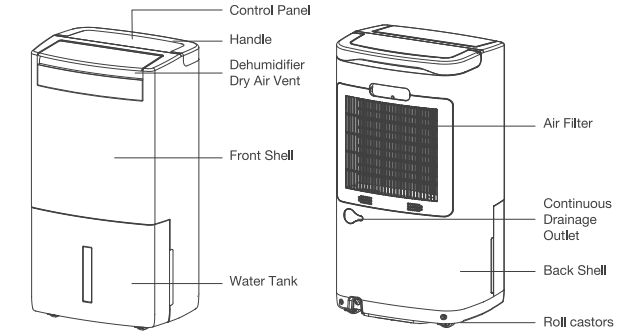

Control Panel

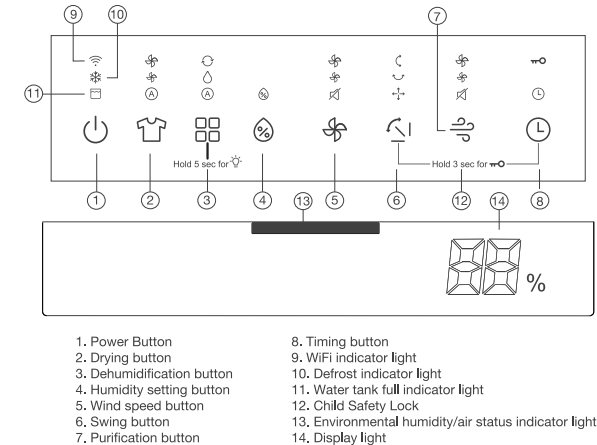

Function Explanation

Display

Displays the current room humidity as a percent, or the hours remaining in a Time Delay. The corresponding indicator light will illuminate.

Power Button

Press the Power button to turn On/Off the dehumidifier.
NOTE: Turning off power by pressing the Power button does not disconnect the appliance from the power supply.

Drying Button

When the dehumidifier is in operation, press "Drying" and the functions will cycle according to the following functions. Press the "Other Function Keys" to release the drying function and resume dehumidification operation. During the drying function, the compressor is forced to operate.

1. Automatic drying function, strong wind speed, automatic wind swing.
2. The drying function is weak, and the wind speed is weak. The swing angle can be set.
3. Strong drying function, strong wind speed range, and adjustable swing angle.

Dehumidification Button

When the dehumidifier is in operation, press "Dehumidification" and the function will cycle according to the following functions.

1. Automatic mode, automatically controlling humidity based on ambient temperature. In dehumidification mode, the customized indicator light is on simultaneously, and the humidity can be set by pressing the customized temperature.
2. Continuous mode, compressor forced operation.

Humidity Setting Button

When the custom humidity button is pressed, the dehumidification mode automatically switches back to dehumidification. Each time the button is pressed, the humidity is set to 30%→40%→50%→60%→70%→30%→40%→..... in sequence. During the humidity setting period, the display "Set Humidity" flashes, and after 5 seconds, the setting is completed and the display returns to "Environmental Humidity".

Wind Speed Button

In dehumidification mode, the wind speed can be set by pressing the wind speed button.

After pressing the wind speed setting button, the functions will cycle through the following functions.

Swing Button

After pressing the swing speed button, the functions will cycle through the following functions.

Purification Button

After pressing the purification a button, the functions will cycle through the following functions.

When the purification function is enabled, The compressor stops operating, Both vertical and horizontal airflow blades remain fixed at the 90° position (swing angle cannot be adjusted).

HEPA Filter Replacement Reminder:When the blower motor's cumulative operation time reaches 2,000 hours, the ambient humidity indicator light will flash.

To reset: Press and hold the Purification Setting Button for 5 seconds → The indicator light stops flashing → Timer resets to zero and restarts counting.

Timer Button

When the dehumidifier is in running (standby) mode, pressing "Timer" indicates a timed shutdown (power on).

Each time you press "Timer", the timer hours are in order : "1→2→4...→12→Esc→1→...".

During the timer setting period, the display "Hours" flashes, and after 5 seconds, the setting is completed, the display "Remaining hours of power on (off)" is displayed.

After the startup timer setting is completed, the mode of operation after startup can be set.

WiFi Connect Indicator

1. When the unit is turned on, the WiFi connect indicator flashes. Connect to the WiFi according to the steps shown in the App. After the WiFi connection is successful, the WiFi connect indicator will light up.

2. When the connection is unsuccessful, Press and hold the "Power" for about 5 seconds to clear the WiFi network account and password, the unit will be restored to the factory settings. The buzzer will sound a long beep.

Ambient humidity status indication

Dehumidifier before start running for 1 minute environmental status indicator goes off.

1. When the environmental status indicator show "orange", it means that the environmental humidity is humid.
2. When the environmental status indicator show "blue", it means that the environmental humidity is in a comfortable state.
3. When the environmental status indicator show "green", it means that the environmental humidity is in dry.

(The feeling of the above state varies from person to person to person and may be different)

Ambient air quality status indication

Dehumidifier before start running for 10 seconds air quality status indicator goes off.

1. When the air quality status indicator show "red", it means that the air quality is severely polluted.
2. When the air quality status indicator show "yellow", it means that the air quality is slightly polluted.
3. When the air quality status indicator show "green", it means that the air quality is good air.

Child Safety Lock

1. Press "Power" and "Swing" on the unit for about 3 seconds to activate or deactivate the child lock function.
2. During the activation of the child lock function, all button operation are regarded as invalid and the unit will issue an audible and visual alarm.

Lighting switch



Long press "Humidity setting" for 5 seconds to turn off all indicator lights.

Long press "Humidity setting" again for 5 seconds to restore the display of all indicator lights.

Operating Instructions


Start Operation

1. Insert the plug into a suitable wall socket. The dehumidifier is suitable for operation on an electricity supply having the same voltage as that shown on its rating label.
2. Make sure the water tank is correctly located. (After switching on the machine for the first time, if the "Bucket Full" lamp illuminates, just pull out the water tank, check the "float" lever is able to move freely, then return the water tank to the correct position.)

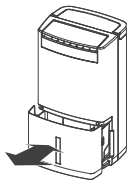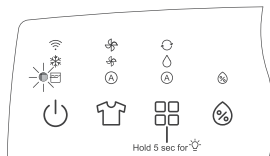

When Water Tank Full Lamp Is On

When the water tank is full the machine will stop and the "Water tank Full" light will illuminate. The water tank should be carefully removed from the machine by sliding it outwards from the front of the machine and it should be emptied. When the empty tank is replaced properly into the machine, the machine will start up and run normally.





Defrost


When operating in low temperatures (less than 12°C) the surface of the evaporator will accumulate frost and effect the efficiency of the dehumidifier. When this happens the machine will go into periodic defrost mode automatically. This is quite normal. Defrost lamp will come on. The unit will operate in temperatures down to 5°C. Defrost time may vary. If the dehumidifier freezes up turn the unit off for few hours and then restart. It is not recommended to use the dehumidifier in temperatures below 5°C.

Install filter screen


1. Remove the rear air intake panel.
2. Remove the plastic bag from the filter screen.

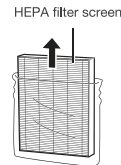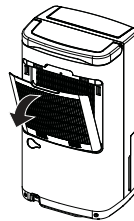

3. Place the ear strap facing outward (as shown in the picture), and then place the filter screen in the slot.

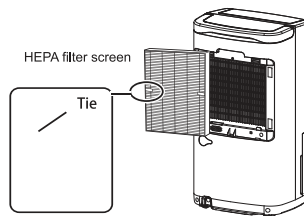

4. Install the rear air intake panel.

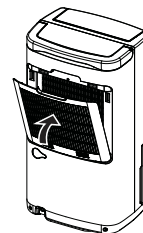


※ Attention: Please clean the filter screen in a timely manner.

Continuous Drainage


Installation method of drainage pipes

1. Open the cover of the rear shell drain hole (Figure 1).
2. After taking out the water tank, locate the water stop plug in the upper right corner of the machine and push it open by hand (Figure 2- Figure 4).
3. At the same time, use the other hand to pick up the drainage pipe and extend it into the drainage hole of the rear shell (Figure 5-6).

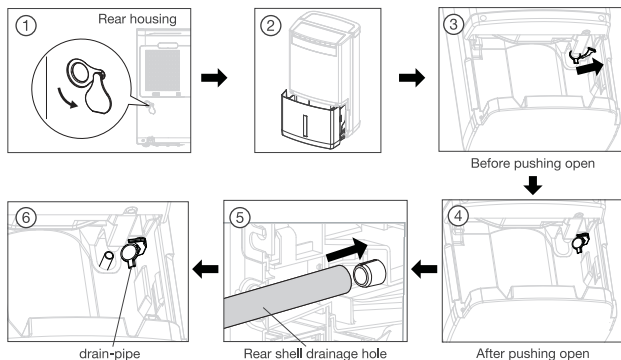


The Proper Way To Place The Water Drainage Hose

When using continuous drainage, the hose must be placed below the drainage hole. Avoid uneven surfaces and do not "kink" the hose.

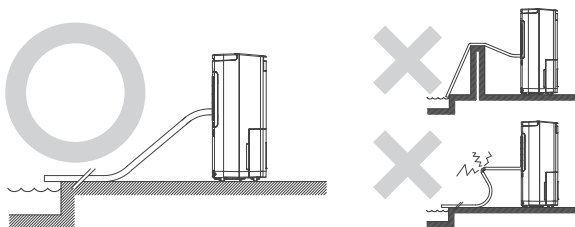

Maintenance

Please make sure the dehumidifier is unplugged before servicing or cleaning the machine, for safety reasons!



Clean the Shell


- A. Wipe the shell using soft and clean cloth.
- B. If the dehumidifier is very dirty, please use mild detergent then wipe off the detergent with half dried cloth.
- C. Do not wash the machine with a hose, it will cause leakage of electricity.

Clean the Air Filter


The purpose of the air filter is to filter the dust or unclean material in the air. If the filter is blocked by the dust the usage of the electricity will be greater than normal and there is a risk of overheating. For the best more efficient of removing moisture, please clean the filter every two weeks. Do not use in dusty area.

Cleaning Steps

1. Pull out the filter frame.

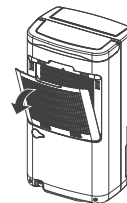

2. Wash the frame with a vacuum cleaner or water. Then wipe it with a dry cloth.



3. Restore the clean air filter. The dehumidifier can be used again.

Troubleshooting

Fault Conditions	Items to be checked
Turn on the power switch but the unit is not running.	• Is the power plug properly inserted into the outlet?
	• Is there no fuse switch or the fuse is disconnected at home?
	• Is there a power failure?
Less dehumidification quantity	• Is the filter too dirty to be blocked?
	• Are the indoor temperature and humidity too low?
	• Is the air inlet or outlet of the unit blocked?
Too much noise	• Is the ground uneven?
	• Is the dehumidifier improperly placed to cause noises?

EMERGENCY TREATMENT

When the dehumidifier has abnormal operation, please pull the power plug quickly and return it to the service unit of the company for treatment. It is strictly forbidden to disassemble the dehumidifier by yourself in case of dangers!

Specifications

Product Name	Lumias Dehumidifier
Model	D6S-26L D6E-26L
Voltage/Frequency	AC 220-240V~ 50Hz
Power Input	310W
Dehumidification Capacity	26L/D (30°C/80%RH)
Operating Temperature	5°C-32°C
Refrigerant	R134a/0.183kg
Noise	36dB(A)
Water Tank Capacity	5L
Product Weight	14kg
Product Size	326 x 259 x 612 mm

Disposal and recycling information



All products bearing this symbol are waste electrical and electronic equipment which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Hướng Dẫn An Toàn

1. Chỉ lắp đặt và vận hành thiết bị này theo hướng dẫn sử dụng này. Luôn cẩn thận khi sử dụng thiết bị này.
2. Không được sửa đổi thiết bị này dưới bất kỳ hình thức nào để tránh nguy hiểm.
3. Phải tuân thủ các quy định về thiết bị và lắp đặt điện theo luật định quốc gia.
4. Trẻ em không được sử dụng thiết bị này mà không có sự giám sát.
5. Vì lý do an toàn, bất kỳ ai có vấn đề về tâm lý, thể chất hoặc bất kỳ tình trạng sức khỏe nào có thể làm suy giảm khả năng phán đoán chỉ nên sử dụng thiết bị này khi có sự giám sát của người lớn có trách nhiệm.
6. Vì lý do an toàn, không bao giờ sử dụng dây nguồn bị hỏng; luôn tham khảo ý kiến nhà sản xuất hoặc trung tâm dịch vụ kỹ thuật được ủy quyền nếu thiết bị cần sửa chữa.
7. Điều quan trọng là thiết bị phải được kết nối với hệ thống tiếp địa hiệu quả do thợ điện có trình độ kiểm tra.
8. Không khuyến khích sử dụng dây cáp nối dài.
9. Nên vệ sinh bộ lọc khí ít nhất hai tuần một lần.
10. Không đặt máy hút bụi gần bất kỳ thiết bị sưởi ấm nào.
11. Nên vận chuyển thiết bị theo chiều thẳng đứng hoặc nằm nghiêng. Cần xả hết nước trong mạch điện bên trong trước khi khởi động. Không bật thiết bị đang di chuyển ít nhất một giờ trước khi khởi động.
12. Các chất dễ cháy hoặc bình chứa áp suất (ví dụ: bình xịt) phải được giữ cách xa tối thiểu 50cm.
13. Không được lắp đặt thiết bị trong phòng có lưu huỳnh, khí hoặc dầu.
14. Không ngắt kết nối thiết bị bằng cách kéo dây nguồn; luôn ngắt kết nối thiết bị trước khi vệ sinh hoặc bảo trì.
15. Không đặt bất cứ thứ gì lên trên thiết bị, đặc biệt là các vật nặng hoặc nóng.
16. Việc sửa chữa chỉ được thực hiện bởi các trung tâm dịch vụ được nhà sản xuất ủy quyền. Việc không tuân thủ có thể gây nguy hiểm.
17. Không cất giữ thiết bị khi đã được bọc trong túi ni lông.
18. Lưu ý về môi trường khi vứt bỏ bao bì xung quanh thiết bị và khi thiết bị đã hết hạn sử dụng.
19. Cảnh báo rằng thiết bị phải được bảo quản ở khu vực thông thoáng, có kích thước phòng tương ứng với diện tích phòng được chỉ định để vận hành.
20. Cảnh báo giữ cho các lỗ thông gió thông thoáng.
21. Trẻ em từ 8 tuổi trở lên, người khuyết tật về thể chất, giác quan hoặc tinh thần, hoặc người thiếu kinh nghiệm và kiến thức đều có thể sử dụng thiết bị này nếu được người giám sát hướng dẫn sử dụng thiết bị một cách an toàn và hiểu rõ các mối nguy hiểm liên quan.
22. Trẻ em không được chơi đùa với thiết bị.
23. Trẻ em không được tự ý vệ sinh và bảo trì thiết bị nếu không có sự giám sát của người sử dụng.

Kết Nối Ứng Dụng Mi Home

Thiết bị này có thể hoạt động với Mi Home và được điều khiển thông minh qua ứng dụng Mi Home.

Tìm kiếm "Mi Home" trong cửa hàng ứng dụng hoặc quét mã QR dưới đây để tải ứng dụng Mi Home. Mở trang chủ ứng dụng Mi Home, nhấn vào dấu "+" ở góc trên bên phải để thêm thiết bị theo hướng dẫn trong ứng dụng.




Lưu ý: Do việc nâng cấp và cập nhật ứng dụng Mi Home, thao tác thực tế có thể hơi khác so với mô tả trên. Vui lòng làm theo hướng dẫn hiện tại trong ứng dụng Mi Home.


Xin lưu ý rằng cụm từ "hoạt động với Mi Home" chỉ được sử dụng để xác minh phần mềm. Xiaomi không chịu trách nhiệm sản xuất, triển khai tiêu chuẩn và giám sát chất lượng sản phẩm và doanh nghiệp.



Tổng Quan Sản Phẩm

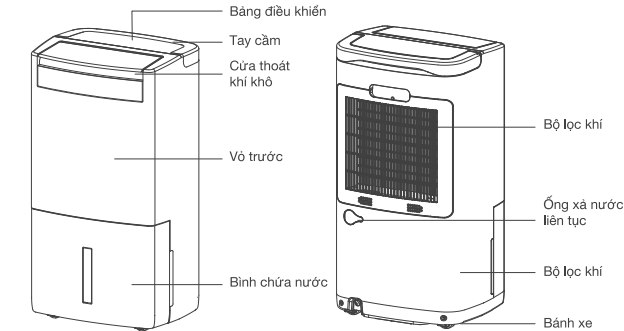

Bảng điều khiển

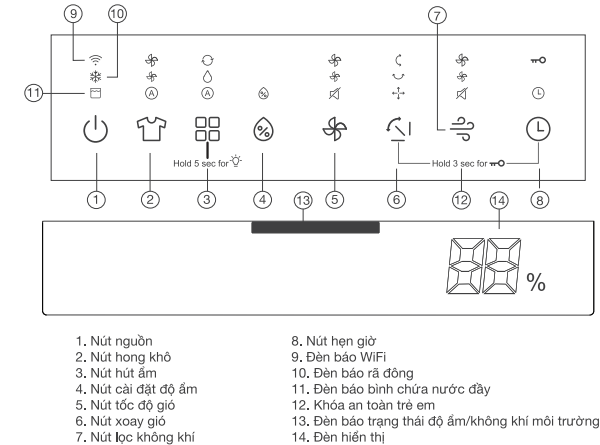

Giải Thích Chức Năng

Màn hình hiển thị

Hiển thị độ ẩm phòng hiện tại theo phần trăm hoặc số giờ còn lại trong chế độ Hẹn giờ. Đèn báo tương ứng sẽ sáng.

Nút nguồn

Nhấn nút Nguồn để Bật/Tắt máy hút ẩm.
LƯU Ý: Tắt nguồn bằng cách nhấn nút Nguồn sẽ không ngắt kết nối thiết bị khỏi nguồn điện.

Chế độ hong khô quần áo

Khi máy đang hoạt động, nhấn nút "Hong Khô", chức năng sẽ tuần tự chuyển theo các chế độ sau. Nhấn Các phím chức năng khác để thoát chế độ hong khô và trở về chế độ hút ẩm. Trong chế độ hong khô, máy nén sẽ được ép hoạt động.
1. Chức năng hong khô tự động, gió mạnh, và cánh đảo gió tự động.
2. Chức năng hong khô nhẹ, gió yếu, có thể điều chỉnh góc đảo gió.
3. Chức năng hong khô mạnh, gió mạnh, góc đảo gió có thể điều chỉnh.

Nút hút ẩm

Khi máy đang hoạt động, nhấn nút "Hút Ẩm", chức năng sẽ tuần tự chuyển theo các chế độ sau:
1. Chế độ tự động: kiểm soát độ ẩm dựa trên nhiệt độ môi trường.
Trong chế độ hút ẩm, đèn báo tùy chỉnh sáng, người dùng có thể đặt độ ẩm mong muốn.
2. Chế độ liên tục: máy nén ép hoạt động liên tục.

Nút cài đặt độ ẩm

Khi nhấn nút cài đặt độ ẩm, máy sẽ chuyển sang chế độ hút ẩm tùy chỉnh.
Mỗi lần nhấn , độ ẩm được cài đặt lần lượt 30%→40%→50%→60%→70%→30%→40%→..... Trong khi cài đặt, màn hình sẽ hiển thị "Cài đặt độ ẩm" và nhấp nháy. Sau 5 giây, việc cài đặt hoàn tất và màn hình hiển thị trở lại độ ẩm môi trường.

Nút tốc độ gió

Trong chế độ hút ẩm, tốc độ gió có thể được cài đặt bằng cách nhấn nút tốc độ gió. Mỗi lần nhấn, tốc độ gió sẽ tuần tự chuyển qua các mức đã cài đặt.

Nút xoay gió

Sau khi nhấn nút xoay gió, cánh đảo gió sẽ tự động tuần hoàn theo các chế độ.

Nút lọc không khí

Khi nhấn nút lọc không khí, chức năng sẽ tuần tự chuyển theo các chế độ. Khi chức năng lọc không khí được kích hoạt, máy nên sẽ ngừng hoạt động, các cánh gió thổi dọc và ngang cố định ở vị trí 90° (góc quay không thể điều chỉnh).
Nhắc nhở thay màng lọc HEPA: Khi thời gian hoạt động tích lũy của quạt đạt 2.000 giờ, đèn báo độ ẩm môi trường sẽ nhấp nháy.
Cách đặt lại: Nhấn và giữ nút cài đặt lọc không khí trong 5 giây → đèn báo ngừng nhấp nháy → bộ hẹn giờ đặt lại về 0 và bắt đầu đếm lại.

Nút hẹn giờ

Khi máy đang ở chế độ chờ, nhấn nút “Hẹn Giờ” để cài đặt tắt/bật theo thời gian. Mỗi lần nhấn, thời gian hẹn sẽ thay đổi lần lượt: “1→2→4...→12→Esc→1→...”.
Trong quá trình cài đặt, màn hình hiển thị “Giờ” sẽ nhấp nháy, sau 5 giây thì lưu cài đặt. Sau khi cài đặt xong, màn hình sẽ hiển thị “Thời gian còn lại cho đến khi bật/tắt”.
Sau khi khởi động, chế độ hoạt động sẽ tự động bắt đầu theo cài đặt.

Đèn báo kết nối WiFi

Khi bật máy, đèn báo WiFi bắt đầu nhấp nháy. Kết nối WiFi theo hướng dẫn trong ứng dụng. Khi kết nối thành công, đèn báo WiFi sẽ sáng liên tục.
Khi kết nối thất bại, nhấn giữ nút nguồn khoảng 5 giây để xóa tài khoản và mật khẩu WiFi đã lưu, đồng thời khôi phục cài đặt gốc. Máy sẽ phát tiếng bíp dài.

Đèn báo độ ẩm môi trường

Sau khi máy chạy 1 phút, đèn báo trạng thái độ ẩm môi trường sẽ sáng.
1. Đèn báo màu cam: Độ ẩm môi trường cao.
2. Đèn báo màu xanh dương: Độ ẩm môi trường ở mức thoải mái.
3. Đèn báo màu xanh lá: Độ ẩm môi trường khô.
(Cảm nhận về độ ẩm có thể khác nhau giữa các cá nhân.)

Đèn báo chất lượng không khí

Sau khi máy chạy 10 giây, đèn báo chất lượng không khí sẽ sáng.
1. Đèn báo màu đỏ: Không khí ô nhiễm nặng.
2. Đèn báo màu vàng: Không khí ô nhiễm nhẹ.
3. Đèn báo màu xanh lá: Không khí trong lành.

Khóa an toàn trẻ em

Nhấn đồng thời nút Nguồn và Xoay gió khoảng 3 giây để kích hoạt hoặc hủy kích hoạt khóa an toàn trẻ em.
Khi chức năng này được bật, mọi thao tác nút bấm sẽ vô hiệu, và máy sẽ phát cảnh báo bằng âm thanh và ánh sáng.

Nút tắt/mở đèn hiển thị



Nhấn giữ nút Cài đặt độ ẩm trong 5 giây để tắt tất cả đèn báo.
Nhấn giữ lại nút Cài đặt độ ẩm trong 5 giây để khôi phục hiển thị đèn báo.

Hướng Dẫn Vận Hành

Bắt đầu hoạt động

1. Cắm phích cắm vào ổ cắm điện phù hợp. Máy hút ẩm thích hợp để vận hành bằng nguồn điện có cùng điện áp ghi trên nhãn định mức.

2. Đảm bảo bình chứa nước được đặt đúng vị trí. (Sau khi bật máy lần đầu, nếu đèn "Bình chứa nước đầy" sáng, chỉ cần kéo bình chứa nước ra, kiểm tra cần gạt "phao" có thể di chuyển tự do không, sau đó đặt bình chứa nước trở lại vị trí chính xác.)

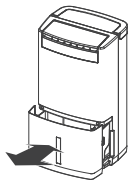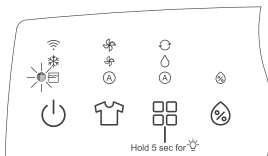

Khi đèn báo đầy bình nước bật sáng

Khi bình chứa nước đầy, máy sẽ dừng và đèn báo "Bình chứa nước đầy" sẽ sáng. Cần thận trọng tháo bình chứa nước ra khỏi máy bằng cách trượt nhẹ từ phía trước ra ngoài và đổ hết nước. Khi bình chứa nước đầy được lắp lại đúng vị trí, máy sẽ khởi động và hoạt động bình thường.

Vui lòng dùng cả hai tay để cẩn thận đổ hết nước trong bình chứa.





Rã đông

Khi hoạt động ở nhiệt độ thấp (dưới 12°C), bề mặt dàn bay hơi sẽ đóng băng và ảnh hưởng đến hiệu suất của máy hút ẩm. Khi đó, máy sẽ tự động chuyển sang chế độ xả băng định kỳ. Điều này hoàn toàn bình thường. Đèn xả băng sẽ sáng. Máy sẽ hoạt động ở nhiệt độ xuống đến 5°C. Thời gian xả băng có thể khác nhau. Nếu máy hút ẩm bị đóng băng, hãy tắt máy trong vài giờ rồi khởi động lại. Không nên sử dụng máy hút ẩm ở nhiệt độ dưới 5°C.

Lắp đặt lưới lọc (màng lọc)



1. Tháo tấm hút gió phía sau.

2. Tháo túi nhựa ra khỏi lưới lọc.

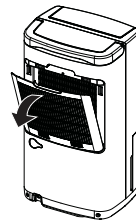

3. Đặt phần tai kéo hướng ra ngoài (như trong hình), sau đó lắp màng lọc vào khe.

4. Lắp lại tấm hút gió phía sau.

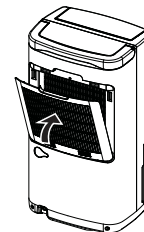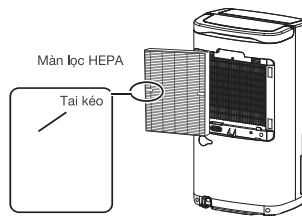


Hãy vệ sinh màng lọc định kỳ, kịp thời để đảm bảo hiệu quả lọc không khí.

Xả Nước Liên Tục


Cách lắp đặt ống thoát nước

1. Mờ nắp lỗ thoát nước phía sau máy (Hình 1).
2. Sau khi lấy bình chứa nước ra, tìm chốt chặn nước ở góc trên bên phải của máy, sau đó dùng tay đẩy mờ ra (Hình 2 – Hình 4).
3. Đồng thời, dùng tay kia lấy ống thoát nước và kéo ra, rồi đưa vào lỗ thoát nước ở vỏ sau (Hình 5 – Hình 6).

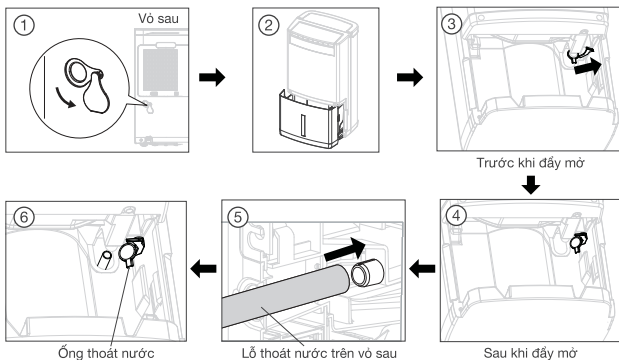


Cách lắp đặt ống thoát nước đúng cách

Khi sử dụng hệ thống xả nước liên tục, ống phải được đặt bên dưới lỗ thoát nước. Tránh đặt trên bề mặt không bằng phẳng và không làm "gấp khúc" ống.

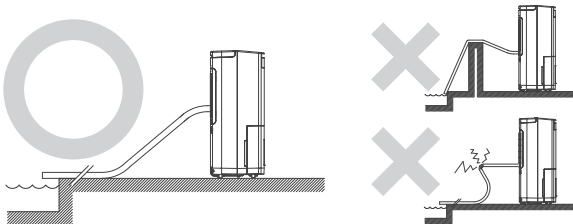

Bảo Trì

Vui lòng đảm bảo máy hút ẩm đã được rút phích cắm trước khi bảo dưỡng hoặc vệ sinh máy vì lý do an toàn!



Làm sạch vỏ máy


- A. Lau vỏ máy bằng vải mềm và sạch.
- B. Nếu máy hút ẩm quá bẩn, vui lòng sử dụng chất tẩy rửa nhẹ sau đó lau sạch bằng vải khô một nửa.
- C. Không rửa máy bằng vòi nước vì có thể gây rò rỉ điện.

Làm sạch bộ lọc khí


Mục đích của bộ lọc khí là lọc bụi hoặc các tạp chất bẩn trong không khí. Nếu bộ lọc bị bụi bẩn làm tắc nghẽn, điện năng tiêu thụ sẽ cao hơn bình thường và có nguy cơ quá nhiệt. Để loại bỏ độ ẩm hiệu quả hơn, vui lòng vệ sinh bộ lọc hai tuần một lần. Không sử dụng ở khu vực nhiều bụi.

Các bước vệ sinh

1. Kéo khung lọc ra.

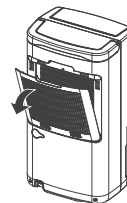

2. Rửa sạch khung bằng máy hút bụi hoặc nước. Sau đó lau lại bằng khăn khô.



3. Lắp lại bộ lọc khí sạch. Có thể sử dụng lại máy hút ẩm.

Xử Lý Sự Cố

Tình trạng lỗi	Các mục cần kiểm tra
Bật công tắc nguồn nhưng máy không chạy.	Phích cắm điện đã được cắm đúng vào ổ cắm chưa?
	Có phải nhà không có cầu chì hay cầu chì bị ngắt không?
	Có mất điện không?
Lượng hút ẩm ít hơn	Bộ lọc có quá bẩn để chặn không?
	Nhiệt độ và độ ẩm trong nhà có quá thấp không?
	Cửa hút gió hoặc cửa thoát gió của thiết bị có bị chặn không?
Tiếng ồn lớn	Mặt đất có gồ ghề không?
	Máy hút ẩm có được đặt không đúng vị trí gây ra tiếng ồn không?

XỬ LÝ KHẨN CẤP

Khi máy hút ẩm hoạt động bất thường, vui lòng nhanh chóng rút phích cắm điện và mang đến bộ phận bảo hành của công ty để xử lý. Nghiêm cấm tự ý tháo rời máy hút ẩm để tránh nguy hiểm!

Thông Số Kỹ Thuật

Tên sản phẩm	Máy hút ẩm Lumias
Model	D6S-26L D6E-26L
Điện áp/Tần số	AC 220-240V~ 50Hz
Công suất đầu vào	310W
Công suất hút ẩm	26L/N (30°C/80%RH)
Nhiệt độ hoạt động	5°C-32°C
Chất làm lạnh	R134a/0.183kg
Độ ồn	36dB(A)
Dung tích bình chứa nước	5L
Khối lượng sản phẩm	14kg
Kích thước sản phẩm	326 x 259 x 612 mm

Thông tin xử lý và tái chế



Tất cả các sản phẩm có biểu tượng này là thiết bị điện và điện tử thải bỏ theo quy định và không nên vứt chung với rác thải sinh hoạt. Để bảo vệ sức khỏe con người và môi trường, hãy đưa sản phẩm đến điểm thu gom được chỉ định bởi chính quyền địa phương để xử lý và tái chế đúng cách.

Việc xử lý không đúng cách có thể gây ảnh hưởng tiêu cực đến môi trường và sức khỏe con người. Hãy liên hệ đơn vị lắp đặt hoặc chính quyền địa phương để biết thêm thông tin về điểm thu gom cũng như các điều kiện liên quan.