



Scan the QR code to see the manual.



OWNER'S MANUAL

FRIDGE & FREEZER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH



MFL05842101
Rev.00_102825

www.lg.com

Copyright © 2025 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.....	3
WARNING	3
CAUTION	9

INSTALLATION

Before Installation	11
Levelling the Appliance	11
Turning on the Power.....	12
Moving the Appliance for Relocation	12

OPERATION

Before Use	13
Product Features.....	15
Control Panel.....	17
Icemaker	17
Fridge Drawer	18
Door Basket	18
Shelf	18

MAINTENANCE

Cleaning	19
----------------	----

TROUBLESHOOTING

Before Calling for Service.....	20
---------------------------------	----

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person

4 SAFETY INSTRUCTIONS

responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- This appliance is not for use in portable or mobile installations, such as marine or RV uses, where it will be in motion while operating.



This symbol alerts you to flammable materials that can ignite and cause a fire if you do not take care.

- This appliance contains a small amount of isobutane refrigerant (R600a), but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult with service agent or a similarly qualified person before disposing of them.
- Do not damage the refrigerant circuit.
- If the power cord is damaged or the hole of the outlet socket is loose, it must be replaced. Do not use the power cord and contact an authorized service centre in order to avoid a hazard.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Securely plug the power plug in the outlet socket after completely removing any moisture and dust.
- Never unplug the appliance from the power supply by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not tilt the appliance to pull or push it when transporting.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- Do not use a hair drier to dry the inside of the appliance or place a candle inside to remove the odours.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Make sure not to get a body part such as a hand or foot stuck while moving the appliance.
- Disconnect the power cord before cleaning the appliance interior or exterior.
- Do not spray water or inflammable substances (toothpaste, alcohol, thinner, benzene, flammable liquid, abrasive, etc.) over the interior or exterior of the appliance to clean it.
- Do not clean the appliance with brushes, cloths or sponges with rough surfaces or which are made of metallic material.
- Only qualified service personnel from LG Electronics service centre should disassemble or repair the appliance.

Risk of Fire and Flammable Materials

- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m² in size for every 8 g of R600a refrigerant inside the appliance.

6 SAFETY INSTRUCTIONS

- Refrigerant leaking out of the pipes could ignite or cause an explosion.
- The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

Installation

- This appliance should only be transported by two or more people holding the appliance securely.
- Install the appliance on a firm and level floor.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Do not place the appliance in direct sunlight or expose it to the heat from heating appliances such as stoves or heaters.
- Be careful not to expose the rear of the appliance when installing.
- Install the appliance in a place where it is easy to unplug the power plug of the appliance.
- Be careful not to let the appliance door fall during assembly or disassembly.
- Be careful not to pinch, crush, or damage the power cable during assembly or disassembly of the appliance door.
- Be careful not to point the power plug up or let the appliance lean against the power plug.
- Do not modify or extend the power cable.
- Ensure that the outlet socket is properly grounded, and that the earth pin on the power cord is not damaged or removed from the power plug. For more details on grounding, inquire at an LG Electronics customer information centre.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and grounded in accordance with all local codes and ordinances.

- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Do not plug the appliance into a multi socket adapter which does not have a power cable (mounted).
- The appliance should be connected to a dedicated power line which is separately fused.
- Do not use a multi-socket outlet which is not properly grounded (portable). It must comply with the technical specifications of the appliance and may only be used for the appliance.

Operation

- Do not use the appliance for any purpose (storage of medical or experimental materials or shipping) other than any domestic household food storage use.
- If water penetrates electrical parts of the appliance, disconnect power plug and contact an LG Electronics customer information centre.
- Unplug the power plug during a severe thunderstorm or lightning or when not in use for a long period of time.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Immediately unplug the power plug and contact an LG Electronics customer information centre if you detect a strange sound, odour, or smoke coming from the appliance.
- Do not place hands or metallic objects inside the area emitting the cold air, cover or heat releasing grille on the back.
- Do not apply excessive force or impact to the back cover of the appliance.
- Be careful of nearby children when you open or close the appliance door. The door may bump the child and cause injury.

8 SAFETY INSTRUCTIONS

- Avoid the danger of children getting trapped inside the appliance. A child trapped inside the appliance can cause suffocation.
- Do not put animals, such as pets into the appliance.
- Do not place heavy or fragile objects, containers filled with liquid, combustible substances, flammable objects (such as candles, lamps, etc.), or heating devices (such as stoves, heaters, etc.) on the appliance.
- Do not place any electronic appliance (such as heater and mobile phone) inside the appliance.
- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately. This appliance uses a refrigerant gas (isobutane, R600a). Although it uses a small amount of the gas, it is still combustible gas. Gas leakage during appliance transport, installation or operation can cause fire, explosion or injury if sparks are caused.
- Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, insecticide, air freshener, cosmetics, etc.) near the appliance.
- This appliance incorporates an earth connection for functional purposes.
- Connect to potable water supply only.
 - If connected to a water supply, connect to a potable water supply only.
- Fill with potable water only.
 - If using an icemaker or dispenser water tank, make sure to fill it with potable water only.

Disposal

- When discarding the appliance, remove the door gasket while leaving the shelves and baskets in place and keep children away from the appliance.

CAUTION

CAUTION

- To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

ENGLISH

Installation

- After unpacking, check the appliance for any damage that may have occurred during transit.
- Wait for at least 3 to 4 hours in order to ensure the refrigerant circuit is fully efficient.
- Move the appliance carefully on sensitive floors to avoid damage to the floor.

Operation

- Do not touch frozen food or the metal parts in the freezer compartment with wet or damp hands. It may cause frostbite.
- Do not place glass containers, bottles or cans (especially those containing carbonated drinks) in the freezer compartment, shelves or ice bucket that will be exposed to temperatures below freezing. Contents may expand when frozen, break the container and cause injury.
- The tempered glass on the front side of the appliance door or the shelves can be damaged by an impact. If it is broken, do not touch it with hands.
- Do not hang from the appliance doors, storage room, shelf or climb up into it.
- Do not store an excessive amount of water bottles or containers for side dishes on the door baskets.
- Do not open or close the appliance door with excessive force.
- If the hinge of the appliance door is damaged or operates improperly, stop using the appliance and contact an authorized service centre.

10 SAFETY INSTRUCTIONS

- Prevent animals from nibbling on the power cable or water hose.
- Never eat frozen foods immediately after they have been taken out in the freezer compartment. There is a risk of freezing or the formation of frost blisters. **FIRST AID:** Immediately hold it under cold running water. Do not pull it away.
- Make sure not to get a hand or foot stuck upon opening or closing the appliance door or door in door.

Maintenance


- This appliance is equipped with maintenance-free LED interior light. Do not remove cover or LED lamp in any attempt to repair or change it. Contact an LG Electronics customer information centre.
- Do not clean glass shelves or covers with warm water when they are cold. They may shatter if exposed to sudden temperature changes.
- Do not insert the shelves upside down. The shelves may fall.
- If ice forms in the freezer compartment, please contact LG Electronics customer service. Do not use sharp-edged objects to remove any frost or ice build-up. Do not use sprays, electric heating devices such as fan heaters, hair dryers, steam cleaners or other heat sources for defrosting. Plastic parts could deform.
- Dispose of the ice inside the ice bucket in the freezer compartment during an extended power outage.

INSTALLATION

Before Installation

Dimensions and Clearances

Too small of a distance from adjacent items may result in the degradation of freezing capability and increased electricity costs. Allow over 50 mm of clearance between the back of the appliance and the wall when installing the appliance.

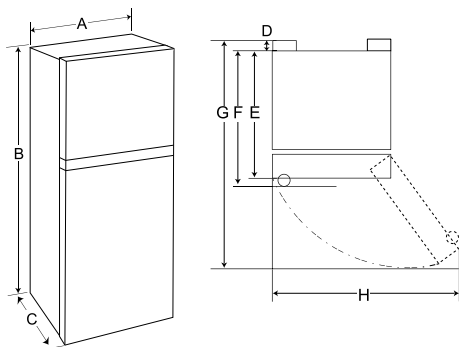

-	Size (mm)
A	603
B	1709
C	633
D	50
E	633
F	633
G	1147
H	942

Ambient Temperature

- The appliance is designed to operate within a limited range of ambient temperatures, depending on the climate zone.
- The internal temperatures could be affected by the location of the appliance, the ambient

temperature, the frequency of door opening and so on.

- The climate class can be found on the rating label.

Climate Class	Ambient Temperature Range °C
SN (Extended Temperate)	+10 - +32
N (Temperate)	+16 - +32
ST (Subtropical)	+16 - +38 / +18 - +38**
T (Tropical)	+10 - +43* / +16 - +43 / +18 - +43**

* Australia, India, Kenya

** Argentina

NOTE


- The appliances rated from SN to T are intended to be used at an ambient temperature between 10 °C and 43 °C.

Levelling the Appliance

Adjusting the Levelling Leg

If the appliance seems unsteady, or the doors do not close easily, adjust the appliance's tilt using the instructions below.

- Turn the levelling leg clockwise to raise that side of the appliance or counterclockwise to lower it.

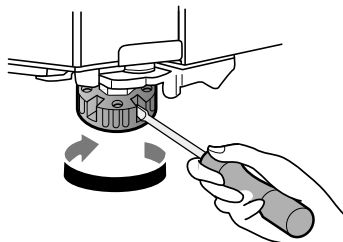

12 INSTALLATION

- 2 Open the doors and check to make sure that they close easily.

NOTE

- Leveling the doors may not be possible when the floor is not leveled, or is of weak or poor construction.
- The refrigerator is heavy and should be installed on a rigid and solid surface.
- Some timber flooring may cause levelling difficulties if it flexes excessively.

Turning on the Power

Connecting the Appliance

To turn on the appliance, connect the power plug into the outlet socket. Do not double up with other appliances on the same outlet.

NOTE

- After connecting the power supply cord (or plug) to the outlet, wait enough time before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.
- To turn off the appliance, disconnect the power plug from the outlet socket.


- Models without a power plug hook:
Pull the power plug out and fix the power supply cable with a tape to the side of the appliance where the power socket is located at the installation site.

- 3 Tape parts such as shelves and the door handle to prevent from falling off while moving the appliance.

- 4 Move the appliance with more than two people carefully. When transporting the appliance over a long distance, keep the appliance upright.

⚠ CAUTION

- Move the appliance carefully on sensitive floors to avoid damage to the floor.
- Use cardboard, floor mat or carpet to prevent scratches on the floor when installing or moving the appliance.
- Do not move the appliance in zigzags.

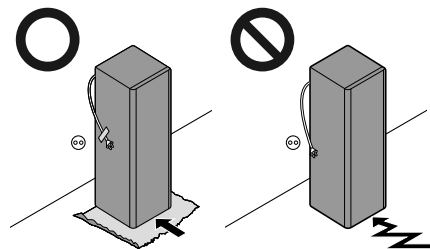

Moving the Appliance for Relocation

Moving the Appliance

- 1 Remove all food from inside the appliance.

- 2 Fix the power plug.

- Models with a power plug hook:
Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance.

- 5 After installing the appliance, connect the power plug into a mains outlet socket and switch it on.

OPERATION

Before Use

Notes for Operation

- Before placing food in the appliance, clean the inside and outside of the appliance with warm water and a mild washing-up liquid to remove manufacturing residues.
- Users should keep in mind that frost can form if the door is not closed completely or if the humidity is high during the summer.
- Ensure there is sufficient space between food stored on the shelf or door basket to allow the door to close completely.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Note that a temperature rise after defrosting has a permissible range in the appliance specifications. If you wish to minimise the impact on the food storage due to a temperature rise, seal or wrap the stored food in several layers.

may result in less efficient energy consumption or performance.

- Ensure there is sufficient space between stored foods. This allows cold air to be circulated evenly and lowers electricity bills.
- Store hot food only after it has cooled in order to prevent dew or frost.
- When storing food in the freezer compartment, set the freezer temperature lower than the temperature indicated on the food.
- Do not set the temperature of the appliance lower than needed.
- Do not put food near the temperature sensor of the fridge compartment. Keep a distance of at least 3 cm from the sensor.

Storing Foods Effectively

- Food may freeze or spoil if stored at the wrong temperature. Set the refrigerator to the correct temperature for the food being stored.
- Store frozen food or refrigerated food inside sealed containers.
- Check the expiration date and label (storage instructions) before storing food in the appliance.
- Do not store food for a long period of time if it spoils easily at a low temperature.
- Do not place unfrozen food in direct contact with food that is already frozen. Do not store excessive amounts of fresh food.
- Freeze food in portion-sized quantities for faster freezing, easier thawing and processing.
- Place the refrigerated food or frozen food in each fridge or freezer compartment immediately after purchasing.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Refrigerated foods and other food items can be stored on top of the vegetable drawer.
- Avoid refreezing any food which has been completely thawed. Freezing any food which has

Door Open Alarm

This feature is only available on some models. The alarm sounds if the door is left open or not completely closed.

NOTE

- Contact the LG Electronics customer information centre if the alarm sound continues even after closing all doors.

Suggestion for Energy Saving

- For the most efficient use of energy, keep all inner parts (e.g. door bins, drawers and shelves) on their original location. Altering their positions

14 OPERATION

been completely thawed again will lower its taste and nutrition.

- Only take out the amount of food that you need. Consume thawed food quickly. It can only be refrozen after being cooked.
- Cool hot food before storing. If too much hot food is placed inside, the internal temperature of the appliance can increase and negatively affect other foods stored in the appliance.
- Do not overfill the appliance. Cold air can not circulate properly if the appliance is overfilled.
- If you set an excessively low temperature for food, it may become frozen. Do not set a temperature lower than the required temperature for the food to be stored correctly.
- If there are chill compartments in the appliance, do not store vegetables and fruits with higher moisture content in the chill compartments as they may freeze due to the lower temperature.
- Always follow the food manufacturer's instructions on the permissible storage duration of frozen food. Do not exceed the recommended storage time of food.
 - Mark the storage date, permissible storage duration, and the food name on the packaging to prevent it from exceeding the storage time limit.
- In the event of a blackout, call the electricity company and ask how long it is going to last.
 - You should avoid door openings while the power is off.
 - When the power supply gets back to normal, check the condition of the food.
 - If the power outage lasts longer, especially during the summer months, please follow these guidelines:
 - Do not place additional food into the appliance during the power outage.
 - If the power outage is announced and is expected to last for more than 10 hours, prepare some ice and put it in a container on the top shelf of the fridge.
 - Due to the temperature increase in the appliance during a power outage or other malfunction, the shelf life of the food will be reduced and its quality will decrease. If necessary, process thawed food and freeze it again in the cooked state.

Maximum Freezing Capacity

- For maximum freezing capacity, set the freezer temperature to the coldest temperature setting.
- To freeze food items quickly, store the food in the left side of lower compartment. Food items will freeze most quickly in the zone.
- To get better air circulation, insert all inner parts like baskets, drawers, and shelves.

Freezing the Maximum Amount of Food

If large quantities of food are to be stored, the icemaker should be taken out of the appliance and the food should be stacked directly on the freezer shelves in the freezer compartment.

NOTE


- Insert the icemaker in the right position.

Product Features

The appearance or components of the appliance may differ from model to model.

Exterior and Interior

*1 This feature is only available on some models.

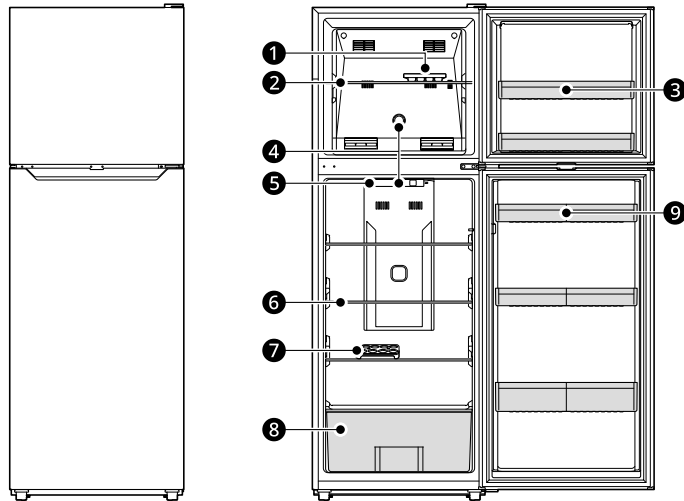

❶ Ice Tray*¹

This is where ice is manually produced.

- For more space, you can remove the ice tray.

❷ Freezer Shelf

Stores frozen foods such as meat, fish, and icecream.

❸ Freezer Door Basket

Stores small packages of frozen food. Do not store ice cream or food which will be stored for a long period of time.

❹ Control Panel*¹

Sets the fridge temperature and freezer temperature.

❺ LED lamp

The LED lamps inside the appliance light up when you open the door.

❻ Fridge Shelf

This is where refrigerated foods and other items are stored.

- Stores the foods with higher moisture content at the front of the shelf.
- The shelf height can be adjusted by inserting the shelf in another groove of different height.
- The actual number of shelves may differ from model to model.

16 OPERATION

7 Movable Egg Tray*1

This is where eggs are stored.

- You can move it to and use it at a desired position as needed. However, do not use it as the ice bin or place it on the shelf on top of the fridge or the vegetables drawer.

8 Fridge Drawer

Stores fruits and vegetables.

9 Fridge Door Basket

Stores small packages of refrigerated foods, drinks and sauce containers.


Control Panel

The actual control panel may differ from model to model.

Control Panel and Functions


Control Panel 1: Inside the Fridge

Turn the dial to select a desired temperature between **Cold** and **Coldest**.



Control Panel 2: Inside the Freezer

Turn the dial to select a desired temperature between **Min** and **Max**.

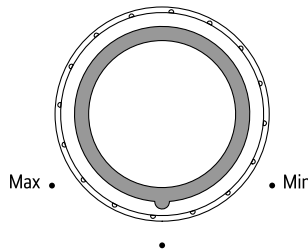

NOTE

- The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within the appliance.
- For optimal food preservation, increasing or decreasing one level from the default temperature is recommended.

Icemaker

This feature is only available on some models.


Using the Ice Tray

This is where ice is manually produced.

- 1 Fill the ice tray with potable water and place it in the freezer.



- 2 After the water is frozen, hold the ice tray at its ends and twist gently.



CAUTION

- Be careful not to twist the ice tray with force as it can be broken.
- If you open and close the freezer door frequently, it may take longer for water to be frozen.

18 OPERATION


NOTE

- If the ice tray is overfilled, the ice cubes may stick together and be difficult to remove.
- Ice can be removed more easily by pouring water on the ice tray.

Fridge Drawer

Removing and Refitting the Fresh Vegetable Drawer

- 1 Remove the contents of the drawer. Hold the handle of the vegetable drawer and gently pull it out outward until the drawer stops completely.
- 2 Lift the vegetable drawer up and remove it by pulling it out.

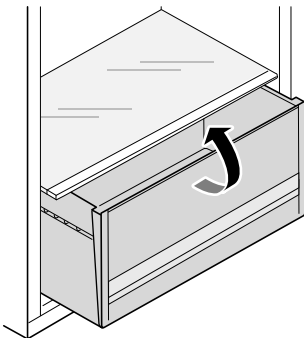

- 3 Mount the vegetable drawer in the reverse order of the removal process.


⚠ CAUTION

- Remove all food from inside the appliance, otherwise injuries can be caused by the weight of stored foods.

Door Basket

Removing/Refitting the Door Basket

- 1 Hold both edges of the basket and remove it by lifting it upward.

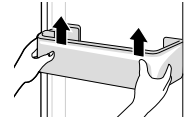


- 2 Refit the door basket in the reverse order of the removal process.

Shelf

Removing/Refitting the Shelf

- 1 Hold the both side of the shelf. Lift the shelf up and remove it by pulling it out.

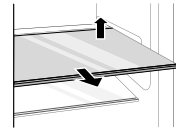

- 2 Refit the shelf by sliding it inward until the shelf snaps into the frame.

MAINTENANCE

Cleaning

General Cleaning Tips

- Performing manual defrosting, maintenance or cleaning of the appliance while food is stored in the freezer can raise the temperature of the food and reduce its storage life.
- Regularly clean any surfaces that can come in contact with food.
- When cleaning the inside or outside of the appliance, do not wipe it with a rough brush, toothpaste, or flammable materials. Do not use cleaning agents containing flammable substances. This may cause discolouration or damage to the appliance.
 - Flammable substances: alcohol (ethanol, methanol, isopropyl alcohol, isobutyl alcohol, etc.), thinner, bleach, benzene, flammable liquid, abrasive, etc.
- After cleaning, check if the power cable is damaged.

Cleaning the Exterior

- When cleaning the outside air vents of the appliance by means of vacuuming, then the power cord should be unplugged from the outlet to avoid any static discharge that can damage the electronics or cause an electric shock. Regular cleaning of the rear and side ventilation covers is recommended to maintain reliable and economical operation of the unit.
- Keep the air vents on the exterior of the appliance clean. Blocked air vents can cause fire or appliance damage.
- For the appliance exterior, use a clean sponge or soft cloth and a mild detergent in warm water. Do not use abrasive or harsh cleaners. Dry thoroughly with a soft cloth. Do not use contaminated cloths when cleaning the stainless steel doors. Always use a dedicated cloth and wipe in the same direction as the grain. This helps reduce surface staining and tarnishing.

Cleaning the Interior

- Before removing a shelf or drawer from inside the appliance, remove all stored foods from the shelf or drawer to prevent injury or damage to the appliance. Otherwise, injury may occur due to the weight of stored foods.
- Detach the shelves and drawers and clean them with water and a mild detergent, and then dry them sufficiently, before replacing them.
- Regularly wipe the door gaskets and door seals with water and a mild detergent.
- Door basket spills and stains should be cleaned as they can compromise storage ability of the basket and could even be damaged.
- Never clean the shelves, door baskets, or containers in the dishwasher or in hot water. The parts may become deformed, and glass may shatter due to the heat.
- The automatic defrosting system in the appliance ensures that the compartment remains free of ice buildup under normal operating conditions. Users do not need to defrost it manually.

20 TROUBLESHOOTING

TROUBLESHOOTING

Before Calling for Service

Cooling

Symptoms	Possible Cause & Solution
There is no refrigeration or freezing.	Is there a power interruption? Check the power of other appliances.
	Appliance is unplugged. Plug the power plug in the outlet properly.
	A fuse in your home may be blown or the circuit breaker tripped. Or the appliance is connected to a GFCI (Ground Fault Circuit Interrupter) outlet, and the outlet's circuit breaker has tripped. - Check the main electrical box and replace the fuse or reset the circuit breaker. Do not increase fuse capacity. If the problem is a circuit overload, have it corrected by a qualified electrician. - Reset the circuit breaker on the GFCI. If the problem persists, contact an electrician.
There is poor refrigeration or freezing.	Is the fridge or freezer temperature set to its warmest setting? Set the fridge or freezer temperature to a colder setting.
	Is the appliance in direct sunlight, or is it near a heat generating object such as cooking oven or heater? Check the installation area and reinstall it away from heat generating objects.
	Did you store hot food without cooling it first? Cool the hot food first before putting it in the fridge or freezer compartment.
	Did you put in too much food? Maintain an appropriate space between food.
	Are the appliance doors completely closed? Completely close the door and make sure that stored food is not obstructing in the door.
	Is there enough space around the appliance? Adjust the installation position to make enough space around the appliance.
The appliance contains a bad smell.	Is the fridge or freezer temperature set to 'Warm'? Set the fridge or freezer temperature to a colder setting.

Symptoms	Possible Cause & Solution
The appliance contains a bad smell.	Did you put in food with a strong smell? Store foods with strong smells in sealed containers.
	Vegetables or fruit may have spoiled in the drawer. Throw away rotten vegetables and clean the vegetable drawer. Do not store vegetables too long in the vegetable drawer.

Condensation & Frost

Symptoms	Possible Cause & Solution
There is condensation inside the appliance or on the bottom of the vegetable drawer cover.	Did you store hot food without cooling it first? Cool the hot food first before putting it inside the fridge or freezer.
	Did you leave the appliance door open? Although the condensation will disappear soon after you close the appliance door, you can wipe it with a dry cloth.
	Do you open the appliance doors too frequently? Condensation can form due to the temperature difference from the outside. Wipe out the dampness with a dry cloth and do not open the doors too frequently.
	Did you put warm or moist food inside without sealing it in a container? Store food in a covered or sealed container.
Frost has formed in the freezer compartment.	Doors may not be closed properly. Check if the food item inside the appliance is blocking the door and make sure that the door is tightly closed.
	Did you store hot food without cooling it first? Cool the hot food first before putting it in the fridge or freezer compartment.
	Is the air entry or exit of the freezer compartment blocked? Make sure that air entry or exit is not blocked so that the air can circulate inside.
	Is the freezer compartment overfilled? Maintain an appropriate space between items.
Frost or condensation has formed inside or outside the appliance.	Did you open and close the appliance door frequently or is the appliance door improperly closed? Frosts or condensation can form if the outside air penetrates inside the appliance. Do not open the doors too frequently.

22 TROUBLESHOOTING











Symptoms	Possible Cause & Solution
Frost or condensation has formed inside or outside the appliance.	Is the installation environment humid? Condensation can appear on the exterior of the appliance if the installation area is too humid or on a humid day such as a rainy day. Wipe off any moisture with a dry cloth.
The side or front of the appliance is warm.	There are anti condensation pipes fitted to these areas of the appliance to reduce condensation forming from around the door area. The heat releasing pipe to prevent condensation is installed on the front and side of the appliance. You may feel it particularly hot right after the appliance is installed or during the summer. You can be assured that this is not a problem and is quite normal.
There is water inside or outside of the appliance.	Is there water leakage around the appliance? Check if the water has leaked from a sink or another place.
	Is there water on the bottom of the appliance? Check if the water is from the thawed frozen food or a broken or dropped container.

Parts & Features

Symptoms	Possible Cause & Solution
The appliance door is not closed tightly.	Is the appliance leaning forward? Adjust the front feet to raise the front side slightly.
	Were the shelves properly assembled? Refit the shelves if needed.
	Did you close the door with excessive force? If you apply too much force or speed when closing the door, it may remain briefly open before closing. Make sure that you do not slam the door closed. Close without force.
It is difficult to open the appliance door.	Did you open the door right after you closed it? If you try to open the appliance door within one minute after you closed it, you may have difficulties because of the pressure inside the appliance. Try to open the appliance door again in a few minutes so that the internal pressure stabilizes.
The inside lamp in the appliance does not turn on.	Lamp failure Close the door and re-open. If the lamp does not turn on, please contact the LG Electronics customer information centre. Do not attempt removal of the lamp.

Noises

Symptoms	Possible Cause & Solution
The appliance is noisy and generates abnormal sounds.	Is the appliance installed on a weak floor or improperly levelled? Install the appliance on a solid and flat area.
	Does the rear of the appliance touch the wall? Adjust the installation position to allow enough clearance around the appliance.
	Are objects scattered behind the appliance? Remove the scattered objects from behind the appliance.
	Is there an object on top of the appliance? Remove the object on top of the appliance.
Clicking noises	The defrost control will click when the automatic defrost cycle begins and ends. The thermostat control (or appliance control on some models) will also click when cycling on and off. Normal Operation
Rattling noises	Appliance is not resting evenly on the floor. Floor is weak or uneven or levelling legs need to be adjusted.
	Appliance with a compressor was moved while operating. Normal operation. If the compressor does not stop rattling after three minutes, turn the power to the appliance off and then on again.
Whooshing noises	Evaporator fan motor is circulating air through the fridge and freezer compartments. Normal Operation
	Air is being forced over the condenser by the condenser fan. Normal Operation
Gurgling noises	Appliance flowing through the cooling system. Normal Operation
Popping noises	Contraction and expansion of the inside walls due to changes in temperature. Normal Operation
Vibrating	If the side or back of the appliance is touching a cabinet or wall, some of the normal vibrations may make an audible sound. To eliminate the noise, make sure that the sides and back do not make any contact with any wall or cabinet.

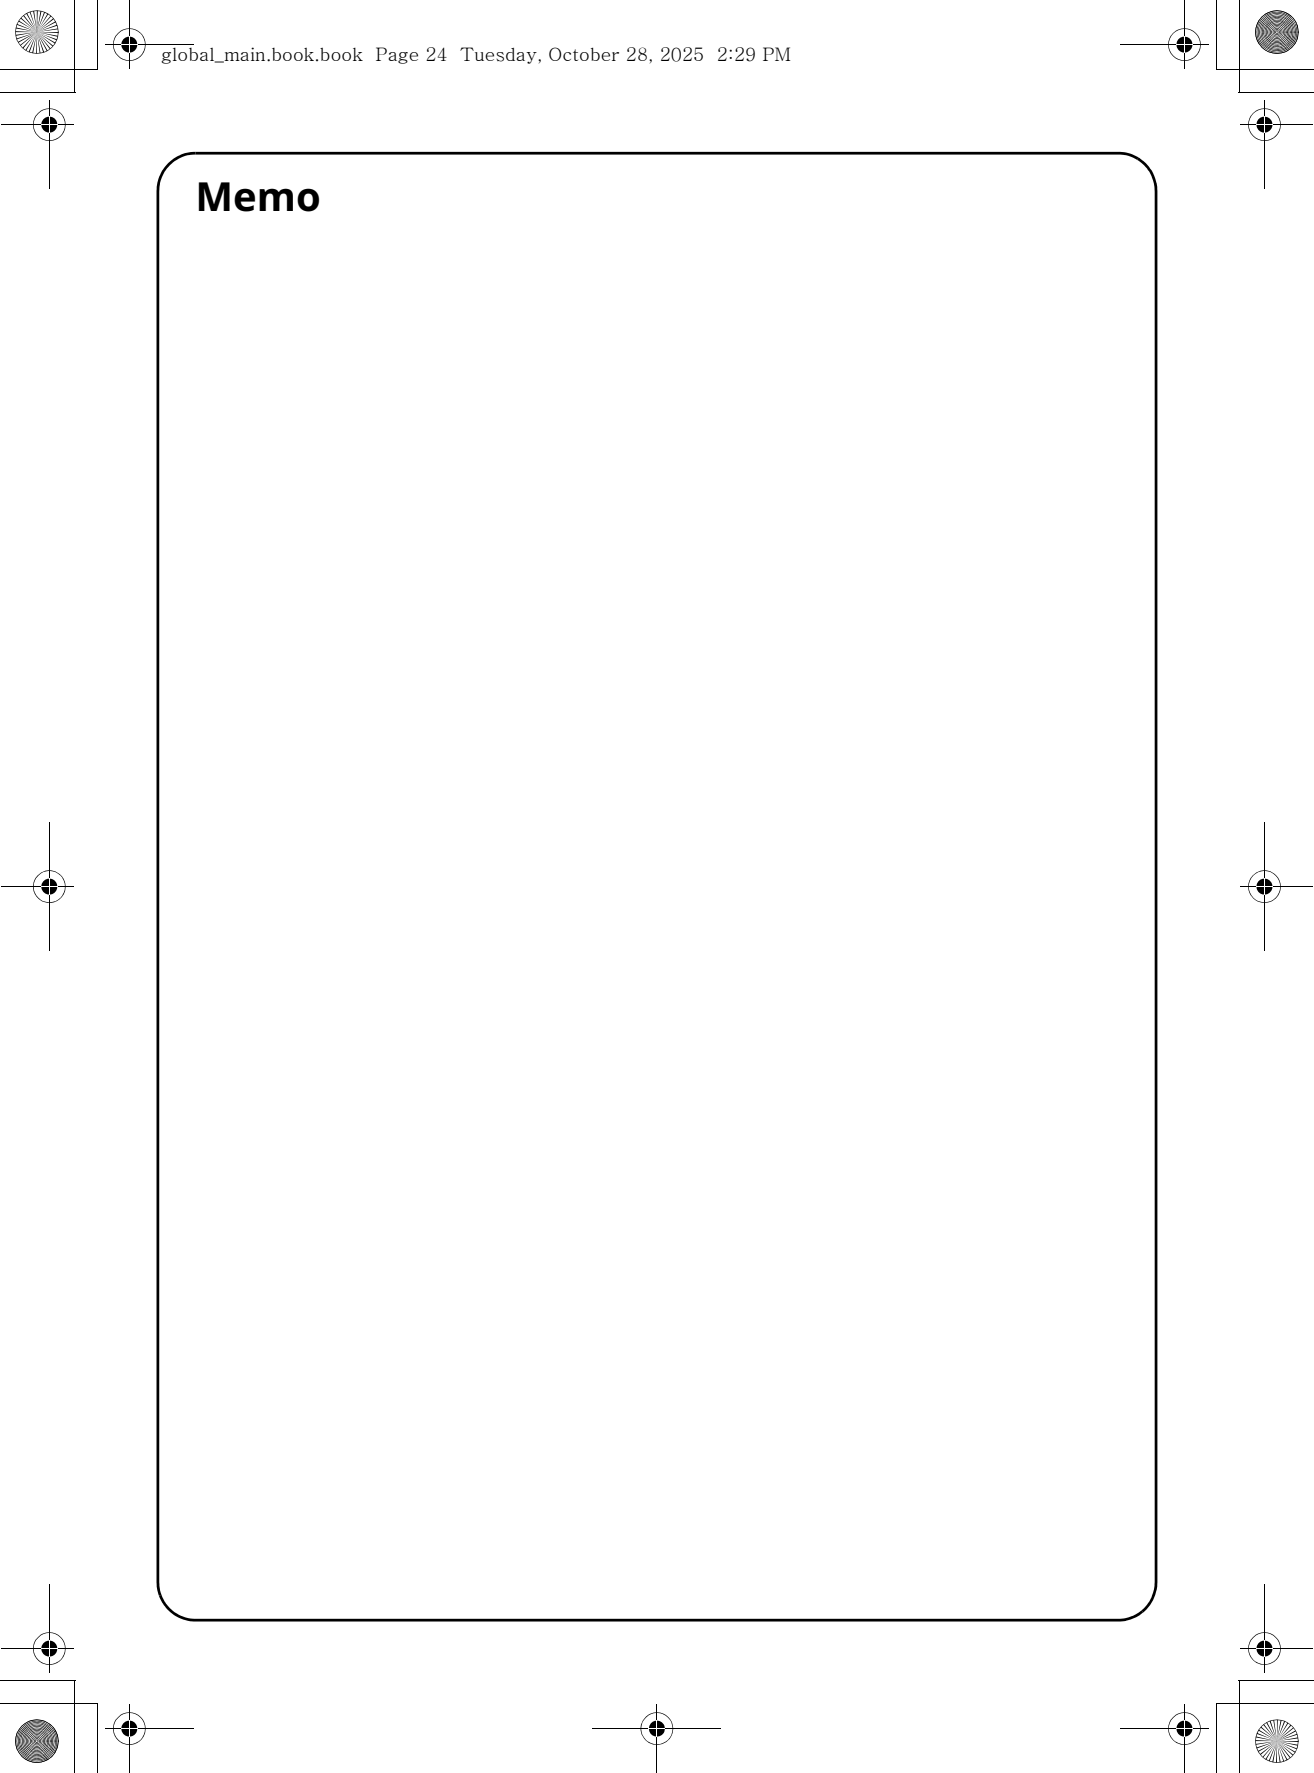

Memo



Quét mã QR để xem hướng dẫn sử dụng.



HƯỚNG DẪN SỬ DỤNG

TỦ LẠNH & TỦ ĐÔNG



Trước khi bắt đầu lắp đặt, hãy đọc kỹ những hướng dẫn này. Điều này sẽ đơn giản hoá quá trình lắp đặt và đảm bảo sản phẩm được lắp đặt đúng cách và an toàn. Để hướng dẫn này ở gần sản phẩm sau khi lắp đặt để sau này tham khảo.

TIẾNG VIỆT

www.lg.com

Bản quyền © 2025 Công ty LG Electronics Việt Nam Hải Phòng bảo lưu mọi quyền

MỤC LỤC

Hướng dẫn này có thể có các hình ảnh hoặc nội dung khác với kiểu máy mà bạn đã mua.

Hướng dẫn sử dụng này có thể được thay đổi bởi nhà sản xuất.

HƯỚNG DẪN AN TOÀN

ĐỌC TOÀN BỘ HƯỚNG DẪN TRƯỚC KHI SỬ DỤNG	3
CẢNH BÁO	3
THẬN TRỌNG	9

LẮP ĐẶT

Trước khi lắp đặt	11
Tạo bề mặt bằng phẳng đặt thiết bị	11
Bật điện thiết bị	12
Di chuyển thiết bị để chuyển vị trí	12

VẬN HÀNH

Trước khi sử dụng	13
Đặc điểm sản phẩm	15
Bảng Điều khiển	17
Khay đá di chuyển linh hoạt	17
Ngăn kéo ngăn mát	18
Giỏ gắn ở cửa	18
Kệ	18

BẢO TRÌ

Vệ sinh	19
---------------	----

XỬ LÝ SỰ CỐ

Trước khi gọi trung tâm dịch vụ	20
---------------------------------------	----

HƯỚNG DẪN AN TOÀN

ĐỌC TOÀN BỘ HƯỚNG DẪN TRƯỚC KHI SỬ DỤNG

Các hướng dẫn an toàn sau đây nhằm mục đích ngăn chặn các rủi ro hoặc hư hỏng không thể lường trước từ việc vận hành sản phẩm không an toàn hoặc không đúng cách. Các hướng dẫn được chia thành hai phần 'CẢNH BÁO' và 'THẬN TRỌNG' như được mô tả bên dưới.

Thông báo an toàn



Biểu tượng này được hiển thị để cho biết các vấn đề và thao tác vận hành có thể gây ra rủi ro. Hãy đọc cẩn thận phần có biểu tượng này và thực hiện theo các hướng dẫn để tránh rủi ro.



CẢNH BÁO

Biểu tượng này cho biết nếu không thực hiện theo các hướng dẫn có thể gây ra thương tích nghiêm trọng hoặc tử vong.



THẬN TRỌNG

Biểu tượng này cho biết nếu không thực hiện theo các hướng dẫn có thể gây ra thương tích nhẹ hoặc hư hỏng sản phẩm.

CẢNH BÁO

! CẢNH BÁO

- Để giảm rủi ro cháy, nổ, tử vong, điện giật, thương tích hoặc bỏng ở người khi sử dụng sản phẩm này, hãy thực hiện theo các biện pháp phòng ngừa cơ bản, bao gồm các điều sau:

An toàn về Kỹ thuật

- Thiết bị này không nhằm dành cho những người (bao gồm trẻ em) có năng lực thể chất, giác quan hoặc tinh thần bị suy giảm, hoặc thiếu

4 HƯỚNG DẪN AN TOÀN

kinh nghiệm và kiến thức sử dụng nếu họ không có sự giám sát hoặc hướng dẫn liên quan đến việc sử dụng thiết bị từ người chịu trách nhiệm về sự an toàn của họ. Trẻ em cần phải được giám sát để đảm bảo rằng các bé không chơi đùa với thiết bị.

- Thiết bị này nhằm để sử dụng trong gia đình và các ứng dụng tương tự như:
 - khu bếp cho nhân viên trong cửa hàng, văn phòng và các môi trường làm việc khác;
 - gia đình nông thôn, dành cho khách hàng trong khách sạn, nhà nghỉ và các loại hình cơ sở lưu trú khác;
 - các loại hình cơ sở lưu trú cung cấp chỗ nghỉ qua đêm kèm bữa sáng;
 - ứng dụng phục vụ ăn uống và các ứng dụng phi bán lẻ tương tự.
- Thiết bị này không được sử dụng như một thiết bị cầm tay hoặc trong các điều kiện lắp đặt di động, chẳng hạn như sử dụng trên biển hoặc xe lưu động (RV), nơi thiết bị sẽ di chuyển trong khi vận hành.



Đây là biểu tượng cảnh báo vật liệu dễ bắt lửa gây cháy nếu người dùng không cẩn thận.

- Thiết bị này chứa một lượng nhỏ môi chất làm lạnh isobutane (R600a) nhưng vẫn là khí dễ cháy. Khi vận chuyển và lắp đặt thiết bị, cần cẩn thận để đảm bảo rằng không có bộ phận của mạch làm lạnh bị hư hỏng.
- Chất làm lạnh và khí thổi cách điện được sử dụng trong thiết bị cần phải được xử lý đặc biệt. Tham khảo ý kiến các đại lý dịch vụ hoặc một người có trình độ tương tự trước khi xử lý chúng.
- Đừng làm hỏng mạch làm lạnh.
- Nếu dây nguồn bị hỏng hoặc ổ cắm bị lỏng thì phải thay thế. Không được sử dụng dây nguồn đó và liên hệ với trung tâm dịch vụ được ủy quyền để tránh nguy hiểm.
- Không đặt ổ cắm rời nhiều cổng hoặc nguồn cấp điện di động ở phía sau thiết bị.
- Cắm chặt phích cắm vào ổ cắm sau khi loại bỏ sạch hơi ẩm và bụi bẩn.

- Tuyệt đối không rút phích cắm thiết bị khỏi nguồn điện bằng cách kéo dây điện. Luôn cầm chặt phích cắm và kéo thẳng phích cắm ra khỏi ổ cắm.
- Giữ các lỗ thông gió, và các kết cấu gắn liền trong hoặc bên cạnh thiết bị sạch sẽ, không bị tắc nghẽn.
- Không bảo quản chất nổ như bình xon khí chứa nhiên liệu dễ cháy trong thiết bị này.
- Đừng nghiêng thiết bị để kéo hoặc đẩy khi vận chuyển.
- Phải đảm bảo dây cắm điện không bị vướng hay hư hỏng khi đặt thiết bị.
- Không sử dụng các thiết bị máy móc hoặc các phương tiện khác để đẩy nhanh quá trình tan băng.
- Không sử dụng máy sấy tóc để làm khô bên trong của thiết bị hoặc đặt một ngọn nến bên trong để loại bỏ mùi.
- Không sử dụng các thiết bị điện bên trong khoang bảo quản thực phẩm của thiết bị, trừ khi chúng là khuyến nghị của nhà sản xuất.
- Hãy chắc chắn rằng không một phần nào của cơ thể như bàn tay hoặc bàn chân bị mắc kẹt trong khi di chuyển thiết bị.
- Rút dây điện trước khi vệ sinh bên trong hoặc bên ngoài thiết bị.
- Không phun nước hoặc các chất dễ cháy (kem đánh răng, rượu, dung môi, benzen, chất lỏng dễ cháy, ăn mòn, vv) lên trên nội thất hoặc ngoại thất của thiết bị để làm sạch nó.
- Không làm sạch thiết bị với bàn chải, khăn lau hoặc bọt biển với bề mặt thô ráp hoặc được làm bằng vật liệu kim loại.
- Chỉ nhân viên bảo dưỡng có trình độ của trung tâm dịch vụ LG Electronics mới được tháo rời hoặc sửa chữa thiết bị.

Nguy cơ hỏa hoạn và vật liệu dễ cháy

- Nếu phát hiện có chỗ rò rỉ, cần tránh bất kỳ sự tiếp xúc nào với ngọn lửa hoặc các nguồn có khả năng đánh lửa và không khí trong phòng mà thiết bị được đặt trong vài phút. Để tránh việc tạo ra một hỗn hợp khí gas dễ cháy khi mạch làm lạnh bị rò rỉ, kích thước của phòng đặt thiết bị phải tương ứng với số lượng chất làm lạnh sử dụng trong thiết

6 HƯỚNG DẪN AN TOÀN

bị. Phòng phải đảm bảo 1m² cho mỗi 8g R600a chất làm lạnh bên trong thiết bị.

- Chất làm lạnh rò rỉ ra khỏi ống nước có thể bốc cháy hoặc gây ra một vụ nổ.
- Lượng chất làm lạnh trong thiết bị của bạn được hiển thị trên bảng thông số kỹ thuật bên trong thiết bị.

Lắp đặt

- Thiết bị này chỉ nên được vận chuyển bởi hai hoặc nhiều người để giữ thiết bị một cách chắc chắn.
- Đặt thiết bị trên sàn chắc chắn và bằng phẳng.
- Không lắp đặt thiết bị ở nơi có nhiều bụi và ẩm thấp. Không lắp đặt hoặc bảo quản thiết bị ở bất kỳ khu vực ngoài trời hoặc ở bất kỳ chỗ nào chịu tác động của điều kiện thời tiết như ánh sáng mặt trời trực tiếp, gió, mưa hoặc nhiệt độ dưới mức đóng băng.
- Không đặt thiết bị dưới ánh sáng mặt trời trực tiếp hoặc tiếp xúc với sức nóng từ các thiết bị tỏa nhiệt như bếp lò hoặc lò sưởi.
- Hãy cẩn thận không để hở phía sau của thiết bị khi lắp đặt.
- Lắp đặt thiết bị ở nơi dễ rút phích cắm của thiết bị.
- Hãy cẩn thận không để thiết bị cửa rơi ra khi lắp ráp hoặc tháo gỡ.
- Hãy cẩn thận không để móp, trầy xước, hoặc làm hỏng cáp điện trong quá trình lắp ráp hoặc tháo gỡ cửa thiết bị.
- Không để vật nhọn chọc vào phích cắm điện hoặc để thiết bị đè lên phích cắm điện.
- Không thay đổi hoặc nối dài dây điện.
- Đảm bảo ổ cắm điện được nối đất đúng cách và chân nối đất trên dây điện không bị hư hỏng hoặc tháo khỏi ổ cắm điện. Để biết thêm chi tiết về việc nối đất, hãy liên hệ tới trung tâm thông tin khách hàng của LG Electronics.
- Thiết bị này được trang bị dây điện có dây dẫn nối đất và phích cắm nối đất. Phích cắm phải được cắm vào ổ cắm phù hợp, được lắp đặt và nối đất theo toàn bộ các quy tắc và quy định trong nước.

- Tuyệt đối không được khởi động thiết bị có dấu hiệu hư hỏng. Nếu nghi ngờ, hãy tham khảo ý kiến đại lý của bạn.
- Để tất cả vật liệu đóng gói (chẳng hạn như túi nhựa và xốp) cách xa trẻ em. Vật liệu đóng gói có thể gây ngạt thở.
- Không cắm thiết bị vào ổ cắm đa cổng mà không có cáp điện (được cắm).
- Các thiết bị phải được nối với một đường dây điện chuyên dụng được nối cầu chì riêng.
- Không sử dụng ổ cắm (rời) đa cổng không được nối đất đúng cách. Ổ cắm phải tuân thủ các thông số kỹ thuật của thiết bị và chỉ được sử dụng cho thiết bị.

Vận hành

- Không sử dụng thiết bị cho mục đích khác (bảo quản các vật liệu y tế hoặc thí nghiệm hay để vận chuyển) ngoài việc sử dụng để bảo quản thực phẩm của gia đình.
- Nếu nước thâm nhập vào các bộ phận điện của thiết bị, hãy rút phích cắm điện và liên hệ với trung tâm thông tin khách hàng của LG Electronics.
- Rút phích cắm điện khi có giông bão nghiêm trọng, hoặc khi không sử dụng trong một thời gian dài.
- Không được chạm vào phích cắm hoặc các phần điều khiển thiết bị bằng tay ướt.
- Không được gập cong dây điện quá mức hoặc đặt một vật nặng lên dây.
- Ngay lập tức rút phích điện ra và liên hệ với trung tâm thông tin khách hàng LG Electronics nếu bạn phát hiện ra một âm thanh kỳ lạ, mùi, hoặc khói bốc ra khỏi thiết bị.
- Không được đặt bàn tay hay các vật kim loại bên trong khu vực tỏa ra không khí lạnh, lên nắp hoặc lưới tản nhiệt ở phía sau.
- Không tác dụng lực mạnh hoặc tác động vào nắp phía sau của thiết bị.
- Hãy cẩn thận trẻ em ở gần khi bạn mở hoặc đóng cửa thiết bị. Cánh cửa có thể va vào trẻ em và gây thương tích.

8 HƯỚNG DẪN AN TOÀN

- Cẩn thận không để trẻ em bị mắc kẹt bên trong thiết bị. Trẻ em bị mắc kẹt bên trong thiết bị này có thể bị ngạt thở.
- Không đặt các loài động vật, chẳng hạn như thú cưng vào trong thiết bị.
- Không đặt các vật nặng hoặc dễ vỡ, thùng chứa chất lỏng, chất dễ cháy, các vật dễ cháy (như nến, đèn, v.v.), hoặc các thiết bị sưởi ấm (như bếp lò, lò sưởi, v.v.) lên trên thiết bị.
- Không đặt bất kỳ thiết bị điện tử (như máy sưởi và điện thoại di động) bên trong thiết bị.
- Nếu bị rò rỉ gas (isobutane, propane, khí thiên nhiên, v.v.), không chạm vào thiết bị hoặc phích cắm và lập tức thông gió cho khu vực. Thiết bị này sử dụng gas môi chất làm lạnh (isobutane, R600a). Mặc dù thiết bị sử dụng một lượng nhỏ khí gas nhưng đây vẫn là khí dễ cháy. Rò rỉ gas trong khi vận chuyển, lắp đặt hay vận hành thiết bị có thể gây cháy, nổ hoặc thương tật nếu phát sinh tia lửa.
- Không sử dụng hoặc bảo quản các chất dễ cháy hay bắt cháy (ví dụ benzen, cồn, hóa chất, LPG, bình xịt dễ cháy, thuốc trừ sâu, chất làm sạch không khí, mỹ phẩm, vv) gần thiết bị.
- Thiết bị này tích hợp nối đất để phục vụ các mục đích chức năng.
- Chỉ nối với nguồn cấp nước uống được.
 - Nếu kết nối với nguồn cấp nước thì chỉ được kết nối với nguồn cấp nước sinh hoạt.
- Chỉ đổ nước uống.
 - Nếu sử dụng máy làm đá hoặc bình chứa nước của bộ phân phối, hãy đảm bảo chỉ đổ đầy bằng nước sinh hoạt.

Tiêu hủy

- Khi bỏ thiết bị đi, cần loại bỏ các miếng đệm cửa và để lại kệ và giỏ tại chỗ và để trẻ em tránh xa khỏi thiết bị.

THẬN TRỌNG

⚠ THẬN TRỌNG

- Để giảm thiểu những rủi ro có thể gây ra thương tích nhỏ cho người, hoặc làm thiết bị hoạt động sai chức năng cũng như hư hỏng sản phẩm hoặc tài sản khi sử dụng sản phẩm này, hãy thực hiện các biện pháp phòng ngừa cơ bản, bao gồm các điều sau:

TIẾNG VIỆT

Lắp đặt

- Sau khi tháo dỡ, hãy kiểm tra thiết bị xem có bất kỳ hư hỏng nào có thể xảy ra trong quá trình vận chuyển hay không.
- Chờ ít nhất 3-4 giờ để đảm bảo mạch chất làm lạnh hoạt động hiệu quả.
- Di chuyển thiết bị cẩn thận trên sàn để bị hỏng để tránh làm hỏng sàn.

Vận hành

- Đừng chạm vào thực phẩm đông lạnh hoặc các bộ phận kim loại trong ngăn đá bằng tay ướt hoặc ẩm. Nó có thể gây tê cóng.
- Không đặt hộp đựng, chai lọ thủy tinh hoặc đồ hộp (đặc biệt là hộp đựng đồ uống có ga) vào ngăn đá, kệ hoặc khay đá sẽ tiếp xúc với nhiệt độ dưới mức đóng băng. Chất chứa bên trong có thể giãn nở khi được cấp đông, làm vỡ hộp đựng và gây thương tích.
- Kính cường lực ở mặt trước của cửa thiết bị hoặc của kệ có thể bị vỡ do tác động. Nếu kính bị vỡ, không được chạm tay vào.
- Không treo đồ lên cửa thiết bị, khoang bảo quản, hoặc leo lên trên đó.
- Không bảo quản một số lượng lớn chai nước hoặc bình đựng đồ ăn phụ ở giỏ cửa.
- Không mở hoặc đóng cửa bằng lực quá mức cần thiết.
- Nếu bản lề cửa của thiết bị bị hỏng hoặc hoạt động không đúng cách, hãy ngưng sử dụng thiết bị và liên hệ với trung tâm dịch vụ được ủy quyền.
- Ngăn chặn không để động vật gặm nhấm dây điện hoặc ống nước.

10 HƯỚNG DẪN AN TOÀN

- Tuyệt đối không ăn thực phẩm cấp đông ngay sau khi lấy ra từ ngăn đá. Có nguy cơ bị tê cóng hoặc hình thành các vết phỏng rộp do tê cóng. **SƠ CỨU:** Lập tức để phần bị thương dưới vòi nước chảy. Không được bóc ra.
- Đảm bảo không để tay hoặc chân bị kẹp khi mở hoặc đóng cửa hoặc cửa trong cửa của thiết bị.

Bảo trì


- Thiết bị này được trang bị đèn LED bên trong được bảo hành miễn phí. Không được tháo vỏ đèn hay đèn LED để sửa chữa hoặc thay đổi. Hãy liên hệ với trung tâm thông tin khách hàng của LG Electronics.
- Không lau kệ hoặc nắp thủy tinh bằng nước ấm khi chúng đang lạnh. Chúng có thể bị vỡ nếu tiếp xúc với nhiệt độ thay đổi đột ngột.
- Không lắp kệ lộn ngược. Kệ có thể rơi xuống.
- Nếu hình thành băng trong ngăn đá, vui lòng liên hệ với dịch vụ khách hàng của LG Electronics. Không sử dụng các vật có cạnh sắc để loại bỏ sương hoặc băng tích tụ. Không sử dụng bình xịt, các thiết bị làm nóng bằng điện như quạt sưởi, máy sấy tóc, máy làm sạch bằng hơi nước hoặc các nguồn nhiệt khác để rã đông. Các bộ phận bằng nhựa có thể biến dạng.
- Loại bỏ lớp băng bên trong khay đá trong ngăn đá bằng cách ngắt điện trong một khoảng thời gian

LẮP ĐẶT

Trước khi lắp đặt

Kích thước và Khoảng cách

Khoảng cách quá nhỏ so với các vật xung quanh có thể làm giảm khả năng đóng băng và tăng chi phí điện. Giữ khoảng cách trên 50 mm từ phía sau thiết bị đến tường khi lắp đặt thiết bị.

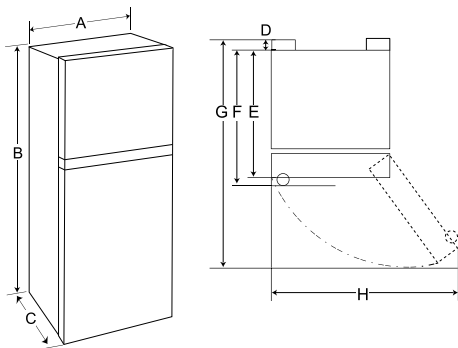

-	Kích thước (mm)
A	603
B	1709
C	633
D	50
E	633
F	633
G	1147
H	942

Nhiệt độ xung quanh

- Thiết bị được thiết kế để hoạt động trong phạm vi giới hạn của nhiệt độ môi trường xung quanh, phụ thuộc vào vùng khí hậu.
- Nhiệt độ bên trong có thể bị ảnh hưởng bởi vị trí của thiết bị, nhiệt độ xung quanh, tần suất mở cửa v.v.

- Các lớp khí hậu có thể được tìm thấy trên nhãn đánh giá.

Lớp khí hậu	Nhiệt độ môi trường xung quanh °C
SN (Ôn đới mở rộng)	+10 - +32
N (Ôn đới)	+16 - +32
ST (Cận nhiệt đới)	+16 - +38 / +18 - +38**
T (Nhiệt đới)	+10 - +43* / +16 - +43 / +18 - +43**

* Úc, Ấn Độ, Kenya

** Argentina

LƯU Ý


- Các thiết bị được xếp hạng từ SN đến T được sử dụng ở nhiệt độ môi trường xung quanh từ 10°C đến 43°C.

Tạo bề mặt bằng phẳng đặt thiết bị

Chỉnh chân điều chỉnh độ cao

Trong trường hợp thiết bị có vẻ không chắc chắn hoặc các cửa không thể đóng lại dễ dàng, hãy tiến hành chỉnh độ nghiêng của thiết bị theo hướng dẫn bên dưới.

- Xoay chân điều chỉnh độ cao theo chiều kim đồng hồ để nâng cạnh bên thiết bị lên hoặc ngược chiều kim đồng hồ để hạ xuống.

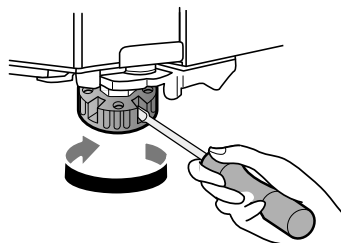

12 LẮP ĐẶT

- 2** Mở cửa tủ và kiểm tra để đảm bảo cửa đóng dễ dàng.

LƯU Ý

- Có thể không chỉnh cửa cho cân bằng được khi sàn không bằng phẳng hoặc có cấu trúc xây dựng yếu hoặc kém.
- Tủ lạnh có trọng lượng lớn và nên được lắp đặt trên bề mặt cứng, rắn chắc.
- Một số loại sàn gỗ có thể gây khó khăn khi chỉnh cân bằng nếu sàn bị uốn cong quá mức.

Bật điện thiết bị

Nối điện cho thiết bị

Để bật thiết bị, hãy cắm phích cắm vào ổ cắm điện. Không cắm thêm thiết bị khác trên cùng ổ cắm.

LƯU Ý

- Sau khi nối dây cấp nguồn (hoặc phích cắm) vào ổ cắm, hãy đợi đủ thời gian trước khi bạn đặt thực phẩm vào trong thiết bị. Nếu bạn cho thực phẩm vào trước khi thiết bị đã mát hoàn toàn, thực phẩm có thể bị hỏng.
- Sau khi tắt thiết bị, hãy rút phích cắm khỏi ổ cắm điện.

Di chuyển thiết bị để chuyển vị trí

Di chuyển thiết bị

- 1** Lấy toàn bộ thực phẩm bên trong thiết bị ra.

- 2** Cắm chắc phích cắm điện.

- Các mẫu máy có móc gài phích cắm điện:
Rút phích cắm điện ra, chèn và cố định nó vào móc gài phích cắm ở phía sau hoặc phía trên của thiết bị.


- Các mẫu máy không có móc gài phích cắm điện:
Rút phích cắm điện và cố định cáp cấp điện bằng băng dính vào mặt bên của thiết bị có ổ cắm điện tại vị trí lắp đặt.

- 3** Dùng băng dính cố định các bộ phận như các kệ và tay nắm cửa để ngăn cho chúng rơi khi di chuyển thiết bị.

- 4** Phải có nhiều hơn hai người để di chuyển thiết bị cẩn thận. Khi vận chuyển thiết bị trên một quãng đường dài, cần giữ cho thiết bị đứng thẳng.

⚠ THẬN TRỌNG

- Di chuyển thiết bị cẩn thận trên sàn để bị hỏng để tránh làm hỏng sàn.
- Sử dụng bìa cứng, thảm lót sàn hoặc tấm thảm để tránh trầy xước sàn khi lắp đặt hoặc di chuyển thiết bị.
- Không di chuyển thiết bị theo đường zíc zắc.

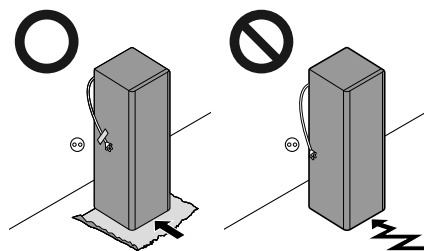

- 5** Sau khi lắp đặt thiết bị, hãy cắm phích cắm vào ổ cắm chính và bật lên.

VẬN HÀNH

Trước khi sử dụng

Lưu ý khi Vận hành

- Trước khi cho thực phẩm vào thiết bị, hãy vệ sinh bên trong và bên ngoài thiết bị bằng nước ấm và nước tẩy rửa nhẹ để loại bỏ cặn trong quá trình sản xuất.
- Người dùng cần lưu ý rằng sương giá có thể hình thành nếu cửa chưa được đóng hoàn toàn hoặc, độ ẩm cao vào mùa hè.
- Đảm bảo có đủ không gian giữa thực phẩm được bảo quản trên khay hoặc giỏ cửa để cửa được đóng hoàn toàn.
- Việc mở cửa trong thời gian dài có thể làm tăng đáng kể nhiệt độ trong các ngăn của thiết bị.
- Nếu để trống tủ lạnh trong thời gian dài, hãy tắt nguồn, rửa đông, vệ sinh, lau khô và để cửa mở để tránh nấm mốc phát triển bên trong thiết bị.
- Lưu ý rằng sự gia tăng nhiệt độ sau khi rửa đông có một phạm vi cho phép trong thông số kỹ thuật của thiết bị. Nếu bạn muốn giảm thiểu tác động của sự gia tăng nhiệt độ này lên thực phẩm được bảo quản, hãy đóng kín hoặc bọc thực phẩm bằng nhiều lớp.

Cảnh báo Cửa mở

Tính năng này chỉ có ở một số mẫu máy.
Có âm báo nếu cửa vẫn mở hoặc chưa đóng hoàn toàn.

LƯU Ý

- Liên hệ với trung tâm thông tin khách hàng của LG Electronics nếu âm thanh báo động vẫn tiếp tục ngay cả sau khi đóng tất cả các cửa.

Đề xuất để Tiết kiệm Năng lượng

- Để sử dụng năng lượng hiệu quả nhất, giữ tất cả các bộ phận bên trong (ví dụ: cửa bình đựng, ngăn kéo và khay) ở vị trí ban đầu. Việc thay đổi

vị trí của các bộ phận này có thể làm giảm hiệu quả sử dụng năng lượng và hiệu suất.

- Đảm bảo có đủ không gian giữa các loại thực phẩm được bảo quản. Điều này cho phép không khí lạnh lưu thông đều và làm giảm hóa đơn tiền điện.
- Bảo quản thực phẩm nóng chỉ sau khi nó đã nguội để ngăn chặn sương hoặc sương giá.
- Khi bảo quản thực phẩm trong ngăn đá, đặt nhiệt độ của ngăn đá thấp hơn nhiệt độ ghi trên thực phẩm.
- Không cài đặt nhiệt độ thiết bị thấp hơn mức cần thiết.
- Đừng để thực phẩm gần cảm biến nhiệt độ của ngăn mát. Giữ khoảng cách ít nhất 3 cm từ cảm biến.

Bảo quản hiệu quả thực phẩm

- Thực phẩm có thể đóng băng hoặc hỏng nếu được bảo quản ở nhiệt độ không phù hợp. Hãy cài đặt tủ lạnh ở mức nhiệt độ phù hợp với thực phẩm được bảo quản.
- Bảo quản thực phẩm đông lạnh hoặc thực phẩm lạnh trong hộp kín.
- Kiểm tra ngày hết hạn và nhãn (hướng dẫn bảo quản) trước khi bảo quản thức ăn trong thiết bị.
- Không bảo quản thực phẩm trong khoảng thời gian dài nếu là thực phẩm dễ bị hỏng ở nhiệt độ thấp.
- Không để thực phẩm chưa cấp đông tiếp xúc trực tiếp với thực phẩm đã cấp đông. Không bảo quản quá nhiều thực phẩm tươi sống.
- Cấp đông thực phẩm với số lượng vừa đủ để cấp đông nhanh hơn, rửa đông và chế biến dễ dàng hơn.
- Đặt thực phẩm lạnh hoặc thực phẩm đông lạnh vào ngăn mát hoặc ngăn đá ngay lập tức sau khi mua.
- Đựng thịt và cá sống bằng các hộp chứa thích hợp trong tủ lạnh sao cho các thực phẩm này không tiếp xúc hoặc rỉ nước lên thực phẩm khác.
- Có thể đặt thực phẩm lạnh và các món thực phẩm khác trên ngăn đựng rau.

14 VẬN HÀNH

- Tránh làm đông lại thực phẩm đã được rã đông hoàn toàn. Làm đông lại thực phẩm đã được rã đông hoàn toàn có thể khiến thực phẩm bị giảm mùi vị và dinh dưỡng.
 - Chỉ lấy ra lượng thực phẩm cần thiết. Nhanh chóng sử dụng thực phẩm đã rã đông. Chỉ cấp đông lại thực phẩm sau khi đã nấu chín.
- Làm nguội thức ăn nóng trước khi cho vào bảo quản. Nếu quá nhiều thức ăn nóng được đặt bên trong, nhiệt độ bên trong của thiết bị có thể tăng và ảnh hưởng không tốt đến các loại thực phẩm khác được bảo quản trong thiết bị.
- Đừng để thiết bị quá đầy. Không khí lạnh không thể lưu thông tốt nếu thiết bị quá đầy.
- Nếu bạn đặt nhiệt độ quá thấp đối với thực phẩm, nó có thể bị đóng đá. Đừng đặt nhiệt độ thấp hơn nhiệt độ cần thiết để thực phẩm được bảo quản đúng cách.
- Nếu có khoang ướp lạnh trong thiết bị, không nên chứa rau quả có hàm lượng ẩm cao hơn trong các khoang lạnh vì chúng có thể đóng băng do nhiệt độ thấp hơn.
- Luôn thực hiện theo hướng dẫn của nhà sản xuất thực phẩm về thời hạn bảo quản cho phép của thực phẩm đông lạnh. Không vượt quá thời gian bảo quản thực phẩm khuyến nghị.
 - Ghi ngày bảo quản, thời hạn bảo quản cho phép, tên thực phẩm lên bao bì để tránh quá hạn bảo quản.
- Trong trường hợp mất điện, hãy gọi cho công ty điện lực và hỏi xem sẽ kéo dài bao lâu.
 - Bạn nên tránh mở cửa trong khi bị mất điện.
 - Khi nguồn điện trở lại bình thường, hãy kiểm tra tình trạng của thực phẩm.
 - Nếu mất điện lâu hơn, đặc biệt là vào những tháng hè, vui lòng thực hiện theo các hướng dẫn sau:
 - Không cho thêm thực phẩm vào thiết bị trong thời gian mất điện.
 - Nếu có thông báo mất điện và dự kiến sẽ kéo dài hơn 10 giờ, hãy chuẩn bị một ít đá và cho vào hộp đựng ở ngăn trên cùng của ngăn mát.
 - Do sự gia tăng nhiệt độ trong thiết bị khi mất điện hoặc sự cố khác, thời hạn sử dụng và chất lượng của thực phẩm sẽ giảm. Nếu cần, hãy chế biến thực phẩm đã rã đông và làm đông lạnh lại ở trạng thái đã nấu chín.

Công suất làm đông lạnh tối đa

- Để có khả năng cấp đông tối đa, hãy đặt nhiệt độ ngăn đá ở mức lạnh nhất.
- Để làm lạnh các đồ thực phẩm nhanh, hãy bảo quản thực phẩm ở bên trái của ngăn dưới. Các đồ thực phẩm sẽ đông lạnh nhanh nhất ở khu vực này.
- Để không khí lưu thông tốt hơn, lắp tất cả các bộ phận bên trong như giỏ, ngăn kéo và khay.

Làm đông lạnh lượng thực phẩm tối đa

Nếu cần bảo quản lượng thực phẩm lớn thì nên lấy máy làm đá ra khỏi thiết bị và xếp trực tiếp thực phẩm lên các khay đông lạnh trong ngăn đá.

LƯU Ý


- Cho máy làm đá vào đúng vị trí.

Đặc điểm sản phẩm

Hình dạng hoặc các thành phần cấu tạo của thiết bị có thể khác nhau giữa các cấu hình.

Bên ngoài và bên trong

*1 Tính năng này chỉ có ở một số mẫu máy.

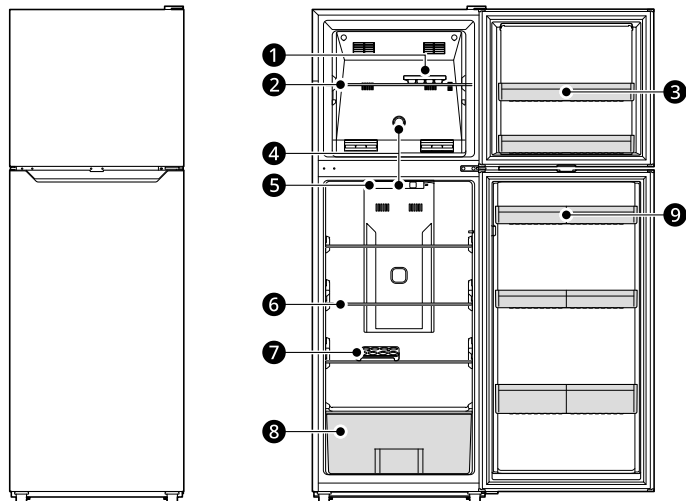

❶ Khay đá*1

Đây là nơi làm đá một cách thủ công.

- Để có thêm không gian, bạn có thể tháo khay đá.

❷ Khay ngăn đá

Bảo quản thực phẩm đông lạnh như thịt, cá và kem.

❸ Giỏ gắn ở cửa ngăn đá

Bảo quản thực phẩm đông lạnh trong các gói nhỏ. Không bảo quản kem hoặc thực phẩm sẽ được bảo quản trong một thời gian dài.

❹ Bảng điều khiển*1

Cài đặt nhiệt độ ngăn mát và ngăn đá.

❺ Đèn LED

Đèn LED bên trong thiết bị sẽ sáng khi bạn mở cửa.

❻ Khay ngăn mát

Đây là nơi mà các loại thực phẩm trong tủ lạnh và các sản phẩm khác được bảo quản.

- Bảo quản thực phẩm có độ ẩm cao hơn ở phía trước của khay.
- Chiều cao của kệ có thể được điều chỉnh bằng cách chèn kệ vào rãnh có chiều cao khác nhau.
- Số lượng khay thực tế có thể khác nhau tùy theo mẫu máy.

16 VẬN HÀNH

⑦ Khay đựng trứng có thể tháo rời*¹

Đây là nơi mà trứng được bảo quản.

- Bạn có thể di chuyển và sử dụng khay ở vị trí mong muốn khi cần thiết. Tuy nhiên, không được sử dụng khay làm khay đá hoặc đặt lên kệ trên cùng của ngăn mát hoặc ngăn đựng rau.

⑧ Ngăn kéo ngăn mát

Bảo quản hoa quả và rau.

⑨ Giỏ gắn ở cửa ngăn mát

Bảo quản các gói nhỏ đựng thực phẩm đông lạnh, đồ uống và lọ nước sốt.


Bảng Điều khiển

Bảng điều khiển trên thực tế có thể khác nhau ở mỗi cấu hình.

Bảng Điều khiển và các Chức năng


Bảng điều khiển 1: Bên trong ngăn mát

Vặn núm xoay để chọn nhiệt độ mong muốn từ mức **Cold** đến **Coldest**.



Bảng điều khiển 2: Bên trong ngăn đá

Vặn núm xoay để chọn nhiệt độ mong muốn từ mức **Min** đến **Max**.

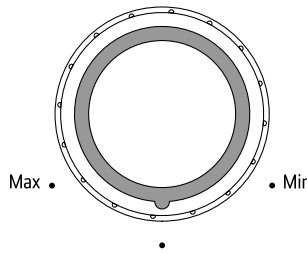

LƯU Ý

- Nhiệt độ bên trong trên thực tế có thể khác nhau tùy thuộc vào tình trạng thực phẩm, vì nhiệt độ cài đặt chỉ là một nhiệt độ mục tiêu, không phải nhiệt độ thực tế trong thiết bị.
- Để bảo quản thực phẩm tối ưu, nên tăng hoặc giảm một mức nhiệt độ so với nhiệt độ mặc định.

Khay đá di chuyển linh hoạt

Tính năng này chỉ có ở một số mẫu máy.

- Sau khi nước đông lại, giữ hai đầu khay đá và xoay nhẹ.

Sử dụng khay đá

Đây là nơi làm đá một cách thủ công.

- Đổ đầy nước uống được vào khay đá và đặt khay vào ngăn đá.



⚠ THẬN TRỌNG

- Cẩn thận không vặn mạnh khay đá vì có thể sẽ làm vỡ khay.
- Nếu bạn mở, đóng cửa ngăn đá thường xuyên, có thể mất nhiều thời gian hơn để nước đóng đá.

18 VẬN HÀNH


LƯU Ý

- Nếu khay đá quá đầy, các viên đá có thể dính vào nhau và khó lấy ra.
- Có thể lấy đá ra dễ dàng bằng cách rót nước vào khay đá.

Ngăn kéo ngăn mát

Tháo và lắp lại ngăn đựng rau tươi

- 1 Lấy các đồ vật trong ngăn tủ ra. Giữ tay nắm của ngăn tủ đựng rau củ và dần dần đẩy ngăn tủ vào cho đến khi nó dừng lại.
- 2 Nhấc ngăn đựng rau lên và tháo bằng cách kéo nó ra.

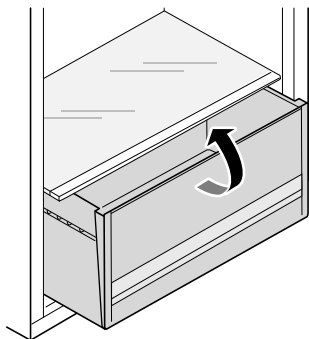

- 3 Lắp ngăn đựng rau theo trình tự ngược với trình tự tháo.


⚠ THẬN TRỌNG

- Lấy toàn bộ thực phẩm bên trong ra khỏi thiết bị, nếu không trọng lượng của thực phẩm đang bảo quản có thể gây ra chấn thương.

Giỏ gắn ở cửa

Tháo/Lắp lại giỏ gắn ở cửa

- 1 Cầm mép giỏ bằng hai tay và tháo ra bằng cách nâng nó lên.

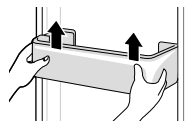


- 2 Lắp giỏ gắn ở cửa theo trình tự ngược với trình tự tháo.

Kệ

Tháo/Lắp lại khay

- 1 Giữ cả hai bên khay. Nâng khay lên và tháo bằng cách kéo ra.

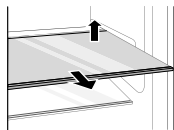

- 2 Chỉnh lại kệ bằng cách trượt kệ vào trong cho đến khi kệ khít với khung.

BẢO TRÌ

Vệ sinh

Các biện pháp vệ sinh chung

- Thực hiện làm tan băng, bảo dưỡng hay vệ sinh thiết bị trong khi thực phẩm vẫn được bảo quản trong ngăn đá có thể làm tăng nhiệt độ của thực phẩm và giảm thời gian bảo quản.
- Thường xuyên vệ sinh bất kỳ bề mặt nào có thể tiếp xúc với thực phẩm.
- Khi lau chùi bên trong hay bên ngoài thiết bị, không lau bằng bàn chải thô, kem đánh răng, hoặc các vật liệu dễ cháy. Không sử dụng các chất làm sạch chứa các chất dễ bắt lửa. Điều này có thể làm đổi màu hoặc hư hỏng thiết bị.
 - Các chất dễ cháy: cồn (ethanol, methanol, rượu isopropyl, rượu isobutyl, vv), chất pha loãng, thuốc tẩy, benzen, chất lỏng dễ cháy, ăn mòn...
- Sau khi làm sạch, kiểm tra xem cáp điện có bị hỏng không.

Vệ sinh Phần bên ngoài

- Nếu vệ sinh các lỗ thông gió bên ngoài của thiết bị bằng cách hút bụi thì phải rút dây điện ra khỏi ổ cắm để tránh hiện tượng xả tĩnh điện có thể làm hỏng các linh kiện điện tử hoặc gây ra giật điện. Nên thường xuyên vệ sinh nắp thông gió phía sau và bên cạnh để thiết bị vận hành hiệu quả và tiết kiệm chi phí.
- Giữ vệ sinh các lỗ thông gió bên ngoài thiết bị. Lỗ thông gió bị tắc có thể gây cháy nổ hoặc làm hư hỏng thiết bị.
- Để vệ sinh bên ngoài thiết bị, sử dụng miếng bọt biển sạch hoặc vải mềm và chất tẩy rửa nhẹ với nước ấm. Không sử dụng chất tẩy rửa ăn mòn hoặc chất tẩy mạnh. Lau khô kỹ bằng vải mềm. Không sử dụng vải bông để vệ sinh cửa bằng thép không gỉ. Luôn sử dụng vải mềm và lau thuận chiều thớ vải. Cách này giúp bề mặt thiết bị không bị xước và biến màu.

Vệ sinh Phần bên trong

- Trước khi tháo khay hay ngăn từ bên trong thiết bị, lấy tất cả các thực phẩm được bảo quản trên khay hoặc ngăn ra để tránh thương tích hoặc làm hỏng thiết bị. Nếu không thì có thể xảy ra chấn thương do trọng lượng của các thực phẩm được bảo quản.
- Tháo các khay, ngăn và làm sạch bằng nước và chất tẩy rửa nhẹ, sau đó để khô đủ mức trước khi lắp lại.
- Thường xuyên lau miếng đệm cửa và gioăng cửa bằng nước và chất tẩy rửa nhẹ.
- Đỡ ăn rớt trên giỏ cửa và các vết bẩn phải được làm sạch vì chúng có thể làm tổn hại khả năng lưu trữ của giỏ và thậm chí có thể bị hư hỏng.
- Tuyệt đối không làm sạch khay, miếng đệm cửa hoặc hộp đựng trong máy rửa chén hoặc nước nóng. Các bộ phận có thể bị biến dạng và kính có thể bị vỡ do nhiệt.
- Hệ thống ră đông tự động trong thiết bị đảm bảo ngăn không bị tích tụ băng trong điều kiện hoạt động bình thường. Người dùng không cần rá đông thủ công.

20 XỬ LÝ SỰ CỐ

XỬ LÝ SỰ CỐ

Trước khi gọi trung tâm dịch vụ

Làm mát

Triệu chứng	Nguyên nhân có thể & giải pháp
Không thể làm lạnh hoặc đông lạnh.	Có phải nguồn điện bị ngắt? Kiểm tra nguồn điện của các thiết bị khác.
	Thiết bị bị rút phích cắm. Cắm phích cắm điện vào ổ cắm một cách chắc chắn.
	Cầu chì trong nhà có thể bị nổ hoặc thiết bị đóng ngắt mạch bị ngắt. Hoặc thiết bị được nối với ổ thiết bị ngắt mạch nối đất (GFCI) và thiết bị đóng ngắt của ổ bị ngắt. - Kiểm tra hộp điện chính và thay cầu chì hoặc đặt lại cầu dao. Không tăng công suất cầu chì. Nếu sự cố là do mạch quá tải thì hãy thuê thợ điện lành nghề khắc phục. - Bật lại thiết bị đóng ngắt mạch trên thiết bị ngắt mạch nối đất (GFCI). Nếu vẫn đề chưa được giải quyết, hãy liên hệ với thợ điện.
Làm lạnh hoặc đông lạnh kém.	Có phải ngăn mát hoặc ngăn đá được cài đặt ở nhiệt độ cao nhất? Cài đặt nhiệt độ ngăn mát hoặc ngăn đá ở mức lạnh hơn.
	Có phải thiết bị bị chiếu ánh sáng mặt trời trực tiếp, hoặc nằm gần thiết bị sinh nhiệt như bếp hoặc lò sưởi? Kiểm tra khu vực lắp đặt và đặt thiết bị cách xa các thiết bị sinh nhiệt.
	Có phải bạn đã cho vào tủ lạnh đồ ăn nóng trước khi nguội? Làm nguội đồ ăn trước khi đặt vào ngăn mát hoặc ngăn đá.
	Có phải bạn đã lưu trữ quá nhiều thực phẩm? Duy trì khoảng cách phù hợp giữa các thực phẩm.
	Có phải cửa thiết bị chưa đóng hoàn toàn? Đóng khít cửa và đảm bảo rằng thực phẩm được lưu trữ không cản trở cửa.
	Liệu có đủ không gian xung quanh thiết bị? Điều chỉnh vị trí lắp đặt để đảm bảo đủ không gian xung quanh thiết bị.
Thiết bị có mùi hôi.	Có phải nhiệt độ của ngăn mát hoặc ngăn đá được cài đặt ở mức 'Ấm'? Cài đặt nhiệt độ ngăn mát hoặc ngăn đá ở mức lạnh hơn.
	Bạn đã để vào thực phẩm nặng mùi? Bảo quản thực phẩm nặng mùi trong hộp chứa kín.

Triệu chứng	Nguyên nhân có thể & giải pháp
Thiết bị có mùi hôi.	Các loại rau hoặc trái cây có thể bị thối trong ngăn đựng rau Vứt bỏ rau thối và làm sạch ngăn đựng rau. Không lưu trữ rau quá lâu trong ngăn rau.

Ngưng tụ và sương giá

Triệu chứng	Nguyên nhân có thể & giải pháp
Có ngưng tụ bên trong thiết bị hoặc dưới đáy của nắp ngăn rau.	Có phải bạn đã cho vào tủ lạnh đồ ăn nóng trước khi nguội? Làm nguội đồ ăn nóng trước khi đặt vào ngăn mát hoặc ngăn đá.
	Bạn đã để cửa thiết bị mở? Mặc dù sự ngưng tụ sẽ biến mất ngay sau khi bạn đóng cửa thiết bị nhưng bạn cũng có thể lau bằng vải khô.
	Bạn có mở hoặc đóng cửa thiết bị quá thường xuyên không? Có thể hình thành nước ngưng tụ do chênh lệch nhiệt độ so với bên ngoài. Hãy lau sạch hơi ẩm bằng miếng vải khô và không mở cửa quá thường xuyên.
	Bạn đã đặt thức ăn nóng hoặc ẩm bên trong mà không đựng nó trong một hộp kín? Đựng thực phẩm trong hộp được đậy hoặc dán kín.
Sương giá hình thành trong ngăn đá.	Cửa có thể không được đóng lại đúng cách. Kiểm tra xem các thực phẩm bên trong thiết bị này có cản trở cửa và đảm bảo rằng cửa được đóng kín.
	Có phải bạn đã cho vào tủ lạnh đồ ăn nóng trước khi nguội? Làm nguội đồ ăn trước khi đặt vào ngăn mát hoặc ngăn đá.
	Có phải lối ra và vào của không khí trong ngăn đá bị chặn? Hãy chắc chắn rằng lối ra và vào của không khí không bị chặn và không khí có thể lưu thông bên trong.
	Đồ trong ngăn đá quá đầy? Duy trì khoảng cách phù hợp giữa các thực phẩm.
Sương giá hoặc nước ngưng tụ đã hình thành bên trong hoặc bên ngoài thiết bị.	Có phải bạn đã mở và đóng cửa thiết bị thường xuyên hoặc cửa thiết bị không được đóng đúng cách? Có thể hình thành sương giá hoặc nước ngưng tụ nếu không khí bên ngoài thâm nhập vào bên trong thiết bị. Không mở cửa quá thường xuyên.
	Có phải môi trường lắp đặt thiết bị quá ẩm ướt? Sự ngưng tụ có thể xuất hiện ở bên ngoài của thiết bị nếu khu vực lắp thiết bị quá ẩm ướt hoặc vào một ngày ẩm ướt như ngày mưa. Lau sạch hơi ẩm với một miếng vải khô.

22 XỬ LÝ SỰ CỐ

Triệu chứng	Nguyên nhân có thể & giải pháp
Bên hông hoặc mặt trước của thiết bị ấm nóng.	Có các ống chống ngưng tụ được lắp ở các khu vực này của thiết bị để giảm sự ngưng tụ hình thành xung quanh khu vực cửa. Ống tỏa nhiệt để ngăn chặn sự ngưng tụ được lắp ở mặt trước và bên hông của thiết bị. Bạn có thể cảm thấy nó đặc biệt nóng ngay sau khi thiết bị được lắp đặt hoặc vào mùa hè. Bạn có thể yên tâm rằng đây không phải là một vấn đề gì và nó hoàn toàn bình thường.
Có nước bên trong hoặc bên ngoài của thiết bị.	Liệu có nước rò rỉ xung quanh thiết bị? Kiểm tra xem nước đã bị rò rỉ từ bồn rửa hay chỗ khác.
	Có nước ở dưới đáy thiết bị? Kiểm tra xem có nước từ thực phẩm đông lạnh rã đông hoặc một bình đựng bị rơi hoặc vỡ không.

Các bộ phận và tính năng

Triệu chứng	Nguyên nhân có thể & giải pháp
Cửa thiết bị không được đóng chặt.	Có phải thiết bị bị nghiêng về phía trước? Điều chỉnh chân trước để hơi nâng mặt trước lên.
	Các khay đã được lắp ráp đúng cách? Lắp lại các khay nếu cần thiết.
	Bạn đã đóng cửa với lực mạnh quá mức? Nếu bạn dùng quá nhiều lực hay đóng cửa với tốc độ quá nhanh, nó có thể vẫn còn mở một thời gian ngắn trước khi đóng. Hãy chắc chắn rằng bạn không đóng sầm cánh cửa lại. Hãy đóng mà không dùng quá nhiều lực.
Khó khăn khi mở cửa thiết bị.	Bạn đã mở cánh cửa ngay sau khi bạn đóng nó? Nếu bạn cố gắng để mở cửa thiết bị trong vòng một phút sau khi bạn đóng nó, bạn có thể gặp khó khăn vì áp suất bên trong thiết bị. Hãy cố gắng mở cửa thiết bị một lần nữa sau một vài phút để áp suất bên trong ổn định.
Đèn bên trong thiết bị không sáng.	Đèn hỏng Đóng cửa thiết bị sau đó mở lại. Nếu đèn vẫn không bật, vui lòng liên hệ Trung tâm thông tin khách hàng LG Electronics. Không nên tìm cách tháo đèn.

Tiếng ồn

Triệu chứng	Nguyên nhân có thể & giải pháp
Thiết bị gây tiếng ồn và tạo ra những âm thanh bất thường.	Thiết bị được lắp đặt trên một sàn yếu hoặc không bằng phẳng? Đặt thiết bị trên sàn chắc chắn và bằng phẳng.

Triệu chứng	Nguyên nhân có thể & giải pháp
Thiết bị gây tiếng ồn và tạo ra những âm thanh bất thường.	Có phải phía sau của thiết bị chạm vào tường? • Điều chỉnh vị trí lắp đặt để đảm bảo đủ không gian xung quanh thiết bị.
	Có phải có những đồ vật nằm rải rác phía sau thiết bị? • Lấy các đồ vật nằm rải rác phía sau thiết bị ra.
	Có đồ vật nằm trên nóc của thiết bị? • Bỏ đồ vật nằm trên nóc của thiết bị xuống.
Tiếng nhấp chuột	Hệ thống điều khiển ră đông sẽ phát ra tiếng nhấp chuột khi chu trình ră đông tự động bắt đầu và kết thúc. Việc kiểm soát nhiệt (hoặc điều khiển thiết bị trên một số model) cũng sẽ phát ra tiếng nhấp chuột khi chu trình bật và tắt. • Vận hành bình thường
Tiếng róc rách	Thiết bị không được đặt trên sàn bằng phẳng • Sàn nhà yếu hoặc không bằng phẳng có thể được điều chỉnh bằng chân điều chỉnh độ cao.
	Thiết bị với máy nén đã bị dịch chuyển khi đang vận hành. • Vận hành bình thường. Nếu máy nén không dừng kêu lạch tạch sau ba phút, tắt điện thiết bị và sau đó bật lại.
Tiếng ù ù	Động cơ quạt của dàn lạnh tuần hoàn không khí lưu thông qua các ngăn mát và ngăn đá. • Vận hành bình thường
	Không khí bị đẩy vào bình ngưng bởi quạt của bình ngưng. • Vận hành bình thường
Tiếng rít	Thiết bị đang chạy hệ thống làm mát. • Vận hành bình thường
Tiếng lộp bộp	Sự co và giãn của các bức tường bên trong do thay đổi nhiệt độ. • Vận hành bình thường
Rung	Nếu mặt bên hoặc mặt sau của thiết bị chạm vào tủ hoặc tường, một số chấn rung bình thường có thể phát ra âm thanh. • Để loại bỏ tiếng ồn, đảm bảo rằng mặt bên và mặt sau không tiếp xúc với bất kỳ tường hoặc tủ nào.

