

SUNHOUSE®
MAMA

www.sunhouse.com.vn

Hotline: 1800 6680

Trung tâm bảo hành Miền Bắc

Km8, Đại lộ Thăng Long, Hoài Đức, Hà Nội - ĐT: +84 24 3200 8339 / 3200 5230

Trung tâm bảo hành Miền Trung

685 Điện Biên Phủ, Q. Thanh Khê, Đà Nẵng - ĐT: +84 23 6372 6821

Trung tâm bảo hành Miền Nam

Lô 8 - 10 đường số 1, KCN Tân Tạo, P. Tân Tạo A, Q. Bình Tân, TP Hồ Chí Minh

ĐT: +84 28 3869 1014 / Fax: +84 28 3869 1013

Nhập khẩu & Phân phối: Công ty Cổ phần Tập đoàn SUNHOUSE

Địa chỉ: Số 139, Nguyễn Thái Học, P.Điện Biên, Q.Ba Đình, TP.Hà Nội

Điện thoại: +84 24 3394 0848 - **Fax:** +84 24 3394 0878

Sản phẩm được sản xuất tại P.R.C

Website: www.sunhouse.com.vn

SUNHOUSE®

MAMA

HƯỚNG DẪN SỬ DỤNG



ẤM SIÊU TỐC INOX 2 LỚP 1.7L SUNHOUSE MAMA

Model: SHD1386W

Đọc kỹ hướng dẫn sử dụng trước khi dùng

HƯỚNG DẪN KÍCH HOẠT BẢO HÀNH ĐIỆN TỬ

Lưu ý: Hệ thống bảo hành điện tử SUNHOUSE được kích hoạt qua ứng dụng eSUNHOUSE

Để cài đặt ứng dụng, khách hàng cần sử dụng smartphone hệ điều hành Android/ iOS có kết nối Internet.

Người tiêu dùng có thể kích hoạt trực tiếp, không cần đăng kí/ đăng nhập tài khoản vào ứng dụng.

Bước 1: Tải ứng dụng

Truy cập kho ứng dụng App Store hoặc Google Play, gõ tìm kiếm "eSUNHOUSE" và cài đặt ứng dụng về máy.

Bước 2: Kích hoạt bảo hành


Trên màn hình chính, bỏ qua mục "Đăng nhập", chọn "Kích hoạt bảo hành" ở cuối màn hình.

- Trên thanh tìm kiếm: Nhập số Serial sản phẩm hoặc sử dụng chế độ quét Serial bằng cách nhấn vào biểu tượng Serial. Sau khi nhập đúng số Serial hoặc Quét thành công Barcode, ứng dụng hiển thị Pop-up thông tin sản phẩm. Chọn "Xác nhận" để tiếp tục.

- Nhập thông tin khách hàng theo hướng dẫn.

- Chọn "Kích hoạt" để hoàn thành. Sau đó, màn hình hiện ra thông báo "Kích hoạt bảo hành thành công".

Ghi chú: Khách hàng có thể lập tài khoản, đăng nhập và kích hoạt bảo hành. Tuy nhiên, với tài khoản người tiêu dùng, khách hàng chỉ có thể truy cập 2 mục là "Kích hoạt" và "Lịch sử kích hoạt", không thể truy cập các mục còn lại.

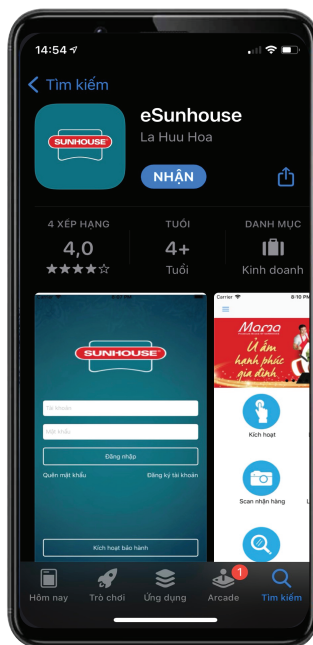

Quý khách hàng thân mến,

Xin chân thành cảm ơn vì đã tin dùng và lựa chọn sản phẩm của SUNHOUSE.

Chúng tôi tin rằng, sản phẩm làm bằng những chất liệu cao cấp hàng đầu này sẽ đáp ứng mọi yêu cầu và làm hài lòng quý khách.

Quý khách hàng vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng để đảm bảo an toàn và đạt hiệu quả tốt nhất.

SUNHOUSE không chịu trách nhiệm pháp lý về con người và tài sản trong những trường hợp thiệt hại do lắp đặt sai hoặc sử dụng thiết bị không đúng cách.

GIỚI THIỆU SẢN PHẨM

Sản phẩm này được làm từ những chất liệu cao cấp và thiết kế với những tính năng tiện lợi nhất cho người sử dụng:

1. Để tiếp điện không dây, vận hành dễ dàng.
2. Làm sôi nhanh, tiết kiệm thời gian và điện năng.
3. 3 cấp độ an toàn: Tự động tắt khi nước sôi - Chống đun sôi cạn - Bảo vệ quá nhiệt

Model	SHD1386W
Điện áp	220V
Tần số	50Hz
Công suất	1800W
Dung tích	1.7L

THÀNH PHẦN CẤU TẠO



LƯU Ý TRƯỚC KHI SỬ DỤNG

Đọc kỹ hướng dẫn sử dụng để sản phẩm phát huy công năng tối đa và đảm bảo an toàn cho người dùng.

1. Trước khi dùng, kiểm tra lại điện áp xem có tương thích với điện áp quy định trên sản phẩm hay không (220V-50Hz).
2. Không đặt sản phẩm ở vị trí cạnh bàn/tủ hay trên các bề mặt nóng.
3. Không đặt sản phẩm cạnh bếp gas, bếp điện hay lò vi sóng, lò nướng.
4. Không vận hành thiết bị khi không có nước ở trong để tránh nguy hiểm.
5. Đảm bảo sản phẩm đặt ở bề mặt phẳng và vững chãi, tránh xa tầm tay trẻ em.
6. Không nhúng toàn bộ ấm vào nước hoặc chất lỏng khác.
7. Trong khi ấm đang sôi hoặc vừa sôi xong, tránh đặt tay gần miệng rót vì có thể bỏng bởi hơi nước.
8. Rót nước ra khỏi ấm từ từ để tránh tràn nước, bỏng tay.
9. Thiết bị này không phù hợp cho những người bị giảm khả năng thể chất, cảm giác hoặc tinh thần - trừ khi họ được giám sát hoặc hướng dẫn bởi người có trách nhiệm.
10. Trẻ em cần được giám sát để đảm bảo không chơi đùa với sản phẩm.
11. Để tiếp điện chỉ được dùng cho ấm siêu tốc này, không dùng cho các mẫu mã khác.
12. Chỉ sử dụng để đun nước trong gia đình, nhà nghỉ, khách sạn. Không dùng sản phẩm ngoài trời và cho các mục đích khác.
13. Rút ổ điện ra khỏi nguồn khi không sử dụng và trước khi vệ sinh.
14. Nếu để tiếp điện, dây điện, ổ cắm có hiện tượng hư hại, chúng cần được kiểm tra và thay thế bởi trung tâm bảo hành chính hãng hoặc cơ sở sửa chữa uy tín để tránh thiệt hại không đáng có.
15. Chú ý không đổ quá đầy (vượt vạch định mức trên thân ấm) để tránh hiện tượng trào nước khi nước sôi.
16. Đóng chặt nắp trước khi đun nước.

Nếu bạn sử dụng thiết bị lần đầu tiên, nên rửa sạch ấm rồi đun sôi nước ở vạch định mức cao nhất (1.7 lít) rồi đổ nước đó đi. Lau lại bên trong, bên ngoài ấm với khăn mềm.

HƯỚNG DẪN SỬ DỤNG

1. Đặt để tiếp điện lên mặt phẳng vững chãi.
2. Nhấc ấm ra khỏi để tiếp điện rồi đổ vào lượng nước mong muốn. Chú ý, không được thấp hơn vạch "Min" và cũng không vượt vạch "Max" (quá ít nước, ấm sẽ bật chế độ chống sôi cạn và không vận hành, quá nhiều nước có thể gây trào khi sôi). Sau đó đóng nắp lại.
3. Đặt ấm lên trên để tiếp điện.
4. Cắm điện. Ấn công tắc "On/Off" để khởi động quá trình đun, đèn đỏ sẽ báo sáng. Khi nước đã sôi xong, công tắc "On/Off" sẽ tự động nhảy. Trong lúc ấm đang đun nước, bạn có thể hủy quá trình này bằng cách trực tiếp ấn nút "On/Off". Khi muốn tiếp tục đun, vui lòng ấn lại.
5. Nhấc ấm ra khỏi để tiếp điện và rót nước vào bình chứa. Cẩn thận nước nóng có thể gây bỏng.
6. Rút ổ cắm ra khỏi nguồn điện và ấm đi khi không sử dụng (đặc biệt là để tiếp điện).

CHỨC NĂNG CHỐNG SÔI CẠN

Nếu sản phẩm được vận hành mà không có nước hoặc lượng nước quá ít (dưới vạch "Min") thì chức năng chống đun sôi cạn sẽ tự động vận hành và ngắt nguồn điện vào ấm. Trong trường hợp này, cần để ấm nguội rồi mới sử dụng trở lại.

VỆ SINH SẢN PHẨM

1. Luôn ngắt nguồn điện và để nguội sản phẩm trước khi vệ sinh.
2. Không ngâm thân ấm, để tiếp điện hay ổ cắm vào nước hoặc các dung dịch khác.
3. Nhấc thân ấm ra khỏi để tiếp điện rồi mới dùng khăn mềm, ấm để vệ sinh.
4. Không sử dụng chất tẩy rửa có tính chất mài mòn, đồ lau chùi thô ráp.

TẮY RỬA CẠN TRONG ẤM

Sau một thời gian sử dụng, đáy ấm có thể xuất hiện cặn bám. Đây là điều bình thường, xảy ra do chất lượng của nước. Nếu để lâu, lớp cặn này sẽ làm giảm hiệu quả đun sôi của nước, vì thế bạn nên vệ sinh theo cách:

- Đổ vào ấm 3 cốc giấm rồi thêm nước sạch vào sao cho vượt quá vạch Min. Để nguyên như thế qua đêm.
- Ngày hôm sau, đổ hỗn hợp đó ra và thay vào bằng nước sạch (đổ đầy), đun sôi rồi đổ nước đó đi. Lúc này, cặn bám có thể được lau sạch chỉ với một chiếc khăn ẩm. Nếu vẫn còn mùi giấm, bạn lặp lại quá trình đó vài lần trước khi đun nước uống trở lại.

SUNHOUSE[®]

MAMA

INSTRUCTION MANUAL



SUNHOUSE 1.7L 2 LAYER HIGH SPEED KETTLE
Model: SHD1386W

Please read these instructions carefully before use

Dear beloved customers,

Thank you for trusting and choosing SUNHOUSE's products. We do believe that this is the most useful and modern product which is manufactured by leading materials. SUNHOUSE's products will meet your requirements and satisfy you.

Please kindly read carefully manual before usage to assure safety and effectiveness.

Manufacturer does not bear any legal responsibilities to human and treasure in case of damage arisen from wrong installation and usage.

Features

This product is made of high quality material and incorporates the following features for your convenience.

1. Cordless design, easy operation.
2. Boils water rapidly, save more time and energy.
3. Concealed heating element, safety and easy cleaning.
4. Three-level safety system:

Automatic power off

When water boiling. Dry-boiling protection.

Over heat protection.

5. Separate base move kettle conveniently. 360 °rotation design.

Specification

Model:	SHD1386W
Rated voltage:	220V
Frequency:	50Hz
Rated Power:	1800W
Capacity:	1.7L

Name of parts



1. Kettle mouth
2. Tension rod (Lid buckle)
3. Lid
4. "On/off" switch Press "1" to connect power. Press "0" to shut off power.
5. Body
6. Handle
7. Base

Important guidelines

Read all instructions before using.

1. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
2. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
3. Do not place on or near a hot gas or electric burner or in a heated oven.
4. Do not operate the appliance without anything in it to avoid damaging the heat elements.
5. Ensure that the kettle is used on a firm and flat surface out of reach of children; this will prevent the kettle from overturning and avoid damage or injury.
6. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
7. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
8. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
9. Be careful of refilling when the kettle is hot.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of Experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible

for their safety.

11. Children's should be supervised to ensure that they do not play with the appliance.
12. Do not touch the hot surface. Use the handle or the button.
13. The attached base cannot be used for other than intended use.
14. Extreme caution must be used when moving an appliance containing hot water.
15. The appliance is not a toy. Do not let the children play it.
16. The kettle is for household use only. Do not use outdoors.
17. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
18. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
19. To disconnect, turn any control to "off", then remove plug from wall outlet.
20. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
21. Do not use the appliance for other than intended use.
22. The kettle can only use with the stand provided.
23. If the kettle is overfilled, boiling water may spill out.
24. Always ensure the lid is closed and do not lift it while the water is

boiling. Scalding may occur if the lid is removed during the brewing cycles.

25. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

26. Avoid spillage on the connector.

Before first use

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with damp cloth.

NOTE: The max capacity of kettle is 1.7L.

Using electric kettle

1. Place the unit on the level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the **lid release button**, fill with the desired amount of water, and then close the lid.

Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX marks or sit below MIN level. Too little water will cause the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the **On/Off switch**, the indicator will light up. Then the kettle will start to boil the water, once the water has being boiled the **On/Off switch** will be off automatically. You can shut off the power by lifting **On/Off switch** at any moment during boiling water. If you want to boil water again, only press down the **On/Off switch** directly to restart the kettle.

NOTE: Ensure that the On/Off switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.

5. Lift the kettle from the power base and then pour the water.
NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't remove the lid while the water is boiling, position the lid so that steam is directed away from the handle.
6. The kettle will not re-boil until the **On/Off switch** is pressed down again.
The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not use.

7. The heating element surface is subject to residual heat after use.

Boil-dry protection

Should you accidentally let the kettle operate without water; the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water to reboil.

Cleaning

1. Always disconnect the appliance from the power outlet and cool it down completely before cleaning.
2. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
3. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.
4. Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

When not in use, the power cord can be stored at the bottom of the appliance. When not sue or storage, the power cord may be wound under the bottom of kettle.

Removal of mineral deposit

You kettle should be periodically de scaled as the mineral deposits in tap water may form scale at the bottom of kettle interior so as to cause the operation less efficiency.

You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow the below instructions to use the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add the water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.