



Hướng dẫn sử dụng máy giặt Mijia

Đọc kỹ hướng dẫn sử dụng này trước khi sử dụng và giữ lại để tham khảo.

Model áp dụng:

TW130MJA08VN

Mục lục

Hướng dẫn an toàn	1
Tổng quan về sản phẩm	3
Cách lắp	4
Cách sử dụng	7
Chăm sóc và Bảo trì	11
Xử lý sự cố	13
Kết nối với Ứng dụng Xiaomi Home	15
Thông số kỹ thuật	15
Dịch vụ khách hàng	16

Hướng dẫn an toàn

Hãy đọc kỹ phần "Hướng dẫn an toàn" trước khi sử dụng và thận trọng khi sử dụng dựa trên hiểu biết cơ bản. Công ty chúng tôi sẽ không chịu trách nhiệm đối với bất kỳ tổn thất nào phát sinh do sử dụng không đúng cách.

Lần sử dụng đầu tiên:

- Hãy đảm bảo thiết bị không bị hư hỏng trong quá trình vận chuyển.
- Tháo tất cả bao bì và để ngoài tầm với của trẻ em.
- Thiết bị rất nặng. Nên có ít nhất hai người cùng khiêng thiết bị này.

CẢNH BÁO: Không được cấp nguồn thiết bị thông qua thiết bị chuyển mạch bên ngoài, chẳng hạn như bộ hẹn giờ, hoặc kết nối với mạch điện thường xuyên bị bật hoặc tắt bởi đơn vị điện lực.

Sử dụng hàng ngày:

- Thiết bị này không dành cho những người (kể cả trẻ em) bị suy giảm khả năng về thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm về sự an toàn của mình giám sát hoặc hướng dẫn sử dụng thiết bị.
- Cần giám sát trẻ em để đảm bảo chúng không nghịch thiết bị.
- Nên để xa trẻ em dưới 3 tuổi trừ khi được giám sát liên tục.
- Nước xả vải hoặc các sản phẩm tương tự chỉ được sử dụng theo đúng hướng dẫn của nhà sản xuất nước xả vải.
- Không để trẻ em hoặc thú cưng đến gần thiết bị khi nắp đang mở.
- Để các loại chất giặt tẩy, nước xả vải và thuốc tẩy xa tầm tay trẻ em.
- Lấy tất cả vật dụng ra khỏi túi quần áo, chẳng hạn như bật lửa và diêm.
- Trước khi cho quần áo vào máy giặt, hãy đảm bảo các khóa kéo đã được kéo chặt và dây rút được buộc chắc, đồng thời cẩn thận với các chi tiết nhỏ của quần áo để tránh bị vướng hoặc hư hỏng trong chu trình giặt. Nếu cần, hãy sử dụng túi giặt.
- Không vận hành máy khi đi chân trần và giữ tay chân luôn khô ráo.
- Không được che đậy hoặc bọc thiết bị trong khi vận hành hoặc sau khi vận hành để hơi ẩm có thể bay hơi.
- Không đặt vật nặng, thiết bị gia nhiệt điện từ hoặc các vật ẩm ướt như lò vi sóng, bếp từ, máy sấy tóc điện, bàn ủi điện và lò nướng lên máy.
- Không sử dụng bất kỳ loại bình xịt dễ cháy nào ở gần thiết bị.
- Không giặt quần áo đã qua xử lý bằng dung môi trong thiết bị nếu chưa phơi khô trước đó.
- Khi cắm hoặc rút phích cắm, hãy đảm bảo không có vật liệu dễ cháy nào ở khu vực xung quanh.
- Không dùng nước nóng để giặt cao su xốp hoặc các vật liệu mềm xốp.
- Không thờ tay vào bên trong lồng giặt khi máy đang hoạt động để tránh bị thương ở tay.
- Không chạm vào hoặc tháo phích cắm điện khi tay ướt để tránh điện giật. Không bao giờ được rút phích cắm thiết bị bằng cách kéo dây nguồn. Luôn cầm chắc phích cắm điện và rút thẳng ra khỏi ổ cắm điện.

Thận trọng:

- Không được nối với nguồn cấp nước nóng.
- Không lắp đặt máy giặt ở môi trường ngoài trời hoặc ẩm ướt để tránh nguy cơ điện giật hoặc hỏa hoạn.
- Không giặt quần áo bị dính xăng, dầu, benzen, dung môi pha sơn, cồn hoặc các hóa chất khác.
- Sau khi kết thúc mỗi chu trình giặt, hãy khóa vòi nước và rút phích cắm thiết bị để đảm bảo máy giặt đã ngắt kết nối khỏi nguồn nước và điện.
- Khi xảy ra hỏng hóc, dây nguồn phải do nhà sản xuất, đại lý dịch vụ hoặc những người có cùng chuyên môn thay thế để tránh nguy hiểm.
- Thiết bị này được thiết kế để sử dụng trong gia đình và các môi trường tương tự, ví dụ như:
 - khu vực bếp ăn của nhân viên trong cửa hàng, văn phòng và các môi trường làm việc khác;
 - nhà ở trang trại;
 - bởi khách hàng trong khách sạn, nhà nghỉ và các môi trường loại dân cư khác;
 - mô hình lưu trú kiểu giường ngủ và phục vụ bữa sáng.

- Thêm lượng chất giặt tẩy ít bột dựa trên khối lượng đồ giặt và mức nước đã chọn để đảm bảo giặt hiệu quả và tránh tạo bột quá nhiều.
- Đối với khối lượng đồ giặt lớn, vui lòng sử dụng lượng chất giặt tẩy vừa phải và pha loãng chất giặt tẩy trong nước ấm trước để tránh cặn chất giặt tẩy làm hư hại vải.
- Khi đặt hẹn giờ, hãy hòa tan và pha loãng chất giặt tẩy trong nước ấm trước khi cho vào lồng giặt để tránh làm hư hại vải do tiếp xúc lâu với chất giặt tẩy.


Lắp đặt:

- Đối với các thiết bị có các lỗ thông gió ở phần đế, thảm trải sàn không được che chắn hoặc làm cản trở các lỗ thông gió này.
- Đặt thiết bị ở nơi thoáng khí và đảm bảo có đủ không gian để mở nắp.
- Không lắp đặt thiết bị ở môi trường ngoài trời ẩm ướt hoặc khu vực dễ bị rò rỉ nước, chẳng hạn như dưới hoặc gần bồn rửa. Nếu xảy ra hiện tượng rò rỉ nước, hãy ngắt nguồn điện và để máy giặt khô tự nhiên.
- Không đặt thiết bị trực tiếp lên thảm, gần tường hoặc đồ nội thất.
- Không lắp đặt thiết bị ở nơi có ánh nắng trực tiếp hoặc gần các nguồn nhiệt (như bếp và máy sưởi).
- Đảm bảo nguồn điện phù hợp với thông tin điện trên bảng tên.
- Không dùng dây nối dài hoặc bộ chuyển đổi kép.
- Đảm bảo chỉ sử dụng dây nguồn và ống cấp nước được cung cấp kèm theo thiết bị.
- Đảm bảo dây nguồn và phích cắm không bị hư hỏng.
- Thiết bị phải được nối đất trước khi sử dụng. Đảm bảo thiết bị được cắm vào ổ cắm riêng biệt, có nối đất.

Biện pháp an toàn:



- Nếu việc vệ sinh và bảo trì do trẻ em thực hiện, hãy đảm bảo rằng chúng được người giám hộ giám sát.
- Trước khi thực hiện bất kỳ việc bảo trì hàng ngày nào, hãy rút phích cắm thiết bị.
- Để mở nắp khi không sử dụng để tránh mùi khó chịu.
- Không sử dụng tia nước hoặc hơi nước để vệ sinh thiết bị.
- Khi xảy ra hỏng hóc, dây nguồn phải do nhà sản xuất, đại lý dịch vụ hoặc những người có cùng chuyên môn thay thế để tránh nguy hiểm.
- Không tự tháo rời, sửa chữa hoặc sửa đổi máy giặt. Liên hệ với đội ngũ dịch vụ hậu mãi để sửa chữa và chỉ sử dụng các bộ phận chính hãng.
- Để máy tránh xa các vật kim loại, hóa chất, đồ dễ vỡ và các nguồn gây cháy như nến đang cháy và thuốc lá đang cháy.
- Nối vòi nước với ống cấp nước mới được cung cấp và thường xuyên kiểm tra xem có bị phồng, xoắn, nứt, mòn hoặc rò rỉ hay không. Thay thế nếu cần. Không tái sử dụng các bộ phận ống dẫn cũ.
- Nếu phích cắm điện bị bẩn, hãy lau sạch trước khi sử dụng. Thường xuyên vệ sinh phích cắm để tránh tình trạng tiếp xúc kém.
- Vệ sinh vỏ máy và các bộ phận cao su bằng vải mềm và dung dịch không ăn mòn, không chứa dung môi.

Tổng quan về sản phẩm

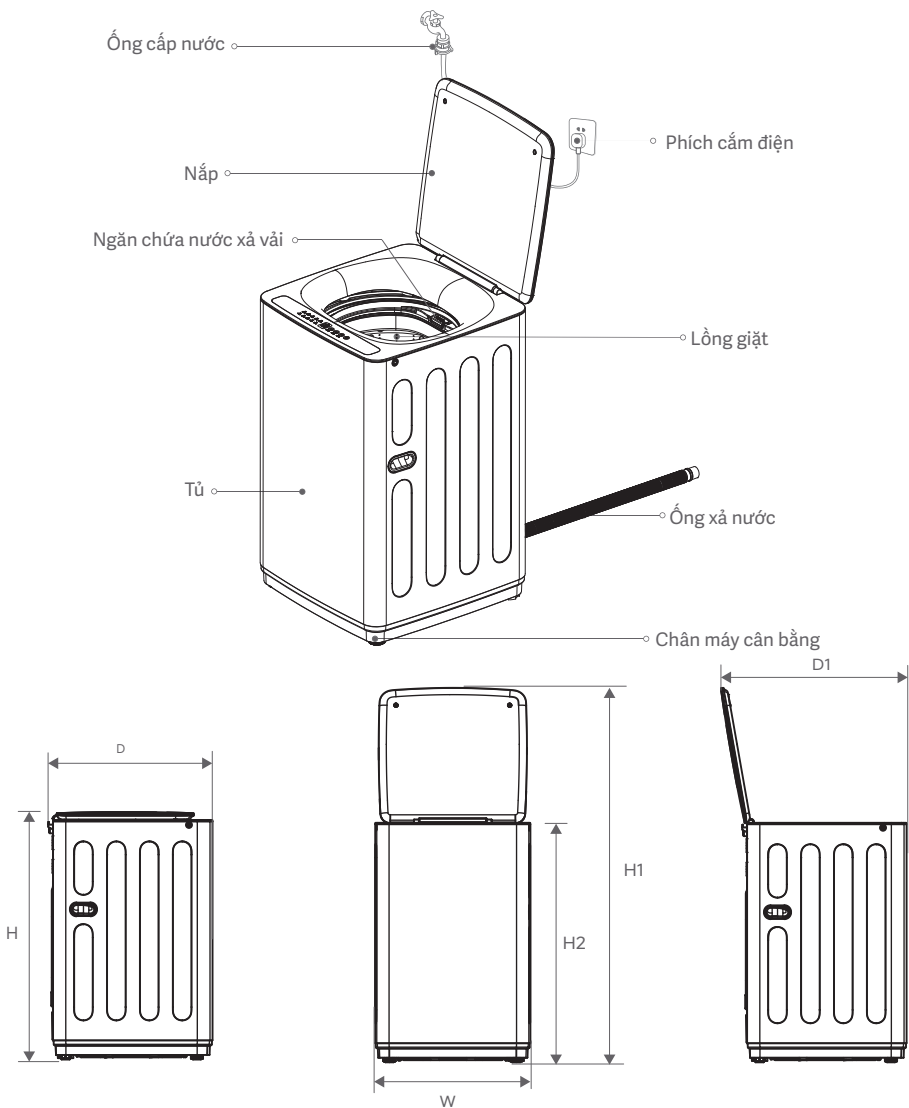

Kích thước sản phẩm	W	580 mm	D1	694 mm
	D	596 mm	H1	1399 mm
	H	925 mm	H2	895 mm

Danh sách phụ kiện

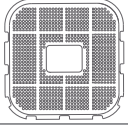
			
Tấm bọc đáy × 1	Ống cấp nước × 1	Vít × 2	Hướng dẫn sử dụng × 1

- Sau khi mở hộp, hãy kiểm tra xem tất cả các phụ kiện được liệt kê ở trên có đầy đủ hay không. Nếu thiết bị hư hỏng trong quá trình vận chuyển hoặc thiếu bất kỳ phụ kiện nào, hãy liên hệ ngay với đội ngũ dịch vụ hậu mãi.
- Tấm bọc đáy được đặt trên lớp đệm xốp trên nắp máy.
- Minh họa về sản phẩm, phụ kiện và giao diện người dùng trong hướng dẫn sử dụng chỉ mang tính chất tham khảo. Sản phẩm và chức năng thực tế có thể thay đổi do cải tiến sản phẩm.
- Thiết bị được kiểm tra trước khi rời khỏi nhà máy và một lượng nước nhỏ còn sót lại là điều bình thường.



Cách lắp

Lắp đặt tấm bọc đáy

Vui lòng lắp đặt và điều chỉnh máy giặt theo chỉ dẫn trong hướng dẫn sử dụng này để đảm bảo vận hành đúng cách và an toàn.

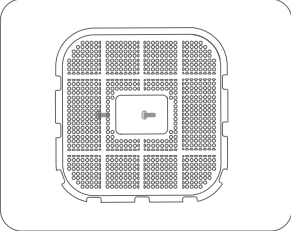

- ❶ Tháo tấm bọc đáy ra khỏi nắp xốp và lấy 2 vít ra khỏi bao bì.

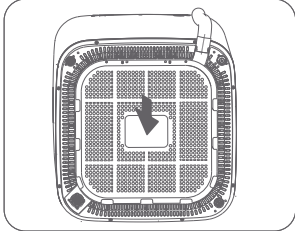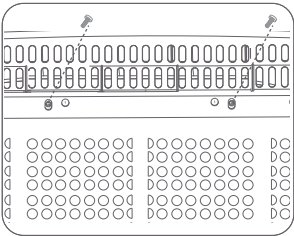



- ❷ Nghiêng nhẹ phần sau của máy giặt về phía trước, rồi lắp tấm bọc đáy với mặt lồi hướng ra ngoài vào khe đáy theo hướng mũi tên.

- ❸ Sau khi lắp tấm bọc đáy xong, các lỗ vít sẽ thẳng hàng với các lỗ vít ở đáy. Dùng tua vít để vặn chặt ốc vít vào các lỗ.



Điều chỉnh chân máy cân bằng

Máy giặt nên được đặt cách tường ít nhất 50 mm. Góc nghiêng tối đa cho phép của bề mặt đỡ là 1°. Sàn nhà không bằng phẳng hoặc dốc có thể gây ra hiện tượng vận hành không ổn định hoặc dừng máy giữa chừng. Điều chỉnh như sau:

- ❶ Đảm bảo đặt máy giặt trên bề mặt bằng phẳng và cân đối.

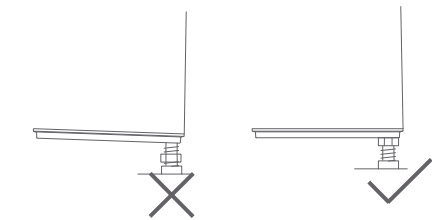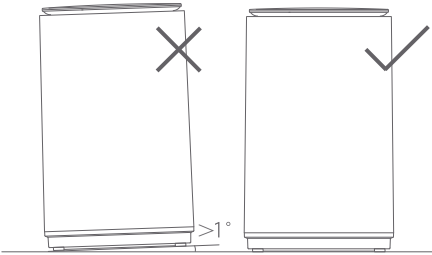

- ❷ 1. Nhấc nhẹ một bên máy giặt có chân cân bằng, nới lỏng đai ốc sau đó vận chân cân bằng.
2. Sau khi điều chỉnh xong, siết chặt các đai ốc.

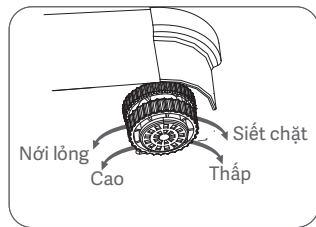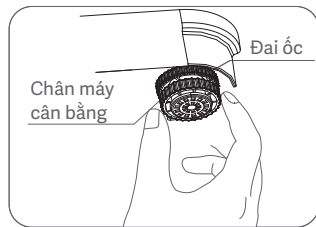

* Lưu ý: Các chân máy cân bằng được hiển thị chỉ mang tính chất minh họa; vui lòng xem sản phẩm thực tế để biết cấu tạo chính xác.

Nối ống cấp nước

Trước khi nối ống cấp nước vào vòi nước, hãy kiểm tra loại khớp nối ống và làm theo hướng dẫn dành cho khớp nối ống đó.

Lưu ý về kết nối


- Áp suất nguồn cấp nước phải nằm trong khoảng từ 0,05 MPa đến 0,8 MPa (0,5 – 8,0 kgf/cm²). Nếu áp suất nguồn cấp nước vượt quá 0,8 MPa, cần lắp đặt thiết bị giảm áp lực.
- Không siết quá chặt ống cấp nước khi nối vào van.
- Kiểm tra định kỳ tình trạng của ống và thay thế ống nếu cần.

Kiểm tra vòng đệm cao su


Hai vòng đệm cao su ❶ được cung cấp kèm ống cấp nước để tránh bị rò rỉ, miễn là các đầu nối vào vòi được siết chặt đúng cách.

Lưu ý:


- Không siết quá chặt các đầu nối.
- Không sử dụng các thiết bị cơ khí như kìm đa năng để siết chặt các ống cấp nước. Đảm bảo rằng đầu cong của ống cấp nước được nối với thiết bị.

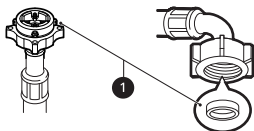


Nối ống với vòi nước

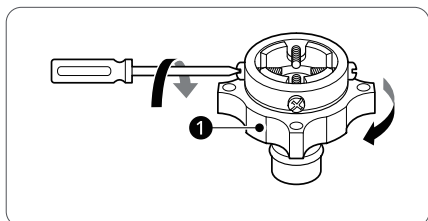


1. Nối lỏng vòng kẹp đầu nối ống ❶ và 4 vít cố định.

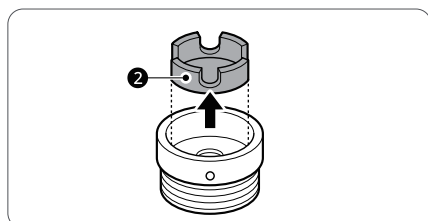

2. Tháo tâm dẫn hướng ❷ nếu vòi quá lớn, không vừa với đầu nối ống.

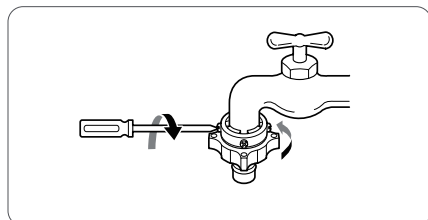

3. Đẩy đầu nối ống vào sát vòi sao cho vòng đệm cao su được gắn khít, đảm bảo kín nước. Siết chặt 4 vít cố định và vòng kẹp đầu nối ống.

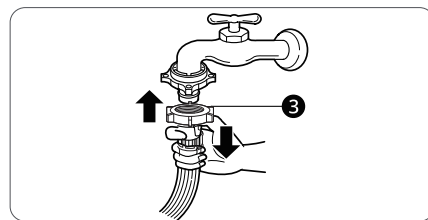


4. Kéo vành trượt của đầu nối ❸ xuống, đẩy ống cấp nước vào đầu nối ống, sau đó thả vành trượt của đầu nối ra. Đảm bảo đầu nối ống được khóa vào đúng vị trí.

Lưu ý:

- Sau khi nối ống cấp nước vào vòi nước, mở vòi nước để xả sạch các chất bẩn (bụi bẩn, cát, mùn cưa, v.v.) trong đường ống nước. Xả nước vào xô và kiểm tra nhiệt độ nước.

Nối ống với thiết bị

Vặn ống cấp nước vào van cấp nước ở phía sau của thiết bị.

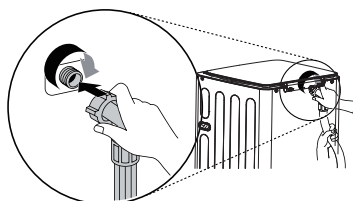


Lưu ý:

- Sau khi hoàn tất các kết nối, hãy kiểm tra xem có rò rỉ không và siết chặt hoặc lắp ráp lại các đầu nối nếu cần.
- Đối với các model chỉ có một cửa nước vào, không được nối ống vào nguồn cấp nước nóng.
- Chỉ nối với nguồn cấp nước lạnh.

Cách sử dụng

Chức năng và Thao tác

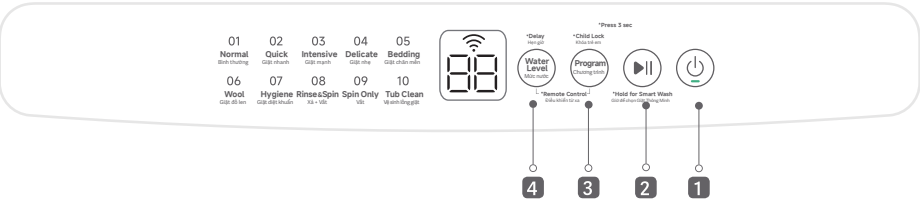

Hướng dẫn sử dụng nút

1

Nhấn nút này để bật/tắt máy giặt.

2 Khởi động/Tạm dừng

Nhấn nút này để khởi động/tạm dừng chương trình giặt.

3 Chương trình

Khi máy giặt đang bật, nhấn nút này để chọn chương trình giặt.

4 Mức nước

- Sử dụng nút này để điều chỉnh cài đặt mức nước.
- Nhấn nút này một lần, màn hình sẽ hiển thị mức nước hiện tại; nhấn nhanh lại để điều chỉnh. Nếu không điều chỉnh trong vòng 3 giây, màn hình sẽ chuyển sang hiển thị thời gian còn lại hoặc thời gian hạn giờ.

Chức năng bổ sung

Giữ để chọn Giặt thông minh

Khi máy giặt đang tắt, nhấn giữ nút khởi động/tạm dừng để khởi động chương trình Giặt thông minh.

Điều khiển từ xa

1. Khi máy giặt đang bật, nhấn giữ nút khởi động/tạm dừng để bật/tắt mạng không dây.

Lưu ý: Biểu tượng mạng không dây  sáng lên cho biết máy giặt đã kết nối mạng Internet thành công, cho phép điều khiển từ xa và kiểm tra trạng thái thông qua ứng dụng Xiaomi Home. Biểu tượng mạng không dây nhấp nháy chậm cho biết máy giặt đang chờ cấu hình mạng. Biểu tượng mạng không dây nhấp nháy nhanh cho biết cấu hình mạng bị lỗi và cần cài đặt lại.

2. Khi biểu tượng mạng không dây  sáng, nhấn nút mức nước và nút chương trình đồng thời để bật hoặc tắt điều khiển từ xa. "AP" sẽ xuất hiện trên màn hình khi chức năng điều khiển từ xa được bật và biến mất khi tắt chức năng.

Khóa trẻ em

- Khi máy đang chạy, nhấn giữ nút chương trình trong 3 giây để kích hoạt khóa trẻ em và giữ nút lần nữa trong 3 giây để hủy kích hoạt chức năng này. Sau khi kích hoạt, màn hình sẽ luân phiên hiển thị "CL" và thời gian còn lại hoặc thời gian hẹn giờ, mỗi lần hiển thị trong 3 giây.
- Khi khóa trẻ em đang bật, chỉ nút  và nút chương trình có thể hoạt động.

Hẹn giờ

- Khi máy đang bật, nhấn giữ nút mức nước trong 3 giây trước khi nhấn nút khởi động/tạm dừng để chuyển sang cài đặt hẹn giờ. Màn hình hiển thị số giờ hẹn giờ. Nhấn nút mức nước để đặt thời gian hẹn giờ, lên tới 24 giờ.
- Sau khi đặt hẹn giờ xong, thời gian hẹn giờ vẫn sẽ hiển thị, đồng thời chỉ nút  và nút khởi động/tạm dừng có thể hoạt động.
- Màn hình hẹn giờ: Màn hình hiển thị thời gian hẹn giờ đếm ngược theo giờ.
- Hủy hẹn giờ: Nhấn nút  để hủy hẹn giờ và tắt máy giặt.
- Thời điểm bắt đầu chương trình khi hẹn giờ: Chương trình sẽ bắt đầu 5 phút sớm hơn thời điểm bắt đầu được tính toán, tức là thời điểm kết thúc đã cài đặt trước trừ đi thời gian chạy tối đa của chương trình.
- Không thể đặt hẹn giờ sau khi chương trình đã bắt đầu.

Lưu ý:

Có thể xuất hiện một chút mùi khi sử dụng máy mới lần đầu tiên, điều này là bình thường. Nên cho máy chạy một chu trình không tải để vệ sinh lồng giặt.

Đặt lại điều khiển logic mờ

Sau một thời gian sử dụng, chức năng phát hiện mức nước mờ có thể trở nên thiếu chính xác. Khôi phục cài đặt gốc như sau:

1. Đảm bảo lồng giặt trống, chạy một chu trình vắt trong hơn 30 giây, sau đó tắt máy.
2. Khi máy đang tắt, nhấn giữ nút chương trình và nút khởi động/tạm dừng rồi thả ra khi màn hình hiển thị "t3". Máy sẽ tự động chạy đồng thời hiển thị các số thay đổi, cho thấy máy đang ở chế độ tự học dựa trên logic mờ. Máy sẽ ngừng hoạt động sau khoảng 12 giây, hoàn tất khôi phục.
3. Không tự ý dừng máy hoặc rút phích cắm trước khi máy tự động tắt, nếu không quá trình tự học sẽ không hoàn tất.
4. Quá trình tự học này có thể được lặp lại, nhưng máy chỉ lưu cài đặt cuối cùng.

Tổng quan về chương trình

Chương trình (trên bảng điều khiển)	Khối lượng giặt tối đa	Mô tả chức năng
Bình thường	13 kg	Dùng để giặt chung các loại vải cotton, linen và vải sợi tổng hợp dùng hàng ngày.
Giặt nhanh	4 kg	Dùng cho các loại vải mỏng, ít bẩn.
Giặt mạnh	7 kg	Dùng cho các loại vải dày, bị bẩn nhiều.
Giặt nhẹ	5 kg	Dùng cho các loại vải sợi tổng hợp mỏng và ít bẩn (ví dụ: đồ lót, lụa và vải dệt kim).
Giặt chăn mền	6 kg	Dùng cho các sản phẩm khăn trải giường làm từ vải cotton, linen và vải pha.
Giặt đồ len	1 kg	Dành cho các loại vải len có thể giặt máy.
Giặt diệt khuẩn	7 kg	Dùng phương pháp giặt kéo dài và xả nhiều lần để loại bỏ mạt bụi khỏi vải. Thận trọng khi sử dụng chương trình này cho các loại vải tổng hợp và vải màu.
Xả + Vắt	13 kg	Thực hiện thêm một chu trình xả và vắt để làm sạch đồ giặt hơn nữa.
Vắt	13 kg	Vắt để loại bỏ nước thừa.
Vệ sinh lồng giặt	—	Chu trình chuyên dụng để vệ sinh lồng giặt. Không cho đồ giặt vào máy. Nên sử dụng thuốc tẩy hoặc chất tẩy rửa lồng giặt để đạt hiệu quả tốt hơn. Hãy chạy chương trình thường xuyên.

Chương trình (trong ứng dụng)	Khối lượng giặt tối đa	Mô tả chức năng
Khăn trùm đầu	6 kg	Dùng để giặt khăn trùm đầu bằng cotton hoặc sợi tổng hợp.
Rèm cửa	6 kg	Dành cho rèm cửa có thể giặt máy, làm từ sợi tổng hợp.
Vỏ sofa	6 kg	Dành cho các loại vỏ sofa có thể giặt máy. Lộn mặt trong của vỏ ra ngoài và tháo bỏ tất cả các đồ trang trí trước khi giặt.
Chăn mùa hè	3 kg	Dành cho chăn mỏng mùa hè có thể giặt máy, làm từ sợi tổng hợp.
Giặt đồ dày	8 kg	Dành cho các loại vải gia dụng cỡ lớn.

- Lưu ý:
- Mô tả chương trình và các thông số dựa trên model ban đầu và chỉ mang tính chất tham khảo. Chương trình và thông số thực tế có thể thay đổi do cập nhật sản phẩm.
 - Danh sách trên có thể không bao gồm toàn bộ các chương trình ứng dụng. Các chương trình mới có thể được bổ sung trong tương lai.

Biểu tượng chức năng(trong ứng dụng)	Mô tả chức năng
Ngâm	Chức năng này cho phép chất tẩy rửa thấm sâu hoàn toàn vào vải, loại bỏ vết bẩn hiệu quả hơn.
Tính năng xả thêm	Chức năng này giúp giữ mùi hương của nước xả vải lâu hơn.

Hướng dẫn khối lượng đồ giặt


Thể tích nước	Trọng lượng đồ giặt	Số lượng đồ khuyến nghị
Mức 1-2	2 kg	9 áo sơ mi hoặc áo phông; hoặc 3 quần jean.
Mức 3-4	4 kg	18 áo sơ mi hoặc áo phông; 7 quần jean; hoặc 2 khăn trải giường.
Mức 5-6	6 kg	27 áo sơ mi hoặc áo phông; 10 quần jean; hoặc 3 khăn trải giường.
Mức 7-8	8 kg	36 áo sơ mi hoặc áo phông; 13 quần jean; hoặc 4 khăn trải giường.

Lưu ý:


- Vui lòng điều chỉnh lượng chất giặt tẩy dựa trên khối lượng đồ giặt và hướng dẫn sử dụng chất giặt tẩy.
- Các khuyến nghị ở trên chỉ mang tính chất tham khảo. Khối lượng giặt thực tế có thể thay đổi tùy thuộc vào loại vải, độ dày và các yếu tố khác.

Cách sử dụng nước xả vải


Cho nước xả vải vào trước khi giặt dựa trên khối lượng đồ giặt, theo hướng dẫn của sản phẩm (nước xả vải sẽ tự động được xả ra trong quá trình xả cuối cùng).

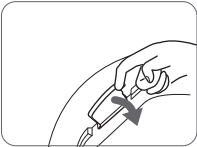

- ❶ Dùng ngón tay mở nắp ngăn chứa nước xả vải.

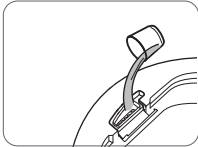


- ❷ Thêm nước xả vải.

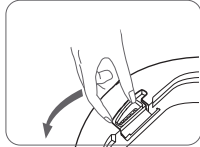

- ❸ Đóng nắp ngăn chứa. Việc để mở nắp trong suốt chu trình có thể khiến nước tràn vào và gây tràn nước xả vải.

Lưu ý:


- Pha loãng nước xả vải với nước. Nước xả vải không pha loãng có thể gây ra các vết bẩn trông giống như vết dầu loang.
- Không đổ đầy quá mức. Ngăn chứa có dung tích tối đa 30 mL. Không bao giờ được đổ trên mức 30 mL. Việc đổ đầy quá mức có thể khiến nước xả vải được xả ra sớm, dẫn đến quần áo bị dính vết bẩn. Cốc có miệng rộng sẽ giúp bạn tránh làm đổ dung dịch.
- Không trộn lẫn chất giặt tẩy với thuốc tẩy.
- Không bao giờ được đổ trực tiếp nước xả vải lên quần áo. Điều này có thể làm quần áo bị dính vết bẩn.
- Nếu khó tiếp cận ngăn chứa, hãy xoay lồng giặt theo chiều kim đồng hồ bằng tay. Việc xoay ngược chiều kim đồng hồ có thể gây khó khăn, trong khi xoay theo chiều kim đồng hồ sẽ giúp điều chỉnh dễ dàng hơn.
- Không cho nước xả vải vào sau khi chu trình giặt đã bắt đầu. Việc cho vào sau sẽ làm giảm độ hiệu quả của nó.
- Sau khi cho nước xả vải vào, không nên để trong ngăn chứa quá 12 tiếng, vì có thể khiến nước xả vải bị cô lại.
- Chức năng của nước xả vải không hoạt động với các chương trình sau: Giặt nhanh, Xả + Vắt, Vắt và Vệ sinh lồng giặt.

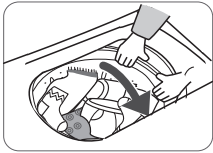


Chăm sóc và Bảo trì

Vệ sinh bề mặt bên ngoài của thiết bị


Việc giữ cho máy giặt sạch sẽ giúp cải thiện hiệu suất hoạt động, tránh hư hỏng không cần thiết và kéo dài tuổi thọ của máy.

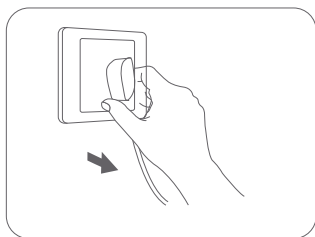

- 1 Tháo phích cắm máy giặt trước khi vệ sinh máy.

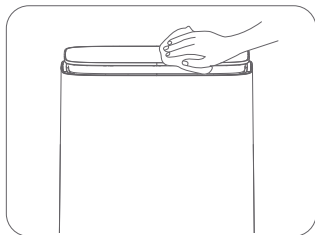

- 2 Vệ sinh vỏ máy và bảng điều khiển bằng khăn mềm và chất tẩy rửa gia dụng không mài mòn, không ăn mòn.

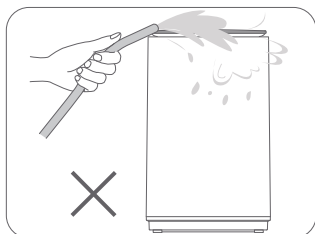


- 3 Không xả nước vỏ máy để tránh hư hỏng. Không đặt máy giặt ở khu vực ẩm ướt, không để nước bắn vào máy hay đặt quần áo ướt lên nắp máy.


Lưu ý: Hình ảnh chỉ mang tính chất tham khảo; sản phẩm thực tế có thể khác.

Vệ sinh bộ lọc xơ vãi


Vệ sinh bộ lọc xơ vãi sau mỗi lần sử dụng.

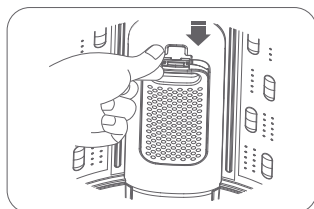


- 1 Ấn chốt xuống và kéo bộ lọc xơ vãi ra.

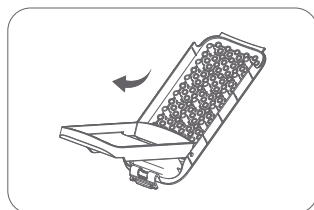

- 2 Mở bộ lọc xơ vãi, lật bộ lọc ra, loại bỏ các mảnh vụn rồi xả sạch bằng nước.

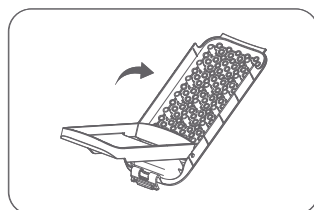


- 3 Lật bộ lọc trở lại vị trí ban đầu. Nếu có xơ vãi bám trên thành trong của lồng giặt, hãy vệ sinh cả thành lồng giặt và bộ lọc để tránh làm bẩn các lần giặt sau.

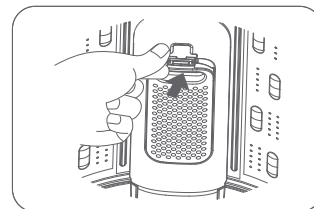


- 4 Khi lắp lại bộ lọc xơ vãi, đảm bảo không kẹt bộ lọc và bộ lọc xơ vãi được lắp đặt đúng cách.

Vệ sinh bộ lọc đầu vào


Sau thời gian sử dụng dài, bộ lọc đầu vào có thể bị tắc nghẽn do mảnh vụn. Vệ sinh như sau:

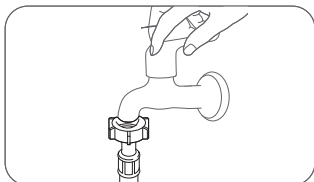


- 1 Khóa vòi nước và kết nối nguồn điện. Khởi động máy và cho máy chạy trong 5 giây (để nước trong ống cấp nước chảy vào lồng giặt), sau đó ngắt kết nối nguồn điện.

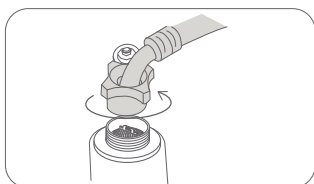

- 2 Nới lỏng và tháo ống cấp ở phía sau của máy giặt. Dùng vải che kín miệng lỗ để tránh bị bắn nước.

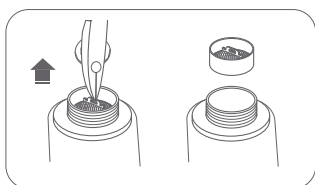


- 3 Dùng kim tháo nắp bộ lọc khỏi lỗ van cấp nước và vệ sinh kỹ lưỡng.

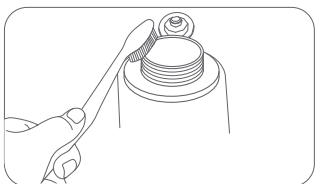


- 4 Dùng bàn chải vệ sinh cả bên trong và bên ngoài đầu nối ren. Lắp lại nắp bộ lọc van cấp nước. Mở vòi nước và kiểm tra rò rỉ ở các chỗ nối.

Xử lý tình trạng đóng băng trong máy giặt


Tình trạng đóng băng có thể xảy ra nếu máy giặt được đặt trong môi trường dưới 0°C. Nếu xảy ra tình trạng này, xử lý vấn đề như sau:

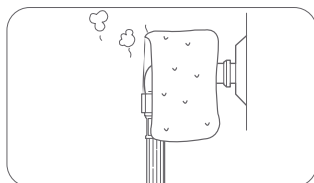


- 1 Dùng khăn thấm nước ẩm quấn quanh vòi nước, sau đó xả nước ấm lên vòi để làm tan băng.

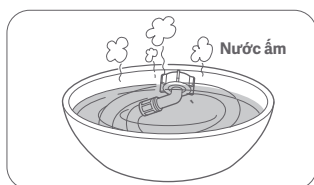

- 2 Tháo ống cấp nước và ngâm trong nước ấm.

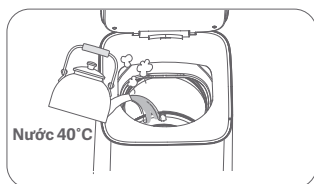

- 3 Đổ nước ở nhiệt độ 40°C vào lồng giặt cho đến khi cánh khuấy ngập trong nước. Chờ một lúc cho đến khi có thể xoay cánh khuấy bằng tay, khi đó máy đã sẵn sàng để sử dụng.

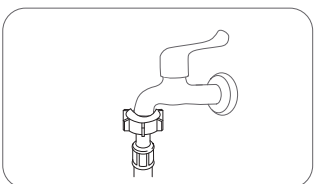

- 4 Nối lại ống cấp nước vào vòi nước và kiểm tra xem cả đường cấp nước và xả nước có hoạt động bình thường không. Đảm bảo nhiệt độ môi trường xung quanh trên 0°C khi sử dụng máy giặt lần nữa.

Xử lý sự cố

Các trường hợp được liệt kê dưới đây có thể không phải là lỗi. Vui lòng kiểm tra lại trước khi yêu cầu sửa chữa.

Vấn đề	Nguyên nhân có thể xảy ra	Giải pháp
▪ Đèn báo không sáng. ▪ Máy giặt không hoạt động.	▪ Phích cắm điện không được cắm đúng cách. ▪ Ổ cắm điện không có điện. ▪ Chưa bật công tắc điện.	▪ Cắm phích cắm điện đúng cách. ▪ Kiểm tra ổ cắm điện hoặc thử ổ khác. ▪ Bật công tắc điện.
▪ Ống cấp nước bị rò rỉ.	▪ Ống cấp nước chưa được nối đúng cách với vòi nước hoặc máy giặt. ▪ Lắp lại ống, đảm bảo các khớp nối được siết chặt.	▪ Lắp lại ống, đảm bảo các khớp nối được siết chặt.
▪ Không xả nước	▪ Ống xả nước được đặt quá cao hoặc không nằm ngang. ▪ Ống bị cong, xoắn hoặc tắc nghẽn.	▪ Duỗi thẳng và thông tắc ống. ▪ Hạ thấp đầu ống xả nước.
▪ Không cấp nước	▪ Chưa mở vòi nước. ▪ Bộ lọc đầu vào bị tắc.	▪ Mở vòi nước. ▪ Vệ sinh bộ lọc đầu vào theo hướng dẫn trong phần "Vệ sinh bộ lọc đầu vào".
▪ Quá trình vắt dừng lại và nước chảy vào trong chu kỳ vắt.	▪ Khối lượng giặt không cân bằng. ▪ Máy giặt chưa được cân bằng.	▪ Máy sẽ tự động cân bằng lại và tiếp tục vắt khi đến giai đoạn xả. ▪ Điều chỉnh chân máy cân bằng.
▪ Không vắt	▪ Chưa đóng nắp sau khi xả nước. ▪ Nắp được mở ra sau khi quá trình vắt bắt đầu.	▪ Đóng nắp và nhấn lại nút khởi động/tạm dừng.
▪ Quá trình vắt bắt đầu và dừng lại gián đoạn trong suốt chu trình vắt.	▪ Điều này được thực hiện để tối ưu hóa hiệu suất vắt.	▪ Điều này được coi là bình thường.
▪ Một lượng nhỏ nước sẽ chảy ra trong lần sử dụng đầu tiên.	▪ Đây là lượng nước còn sót lại từ quá trình kiểm tra hiệu năng được thực hiện trước khi máy rời khỏi nhà máy.	▪ Điều này được coi là bình thường.

▪ Lưu ý: Nếu sự cố vẫn tiếp diễn, hãy rút phích cắm dây nguồn và liên hệ với đội ngũ dịch vụ hậu mãi. Không được tự sửa chữa.

Mô tả mã lỗi

Mã lỗi	Mô tả mã	Giải pháp
E1	Hết thời gian xả nước	Mở nắp, thực hiện bước xử lý sự cố "Không xả nước", sau đó đóng nắp để xóa cảnh báo.
E2	Nắp mở trong khi hoạt động	Đóng nắp và nhấn nút khởi động/tạm dừng để xóa cảnh báo và tiếp tục hoạt động.
E3	Mất cân bằng khi vắt	Mở nắp, phân bổ đều đồ giặt, sau đó đóng nắp để xóa cảnh báo và tiếp tục vắt.
E4	Hết thời gian nạp nước	Mở nắp, thực hiện bước xử lý sự cố "Không cấp nước", sau đó đóng nắp để xóa cảnh báo.
E5	Nắp mở trong khi hoạt động, đã kích hoạt khóa trẻ em	Đóng nắp để xóa cảnh báo và nhấn nút khởi động/tạm dừng tiếp tục hoạt động.
F1	Lỗi mức nước	Nguồn điện đã được ngắt thủ công. Liên hệ với đội ngũ dịch vụ hậu mãi.

Lưu ý: Nếu sự cố vẫn tiếp diễn sau khi thực hiện tất cả các bước trên, hãy ngắt kết nối nguồn điện và liên hệ với đội ngũ dịch vụ hậu mãi.

Lưu ý:

- Điều chỉnh mất cân bằng: Đồ giặt được đặt không đều có thể gây rung lắc trong quá trình vắt. Máy được trang bị hệ thống điều chỉnh mất cân bằng vận hành, hệ thống này giám sát trạng thái máy trong khi hoạt động bằng cách sử dụng hệ thống phát hiện biên độ dịch chuyển. Nếu phát hiện rung lắc quá mức, máy sẽ tự động khởi động quá trình cân bằng lại để phân bổ đồ giặt, điều này có thể làm tăng thời gian chu trình và số chu trình xả.
- Tự động tắt nguồn: Máy sẽ tự động tắt nếu không có chương trình nào được bắt đầu trong vòng 10 phút sau khi bật nguồn.
- Nếu xảy ra sự cố mất điện trong quá trình vận hành, máy sẽ vẫn ở trạng thái tắt sau khi có điện trở lại.

Kết nối với Ứng dụng Xiaomi Home



Quét mã QR để tải xuống và cài đặt ứng dụng. Bạn sẽ được chuyển hướng đến trang thiết lập kết nối nếu ứng dụng đã được cài đặt. Hoặc tìm kiếm "Xiaomi Home" trong cửa hàng ứng dụng để tải xuống và cài đặt ứng dụng. Mở ứng dụng Xiaomi Home, nhấn "+" ở góc trên cùng bên phải, và sau đó làm theo lời nhắc để thêm thiết bị của bạn.



889E74DF

Lưu ý: Phiên bản ứng dụng có thể đã được cập nhật, vui lòng làm theo các hướng dẫn trên phiên bản ứng dụng hiện tại.
Nếu có bất kỳ thay đổi nào về cấu trúc hoặc dữ liệu của sản phẩm này, chúng tôi có quyền thực hiện các thay đổi mà không cần thông báo trước.

Chương trình Kiểm tra Hiệu quả Năng lượng

Bình thường + Nước mức 8 mặc định, Thời gian: 62 phút

Thông số kỹ thuật

Model	TW130MJA08VN
Kích thước sản phẩm	596 × 580 × 925 mm
Trọng lượng tịnh	39 kg
Tổng trọng lượng	44 kg
Công suất định mức	13 kg
Điện áp định mức/Tần số định mức	220-240 V~ /50 Hz
Áp suất nước hoạt động	0,05–0,8 MPa
Tiêu chuẩn IP	IPX4
Khối lượng giặt định mức	650 W

Dịch vụ khách hàng

Địa chỉ email dịch vụ toàn cầu của Xiaomi: support.global@support.mi.com

Trang web dịch vụ: <https://www.mi.com/global/support/contact/>

	Dải tần số	Công suất phát (Tối đa)
Mạng không dây	2412–2472 MHz	20 dBm
Bluetooth	2402–2480 MHz	10 dBm

Thông tin bao bì

Vật liệu bao bì sản phẩm được sản xuất từ vật liệu có thể tái chế theo quy định của Luật Môi trường Quốc gia của chúng tôi. Không được vứt bỏ bao bì cùng với rác thải sinh hoạt hoặc các loại rác khác. Hãy mang đến các điểm thu gom vật liệu bao bì do chính quyền địa phương chỉ định.

KHUYẾN CÁO HẠN CHẾ SỬ DỤNG:

1. Nguyên tắc Tiếp xúc An toàn (Quan trọng nhất cho sức khỏe)

- Hạn chế tiếp xúc trực tiếp: Tránh tiếp xúc lâu dài với da, mắt, miệng và các vết thương hở.
- Vệ sinh cá nhân: Luôn rửa tay sạch bằng xà phòng sau khi tháo lắp, sửa chữa hoặc tiếp xúc trực tiếp với các linh kiện bên trong thiết bị.

2. Bảo vệ Đối tượng Nhạy cảm

- Trẻ em: Không để trẻ em dưới 12 tuổi sử dụng hoặc chơi với thiết bị điện tử/phụ kiện mà không có sự giám sát (đặc biệt là nguy cơ ngậm, cắn dây cáp hoặc nuốt linh kiện nhỏ).
- Phụ nữ mang thai & Người có bệnh nền: Hạn chế tiếp xúc lâu với các sản phẩm có mùi nhựa lạ hoặc nguy cơ rò rỉ hóa chất cao.

3. Kiểm soát Biến đổi Vật lý & Hóa học

- Tránh nhiệt độ cực đoan: Không để sản phẩm gần nguồn nhiệt cao, lửa hoặc môi trường ẩm ướt (nhằm ngăn chặn việc phát tán hơi hóa chất hoặc rò rỉ chất điện giải).
- Không tự ý tháo rời: Tuyệt đối không tự ý cạy phá pin, ổ quy hoặc bo mạch khi không có chuyên môn để tránh giải phóng trực tiếp các kim loại nặng.

4. Trách nhiệm "Vòng đời cuối" (Bảo vệ môi trường)

- Phân loại rác thải đặc thù: Tuyệt đối không vứt sản phẩm điện tử, pin, phụ kiện nhựa vào thùng rác sinh hoạt chung.
- Tái chế đúng quy định: Chuyển giao sản phẩm hỏng/hết hạn cho các điểm thu gom rác thải điện tử hoặc trung tâm bảo hành để được xử lý hóa chất theo đúng quy trình.

STT	Tên Hóa chất nguy hiểm	Yêu cầu giới hạn cho phép	Kết quả kiểm nghiệm cuối cùng
1	Cadmium	100mg/kg (0.01%)	Thấp hơn ngưỡng giới hạn cho phép hoặc tuân thủ các yêu cầu RoHS
2	Chromium (VI) compounds	1000mg/kg (0.1%)	Thấp hơn ngưỡng giới hạn cho phép hoặc tuân thủ các yêu cầu RoHS
3	Lead	1000mg/kg (0.1%)	Thấp hơn ngưỡng giới hạn cho phép hoặc tuân thủ các yêu cầu RoHS

Nhà sản xuất: SKYWORTH ELECTRIC CO., LTD.

Địa chỉ: No.96, New Energy Ave, Skyworth (Nanjing) Electric Industrial Park, Lishui Economic Development Zone, Nanjing City, Jiangsu, P.R. China

Nhà nhập khẩu: CÔNG TY TNHH XIAOMI VIỆT NAM

Địa chỉ: Tầng 16, Tòa nhà Riverfront Financial Centre, số 3A-3B Tôn Đức Thắng, phường Sài Gòn, thành phố Hồ Chí Minh, Việt Nam

Để biết thêm thông tin, vui lòng truy cập www.mi.com





Mijia Washing Machine User Manual

Read this manual carefully before use, and retain it for future reference.

Applicable Model:

TW130MJA08VN

Table of Contents

Safety Instructions	18
Product Overview.....	20
How to Install	21
How to Use	24
Care & Maintenance	28
Troubleshooting	30
Connecting with the Xiaomi Home App.....	32
Specifications.....	32
Customer Service	33

Safety Instructions

Carefully read the "Safety Instructions" section before use, and exercise caution based on common sense. Our company shall not be liable for any losses caused by improper use.

First-time use:

- Make sure the appliance is not damaged during transportation.
- Remove all packaging and keep it out of children's reach.
- The appliance is very heavy. It is recommended that at least two people carry it together.

WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Daily use:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Do not let children or pets come close to the appliance when the lid is open.
- Keep all washing detergents, softener and bleach away from children.
- Remove all objects from pockets such as lighters and matches.
- Before loading laundry into the washing machine, ensure the zippers are fastened and drawstrings secured, and take care with small clothing parts to prevent entanglement or damage during the wash cycle. Use a laundry bag if needed.
- Do not operate the machine barefoot, and keep your hands and feet dry.
- Do not cover or encase the appliance during operation or afterwards to allow any moisture or dampness to evaporate.
- Do not place heavy objects or electromagnetic heating appliances or damp items such as microwave ovens, induction cookers, electric hair dryers, electric irons, and ovens on the machine.
- Do not use any flammable sprays in close vicinity to the appliance.
- Do not wash any garments treated with solvents in the appliance without having dried them previously in the air.
- When plugging or unplugging, make sure there are no flammable materials in the surrounding area.
- Do not use hot water to wash foam rubber or spongy materials.
- Do not reach into the drum while the machine is running to avoid arm injuries.
- Do not touch or remove the power plug with wet hands to prevent electric shock. Never unplug the appliance by pulling on the power cord. Always grip the power plug firmly and pull it straight from the socket.

Caution:

- Do not connect to the hot water supply.
- Do not install the washing machine in an outdoor or damp environment to avoid risks of electric shock or fire.
- Do not wash clothes soiled with gasoline, petroleum, benzene, thinner, alcohol, or other chemicals.
- After each wash cycle ends, turn off the water tap and unplug the appliance to ensure the washing machine is disconnected from water and electricity.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

- Add an appropriate amount of low-suds detergent based on the load size and selected water level to ensure effective washing and prevent foam overflow.
- For large loads, please moderate detergent use, and dissolve and dilute detergent in warm water beforehand to prevent detergent residue from damaging fabrics.
- When delay is set, dissolve and dilute detergent in warm water before adding it to the drum to prevent fabric damage from prolonged detergent contact.


Installation:

- For appliances with ventilation openings in the base, a carpet must not obstruct the openings.
- Place the appliance in a well-ventilated area, and make sure there is enough space to open its lid.
- Do not install the appliance in a damp outdoor environment or areas that may be prone to water leakage, such as under or near a sink. If water leakage occurs, turn off the power supply and allow the washing machine to dry naturally.
- Do not place the appliance directly on a carpet, or close to a wall or furniture.
- Do not install the appliance in direct sunlight or near heat sources (such as stoves and heaters).
- Make sure the power supply matches the electrical information on the nameplate.
- Do not use an extension cord or double adapter.
- Make sure only the power cord and the water inlet hose provided with the appliance are used.
- Make sure the power cord and plug are not damaged.
- The appliance must be grounded before use. Make sure the appliance is plugged into a dedicated, grounded outlet.

Safety precautions:



- If cleaning and maintaining are performed by children, make sure they are supervised by a guardian.
- Before any daily maintenance, unplug the appliance.
- Leave the lid open when the machine is not in use to prevent unpleasant odors.
- Do not use water spray or steam to clean the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not disassemble, repair, or modify the washing machine yourself. Contact the after-sales service team for repairs, and use only the original parts.
- Keep the machine away from metal objects, chemicals, fragile items, and ignition sources such as lit candles and lit cigarettes.
- Connect the water tap with the provided new inlet hose and regularly check for swelling, twisting, cracks, wear, or leaks. Replace if necessary. Do not reuse old hose components.
- If there is dirt on the power plug, wipe it clean before use. Regularly clean the plug to prevent poor contact.
- Clean the machine's housing and rubber parts with a soft cloth and a non-corrosive, solvent-free liquid.

Product Overview

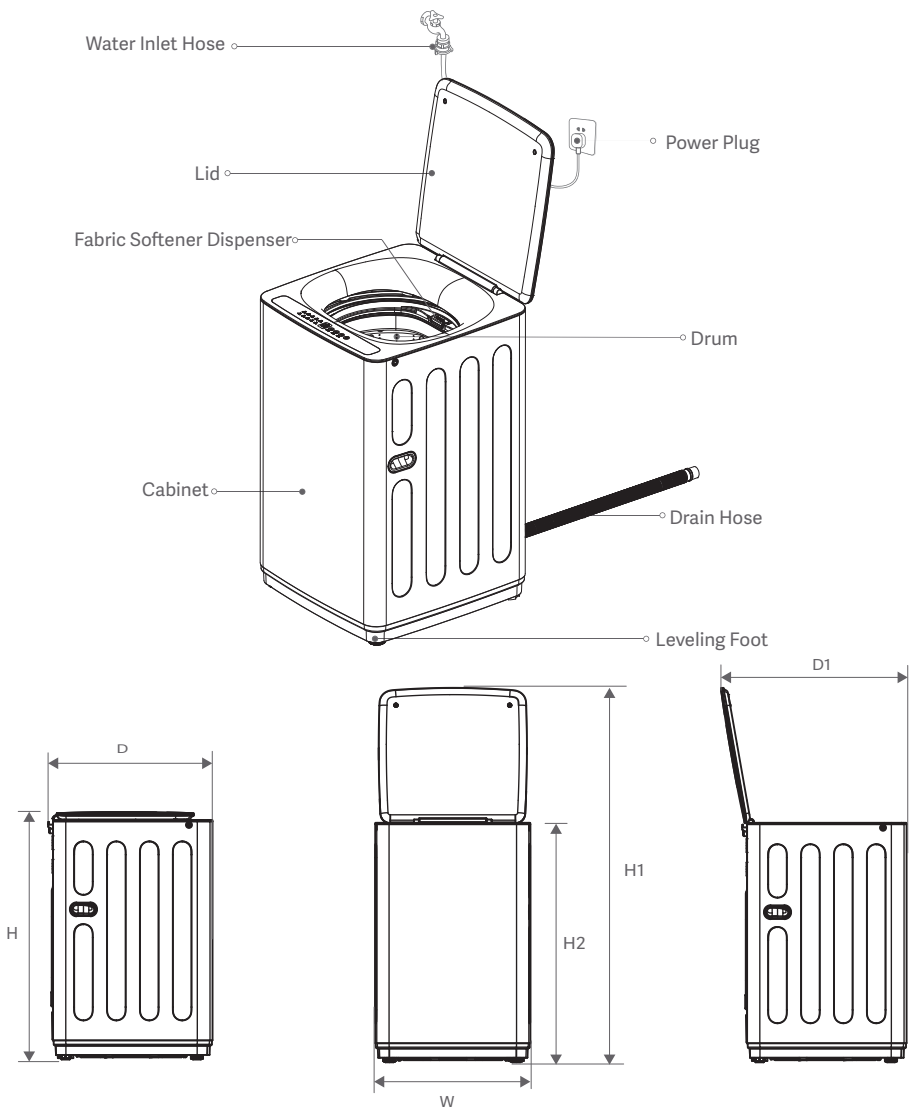

Product dimensions	W	580 mm	D1	694 mm
	D	596 mm	H1	1399 mm
	H	925 mm	H2	895 mm

Accessory List

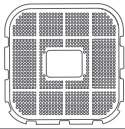
			
Base Plate ×1	Water Inlet Hose×1	Screw×2	User Manual×1

- After unpacking, check whether all the accessories listed above are included. If the appliance is damaged during transportation or any accessories are missing, contact the after-sales service team immediately.
- The base plate is positioned on top of the foam pad on the machine's lid.
- Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.
- The appliance is tested before leaving the factory, and a small amount of residual water is normal.



How to Install

Installing the Base Plate

Please install and adjust the washing machine according to the instructions in this manual to ensure proper and safe operation.

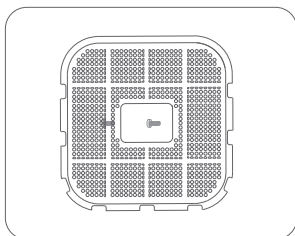

- 1 Remove the base plate from the foam lid and the 2 screws from the package.

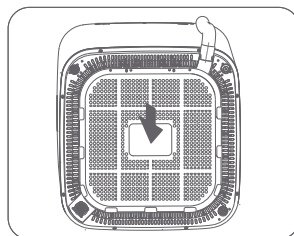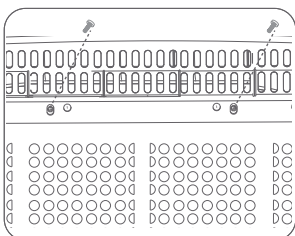



- 2 Tilt the back of the washing machine slightly forward, and insert the base cover with the convex side facing outward into the base slot in the direction of the arrow.

- 3 Once the base plate is fully inserted, its screw holes will be aligned with those on the base. Fix the screws into the holes using a screwdriver.



Adjusting the Leveling Feet

The washing machine should be placed at least 50 mm away from the wall. The maximum allowed inclination of the supporting surface is 1° . An uneven or sloped floor may cause unstable operation or mid-cycle stoppage. Adjust as follows:

1. Ensure the washing machine is placed on a flat and level surface.

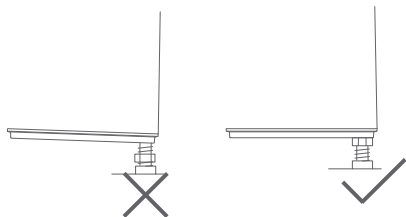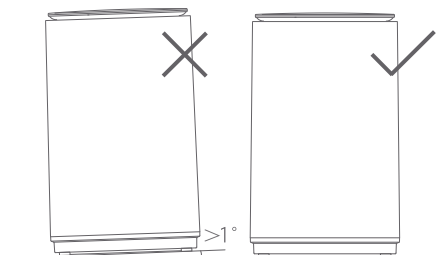

2. 1. Slightly lift the side of the washing machine that has levelling feet, loosen the nuts, and turn the levelling feet.
2. Once the adjustment is complete, tighten the nuts.

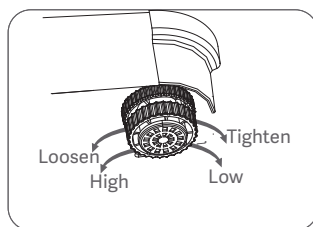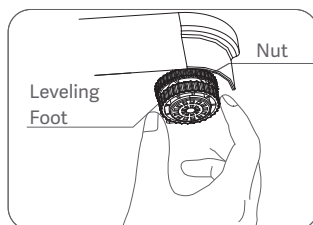

* Note: The levelling feet shown are for illustration purposes only; refer to the actual product for the exact structure.

Connecting the Water Inlet Hose

Before connecting the water inlet hose to the water tap, check the hose fitting type and follow the instructions for that hose fitting.

Notes for connection


- Water supply pressure must be between 0.05 MPa and 0.8 MPa (0.5 - 8.0 kgf/cm²). If the water supply pressure is more than 0.8 MPa, a pressure reducing device should be installed.
- Do not overtighten the water inlet hose when connecting it to the valve.
- Periodically check the condition of the hose and replace the hose if necessary.

Checking the rubber seals


Two rubber seals ① are supplied with the water inlet hoses to prevent leaks, provided the connections to the taps are properly tightened.

Notes:


- Do not overtighten connections.
- Do not use mechanical devices such as multi-grips to tighten the inlet hoses. Ensure that the curved end of the water inlet hose is connected to the appliance.

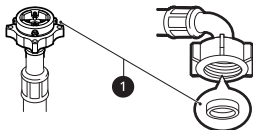


Connecting the hose to the water tap

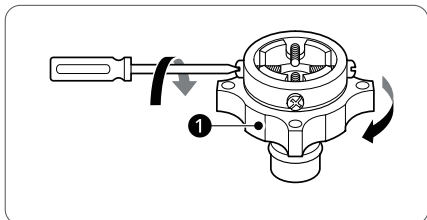


1. Unscrew the adapter ring plate ① and loosen the 4 fixing screws.

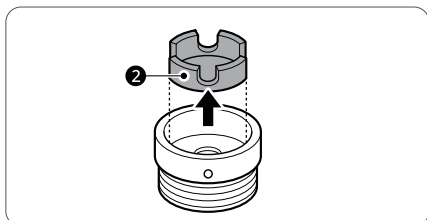

2. Remove the guide plate ② if the tap is too large to fit the adapter.

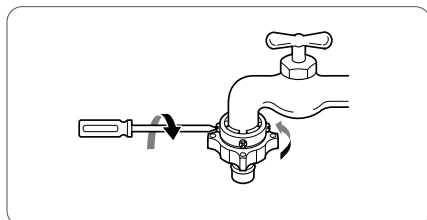

3. Push the adapter onto the end of the tap so that the rubber seal is connected to be watertight. Tighten the 4 fixing screws and the adapter ring plate.

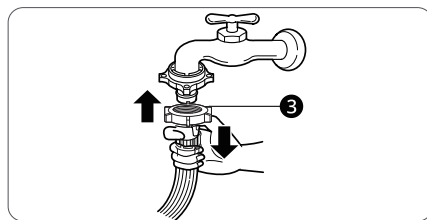


4. Pull the connector latch plate ③ down, push the inlet hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

Note:

- After connecting the water inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting the hose to the appliance

Screw the water inlet hose to the water inlet valve on the back of the appliance.

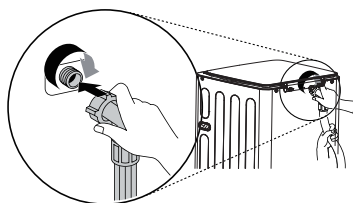


Notes:

- After completing the connections, check for leaks and tighten or reassemble the connections if needed.
- On models with only one water inlet, do not connect the hose to the hot water supply.
- Connect to the cold water supply only.

How to Use

Functions and Operations

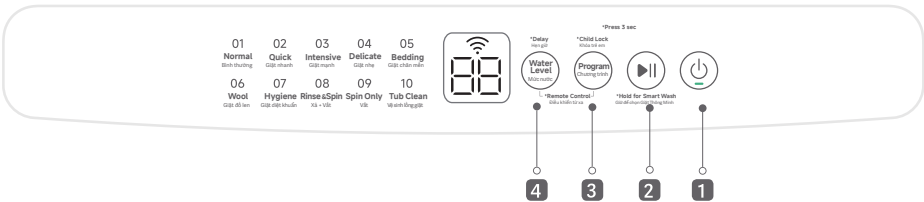

Button instructions

1

Press this button to turn the washing machine on/off.

2 Start/Pause

Press this button to start/pause a wash program.

3 Program

While the washing machine is on, press this button to select a wash program.

4 Water Level

- Use this button to adjust the water level setting.
- Press the button once and the display will show the current water level; press again shortly to adjust. If no adjustment is made within 3 seconds, the display will switch to the remaining time or delay time.

Additional functions

Hold for Smart Wash

While the washing machine is off, press and hold the start/pause button to start the Smart Wash program.

Remote control

1. While the washing machine is on, press and hold the start/pause button to enable/disable wireless network.

Note: A lit wireless network icon  indicates that the washing machine is successfully connected to the Internet, enabling remote control and status check via the Xiaomi Home app. A slowly blinking wireless network icon indicates that the washing machine is waiting for network configuration. A quickly blinking wireless network icon indicates a network configuration error, and a reset is necessary.

2. With the wireless network indicator  lit, press the water level and program buttons simultaneously to enable or disable remote control. "AP" appears on the display when remote control is enabled and disappears when it is disabled.

Child Lock

- While the machine is running, press and hold the program button for 3 seconds to activate child lock, and hold again for 3 seconds to deactivate it. After activation, the display alternates between "CL" and remaining or delay time, each for 3 seconds.
- When child lock is on, only the  and program buttons are operable.

Delay

- While the machine is on, press and hold the water level button for 3 seconds before pressing the start/pause button to enter delay setting. The display shows the delay hours. Press the water level button to set the delay time, up to 24 hours.
- Once delay is set, the delay time remains illuminated, and only the  and start/pause buttons are operable.
- Delay display: The display shows the delay time counting down by the hour.
- Cancelling delay: Press the  button to cancel delay and turn off the washing machine.
- Program start time with delay: The program will start 5 minutes earlier than the calculated start time, which is your preset end time minus the maximum program runtime.
- Delay cannot be set once a program has started.

Note:

There might be a slight odor when the new machine is used for the first time, which is normal. It is recommended to run an empty cycle to clean the drum.

Resetting Fuzzy Logic Control

After some use, fuzzy water level detection may become inaccurate. Reset to factory settings as follows:

1. Make sure the drum is empty, run a spin cycle for over 30 seconds, then turn off the machine.
2. While the machine is off, press and hold the program and start/pause buttons and release when the display shows "t3". The machine will run automatically while displaying changing numbers, indicating it is in the fuzzy logic self-learning mode. The machine will shut down after about 12 seconds, completing the reset.
3. Do not manually stop or unplug the machine before automatic shutdown, or self-learning will not complete.
4. This self-learning process can be repeated, but the machine only saves the last setting.

Program Overview

Programs (in panel)	Max. washing capacity	Function description
Normal	13 kg	For washing mixed loads of cotton, linen, and synthetic fabrics for daily wear.
Quick	4 kg	For thin, lightly soiled fabrics.
Intensive	7 kg	For thick, heavily soiled fabrics.
Delicate	5 kg	For lightly soiled and delicate synthetic fabrics (e.g., undergarments, silk, and knits).
Bedding	6 kg	For bedding items made of cotton, linen, and blended fabrics.
Wool	1 kg	For machine-washable wool fabrics.
Hygiene	7 kg	Uses extended washing and multiple rinses to remove dust mites from fabrics. Exercise caution when using this program for synthetics and colored fabrics.
Rinse & Spin	13 kg	Performs an extra rinse and spin cycle to further clean the laundry.
Spin Only	13 kg	Spins to remove excess water.
Tub Clean	—	A dedicated cycle for cleaning the drum. Do not load any laundry. It is recommended to use bleach or drum cleaner for better results. Run the program regularly.

Programs (in app)	Max. washing capacity	Function description
Headscarf	6 kg	For washing cotton or synthetic fiber headscarves.
Curtains	6 kg	For machine-washable curtains made of synthetic fibers.
Sofa Covers	6 kg	For machine-washable sofa covers. Turn the covers inside out and remove all decorations before washing.
Summer Quilts	3 kg	For lightweight, machine-washable summer quilts made of synthetic fibers.
Heavy Wash	8 kg	For large household textiles.

Notes:

- Program descriptions and parameters are based on the initial model and are for reference only. Actual programs and parameters may vary due to product updates.
- The list above may not include all app programs. New programs may be introduced in the future.

Function icons (in app)	Function description
Soak	This function allows the detergent to fully penetrate the fabrics, removing stains more effectively.
Scent+	This function can better retain the fragrance of the fabric softener.

Load size guides


Water volume	Load weight	Recommended number of items
Level 1-2	2 kg	9 shirts or T-shirts; or 3 pairs of jeans.
Level 3-4	4 kg	18 shirts or T-shirts; 7 pairs of jeans; or 2 bedding sets.
Level 5-6	6 kg	27 shirts or T-shirts; 10 pairs of jeans; or 3 bedding sets.
Level 7-8	8 kg	36 shirts or T-shirts; 13 pairs of jeans; or 4 bedding sets.

Notes:


- Please adjust detergent amount based on load and detergent instructions.
- The above recommendations are for reference only. Actual capacity may vary depending on fabric type, thickness, and other factors.

How to Use Fabric Softener


Add fabric softener before washing based on the weight of the laundry, following product instructions (the softener will be automatically dispensed during the final rinse).

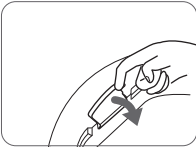

- 1** Open the fabric softener dispenser lid with your finger.

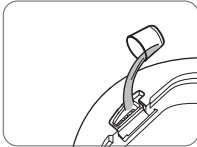


- 2** Add fabric softener.

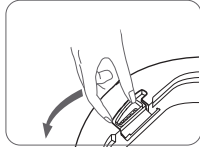

- 3** Close the dispenser lid. Leaving it open during a cycle may cause water to enter and lead to softener overflow.

Notes:


- Dilute fabric softener with water. Undiluted fabric softener may result in spots that look like oil stain.
- Do not overfill. The dispenser holds max 30 mL. Never add more than 30 mL. Overfilling can cause early dispensing of the fabric softener, which could result in stained clothes. A cup with a pouring spout will help you avoid spilling.
- Do not mix with detergent or bleach.
- Never pour fabric softener directly on clothes. It may stain them.
- If the dispenser opening is difficult to access, manually rotate the drum clockwise. Turning it counterclockwise may feel difficult, while turning it clockwise will allow for easier adjustment.
- Do not add fabric softener after the washing cycle has started. Delayed addition will reduce its effectiveness.
- After adding fabric softener, do not leave it in the dispenser for more than 12 hours, as it may cause the softener to solidify.
- The fabric softener function does not work with the following programs: Quick, Rinse & Spin, Spin Only, and Tub Clean.

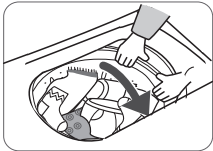


Care & Maintenance

Cleaning the Appliance's Exterior


Keeping the washing machine clean improves its performance, avoids unnecessary repairs, and prolongs its service life.

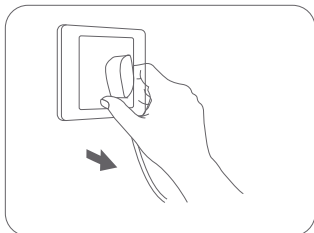

- 1 Unplug the washing machine before cleaning it.

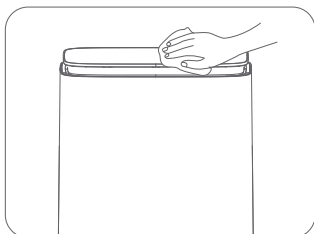

- 2 Clean the machine's housing and control panel with a soft cloth and a non-abrasive, non-corrosive household cleaner.

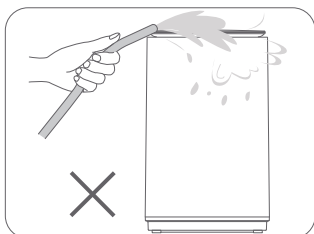


- 3 Do not rinse the machine's housing to avoid damage. Do not place the washing machine in damp areas, splash water on it, or place wet clothes on the lid.


Note: Images are for reference only; actual product may vary.

Clean the Lint Collector


Clean the lint collector after each use.

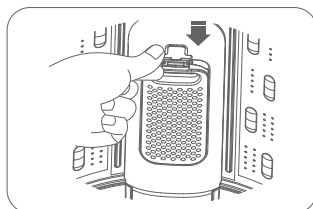


- 1 Press the latch downward and pull out the lint collector.

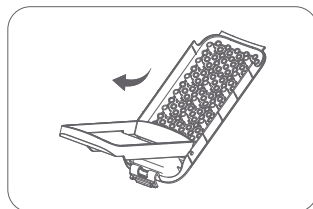

- 2 Open the lint collector, flip out the filter, remove debris, and rinse with water.

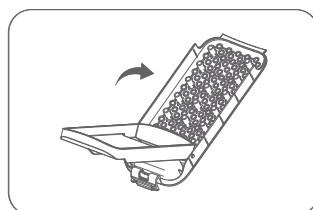


- 3 Flip the filter back to its original position. If there is lint on the inner drum wall, clean it along with the filter to avoid staining future loads.

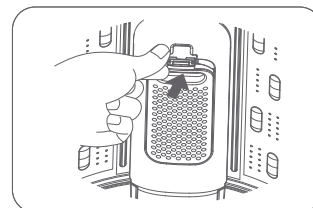


- 4 When reinstalling the lint collector, make sure not to pinch the filter and ensure the lint collector is properly installed.

Cleaning the Inlet Filter


After prolonged use, the inlet filter may become clogged with debris. Clean as follows:

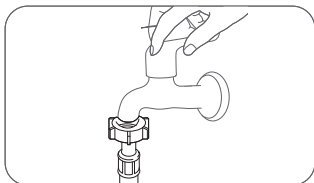


- 1 Turn off the water tap and connect the power. Start the machine and run for 5 seconds (to allow water in the inlet hose to flow into the drum), then disconnect the power.

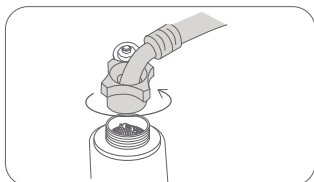

- 2 Loosen and remove the inlet hose from the back of the washing machine. Cover the opening with a cloth to prevent spraying.

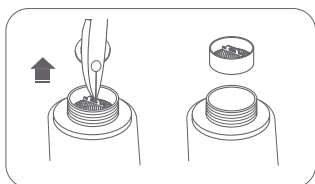


- 3 Pull out the filter cover from the water inlet valve hole with nipper pliers and clean it thoroughly.

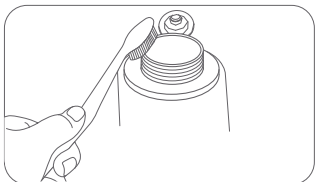


- 4 Clean the inside and outside of the threaded connector with a brush. Reinstall the inlet valve filter cap. Turn on the water tap and check for leaks at the connections.

Handling Freezing in the Washing Machine


Freezing may occur if the washing machine is placed in an environment below 0°C. If freezing occurs, resolve the issue as follows:

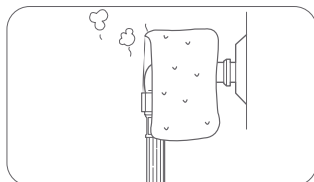


- 1 Wrap the water tap with a towel soaked in warm water, then run warm water over the tap to thaw it.

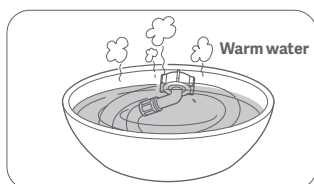

- 2 Remove the inlet hose and soak it in warm water.

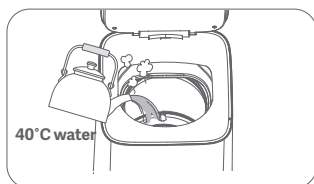

- 3 Pour 40°C water into the drum until the agitator is submerged. Wait a while until the agitator can be manually rotated, then the machine is ready for use.

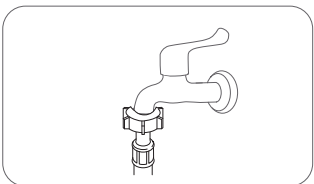

- 4 Reconnect the inlet hose to the water tap and verify that both water intake and drainage are working properly. Ensure the ambient temperature is above 0°C when using the washing machine again.

Troubleshooting

The situations listed below may not be faults. Please double-check before requesting a repair service.

Issues	Possible causes	Solutions
- Indicator light does not illuminate. - The washing machine does not operate.	- The power plug is not properly inserted. - The power outlet has no electricity. - The power switch is not turned on.	- Insert the power plug properly. - Check the power outlet or try a different one. - Turn the power switch on.
Inlet hose is leaking.	- The hose is not properly connected to the water tap or washing machine. - Reinstall the hose, ensuring the fittings are tightened securely.	Reinstall the hose, ensuring the fittings are tightened securely.
No draining	- The drain hose outlet is positioned too high or not laid down. - The hose is bent, twisted, or clogged.	- Lower the drain hose outlet. - Straighten and unclog the hose.
No water intake	- The water tap is not turned on. - The inlet filter is clogged.	- Turn on the water tap. - Clean the inlet filter as instructed in the "Cleaning the Inlet Filter" section.
Spinning stops and water enters during the spin cycle.	- Unbalanced load. - The washing machine is not level.	- The machine will automatically rebalance and resume spinning once it reaches the rinsing phase. - Adjust the levelling feet.
No spinning	- The lid was not closed after drainage. - The lid was opened after spinning began.	Close the lid and press the start/pause button again.
Spinning starts and stops intermittently during the spin cycle.	This is done to optimize spin performance.	This is generally considered normal.
A small amount of water drains out during initial use.	This is residual water from performance testing conducted before the machine left the factory.	This is generally considered normal.

• Note: If the issue persists, unplug the power cord and contact after-sales service. Do not repair it by yourself.

Error Code Description

Error codes	Code description	Solutions
E1	Drainage timeout	Open the lid, perform the “No draining” troubleshooting step, then close the lid to clear the alarm.
E2	Lid opened during operation	Close the lid and press the start/pause button to clear the alarm and resume operation.
E3	Spin unbalance	Open the lid, redistribute load evenly, then close the lid to clear the alarm and resume spinning.
E4	Water fill timeout	Open the lid, perform the “No water intake” troubleshooting step, then close the lid to clear the alarm.
E5	Lid opened during operation with child lock activated	Close the lid to clear the alarm, and press the start/pause button to resume operation.
F1	Water level error	Power was manually cut off. Contact after-sales service.

Note: If the issue persists after checking all the above, disconnect the power and contact the after-sales service team.

Notes:

- Unbalance adjustment: Unevenly placed laundry can cause vibration during spin. The machine is equipped with an operational unbalance adjustment system, which monitors the machine's status during operation using a displacement amplitude detection system. If excessive vibration is detected, the machine will automatically initiate a rebalancing process to redistribute the laundry, which may increase cycle time and the number of rinse cycles.
- Auto power-off: The machine will automatically shut off if no program is started within 10 minutes of powering on.
- If a power failure occurs during operation, the machine will remain in off state after power is restored.

Connecting with the Xiaomi Home App



Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Xiaomi Home" in the app store to download and install it.
Open the Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.



889E74DF

Note: The version of the app might have been updated, please follow the instructions based on the current app version.
If there are any structural or data changes to this product, we reserve the right to make changes without prior notice.

Energy Efficiency Test Program

Normal + Water Level 8 (default), Time: 62 min

Specifications

Model	TW130M.JA08VN
Item Dimensions	596×580×925 mm
Net Weight	39 kg
Gross Weight	44 kg
Rated Capacity	13 kg
Rated Voltage/Rated Frequency	220-240 V~ /50 Hz
Operating Water Pressure	0.05-0.8 MPa
IP Rated	IPX4
Rated Input Power	650 W

Customer Service

Xiaomi Global Service Email Address: support.global@support.mi.com
Service website: <https://www.mi.com/global/support/contact/>

	Frequency range	Transmitter power (Max)
Wireless network	2412-2472 MHz	20 dBm
Bluetooth	2402-2480 MHz	10 dBm

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

RECOMMENDED RESTRICTED USE:

1.Safe Contact Principle (Most Important for Health)

- Restrict direct contact: Avoid prolonged contact with skin, eyes, mouth and open wounds.
- Personal hygiene: Always wash hands thoroughly with soap after disassembling, repairing or directly touching internal components of the device.

2. Protect Vulnerable Groups

- Children: Do not allow children under 12 years old to use or play with electronic devices/accessories without supervision (especially risk of swallowing, tangling in cords or ingesting small components).
- Pregnant women & People with underlying diseases: Restrict prolonged contact with products that have a strong plastic smell or high risk of chemical leakage.

3. Control Physical & Chemical Changes

- Avoid extreme temperatures: Do not place the product near high heat sources, open flames or damp environments (to prevent the emission of chemical fumes or leakage of electrolytes).
- Do not disassemble without authorization: Never arbitrarily break the battery, solder or circuit board without professional expertise, to avoid direct release of heavy metals.

4. "End-of-Life Cycle" Responsibility (Environmental Protection)

- Special waste sorting: Never dispose of electronic products, batteries or plastic accessories into general household waste bins.
- Correct recycling: Hand over defective/expired products to electronic waste collection points or service centers for proper chemical treatment in accordance with procedures.

No.	Hazardous Chemical Name	Permitted limit requirements	Final test results
1	Cadmium	100mg/kg (0.01%)	BL or comply with RoHS requirements
2	Chromium (VI) compounds	1000mg/kg (0.1%)	BL or comply with RoHS requirements
3	Lead	1000mg/kg (0.1%)	BL or comply with RoHS requirements

Factory: SKYWORTH ELECTRIC CO., LTD.

Address: No.96, New Energy Ave, Skyworth (Nanjing) Electric Industrial Park, Lishui Economic Development Zone, Nanjing City, Jiangsu, P.R. China

Vietnam

Importer: XIAOMI VIETNAM COMPANY LIMITED

Address: 16th Floor, Riverfront Financial Center Building, 3A-3B Ton Duc Thang, Saigon Ward, Ho Chi Minh City, Vietnam

For further information, please go to www.mi.com

