

USER MANUAL

RANGER TT i-Size



Joyful Kids · Joyful Trip

 www.jovikids.com

 [@jovikids_global](https://www.instagram.com/jovikids_global)

 service@jovikids.com

Model WDCS001

All rights reserved @2024 JOVIKIDS. JOVIKIDS and all associated logos are trademarks.
All product specifications are correct at time of print.
JOVIKIDS reserves the right to change anything at any time without prior notice.
Color representation is as close as processes allow.

Approx.
0Y-12Y

40-150cm





EN Scan for user manual

DE Scan für Benutzerhandbuch

FR Scannez pour le manuel d'utilisation

IT Scansiona per il manuale utente

ES Escanear para el manual del usuario

JP QRコードをスキャンして説明書を表示します

AR بحث عن كتاب المستخدم

RU сканируйте для руководства пользователя

•

•

•

CONTENTS

Content	1
Introduction	2
Important Information	3-4
Know Your Car Seat	5-6
Car Seat Version	7
Suitability	8
Use in the Vehicle	9-10
Securing Your Baby	11-13
Using Baby Insert	11
Harness & Headrest Adjustment	12
Change the Reclining Positions	13
Installation in the Vehicle	14-26
Installation Instruction for Stature 40-105cm, Rearward Facing, ISOFIX + Top Tether + Harness	14-18
Installation Instruction for Stature 76-105cm, Forward Facing, ISOFIX + Top Tether + Harness	18-23
Installation Instruction for Stature 100-150cm, Forward Facing, ISOFIX Attachment + 3-Point-Belt	23-24
Installation Instruction for stature 100-150cm, Forward Facing, 3-Point-Belt	25-26
Care Instructions	27-28
Cleaning	27
Security Checking	27
Warranty	28

INTRODUCTION

Dear Parents,

Thank you for choosing our car seat for your child's safety and comfort.

To ensure the best experience, please adjust the seat to fit your child properly and read the manual carefully. Studies show that many car seats are installed incorrectly, so it is crucial that you take the time to read the instructions. Our product is designed for maximum safety when used as directed. Our team is constantly updating our knowledge to keep your child's safety. If you have any questions, please reach out to us through our website. We're here to help.

Thank you for trusting us with your child's safety.



IMPORTANT INFORMATION

Direction of Seat:

- Do not use the seat in a forward-facing position before the child's age exceeds 15 months. (See detailed instructions for reference).

Placement of ECRS Components:

- Ensure the rigid and plastic parts of the Enhanced Child Restraint System (ECRS) are properly positioned and installed. They should not be at risk of getting trapped by a movable seat or a vehicle door during everyday using.

Strap Adjustments:

- Straps securing the restraint to the vehicle must be tight.
- Straps or impact shields designed to restrain the child must fit snugly against the child's body.
- Ensure that straps are not twisted.

Lap Strap Position:

- The lap strap should be positioned low on the child's hip.

After an Accident:

- Replace the ECRS if it undergoes significant stress, like from an accident.

Alterations:


- It's hazardous to make any changes or additions to the device without approval from the Type Approval Authority. Strictly follow the installation instructions provided by the child restraint manufacturer.

Supervision:


- Never leave children unattended in their ECRS.
- Ensure all luggage and objects that might become projectiles in a collision are securely fastened.
- The Enhanced Child Restraint System (ECRS) should always be used with its cover.
- Only replace the ECRS cover with one recommended by the manufacturer, as it's integral to the system's safety performance.

- For using an "i-Size ECRS," refer to your vehicle manufacturer's handbook.
- Please note: the child restraint might not fit all approved vehicles for children taller than 135cm.
- The child restraint might not be compatible with all approved vehicles at every angle of inclination.
- This revised version offers a clear and concise presentation of the instructions.

KNOW YOUR CAR SEAT

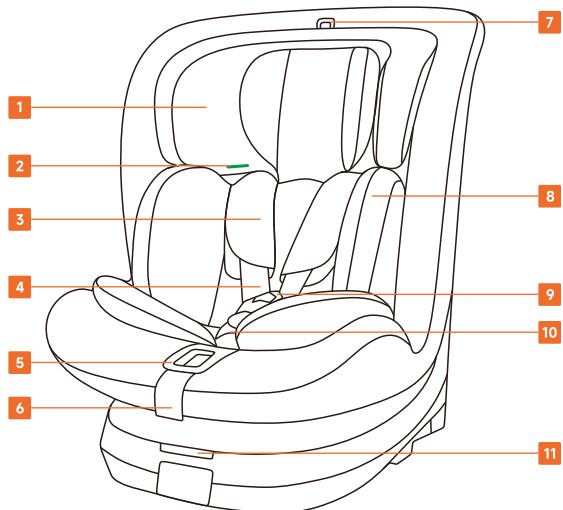

1. Headrest
2. Headrest Belt Guide
3. Shoulder Gelt Pads
4. Shoulder Strap
5. Harness Adjusting Button
6. Harness Adjusting Strap
7. Headrest Adjusting Loop
8. Inner Cushion
9. Harness Buckle
10. Buckle Pad
11. Rotation Button

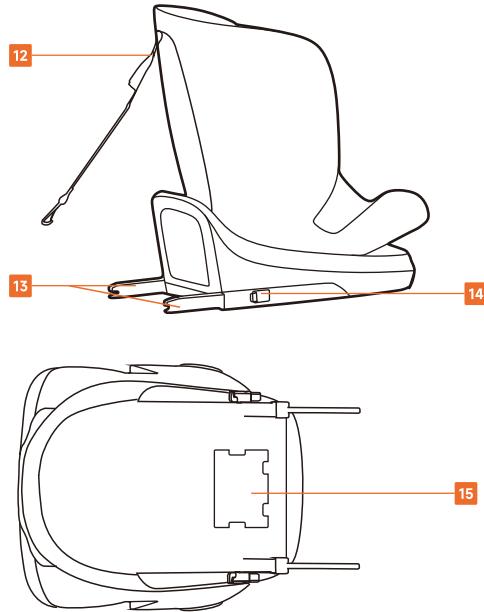

- 12 . Top Tether Strap
- 13 . ISOFIX Connector
- 14 . ISOFIX Release Button
- 15 . Instruction Storage

ISOFIX Guide

  Insert the ISOFIX Guides onto the car's anchors to attach the child seat securely

CAR SEAT VERSION

1. Product Description

Type	Stature	Facing Direction	Installation	Approval Type
WDCS001	40-105cm/≤18kg	Rearward	ISOFIX + Top Tether +Harness	i-Size
	76-105cm/≤18kg	Forward	ISOFIX +Top Tether +Harness	
	100-150cm	Forward	Vehicle 3-Point-Belt + ISOFIX Attachment	i-Size Booster Seat

SUITABILITY

2. Certification



...as a child safety seat installed in a vehicle

Child Safety Seat	Tested and certified according to ECE R129			
	Stature	Rearward	Forward	Forward
RANGER TT	40-105cm	76-105cm	100-150cm	

ECE= European Standard for Safety Equipment

The child safety seat has been designed, tested, and certified in accordance with the European Standard for Child Safety Equipment(ECE R129/03).

An "E" seal of approval (enclosed in a circle) along with the approval number can be found on the certification label, which is a sticker affixed to the child safety seat. Be aware that any modifications to the child safety seat will render this approval void. Only the original manufacturer is authorized to make any modifications to this seat.

USE IN THE VEHICLE

3. Use in The Vehicle


WARNING



Never use this child restraint system in seating positions equipped with an active air bag. An inflating frontal air bag can seriously injure or even cause the death of your child in the event of an accident. Please read the instructions thoroughly and store them safely for future reference. A compartment at the bottom of the child seat has been provided specifically for storing the instruction manual.



You Can Use Your Child Car Seat as Follows

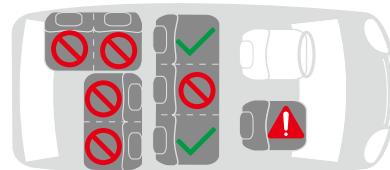

SECURING YOUR BABY

4. Securing Your Baby

4.1 Using Baby Insert


CAUTION

If your baby's stature is less than 75cm, please install the inner cushion on child seat. If your baby's stature is between 75cm and 150cm, Please take out the inner cushion from the child seat.



4.2 Harness System & Headrest Adjustment

Loosen the shoulder straps by pressing the harness adjusting button and pull the shoulder straps as far forward as possible.

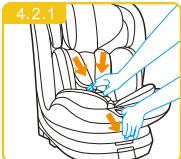

Pull the headrest adjusting loop to adjust the headrest upwards, pull the headrest adjusting loop and push the headrest back to slide the headrest downwards.



- To loose the shoulder straps, press the harness adjusting button and pull the shoulder straps forward.
- To adjust the headrest upwards, pull the headrest adjusting loop. To move the headrest downwards, pull the same loop while pushing the headrest back.

SECURING YOUR BABY

4.3 To Change the Reclining Positions

There are 5 recline positions of this product. To change the position, grasp the lever at the front of the seat, move the seat into the desired position until you hear an audible "click" sound.

Rearward Facing Adjustment

- For stature 40-105cm rearward facing position
- The rearward mounting seat angle has 5 gears adjustable.




Forward Facing Adjustment

- The reclining positions can be adjusted for forward facing using with stature 76-105cm.
- The reclining position 4 and 5 do not apply for all vehicles.





If the child is between 100 cm and 150 cm and is secured by a three point harness, it should only be used in an upright position. When the arrow label is aligned with the mounting label position(1), the seat is in an upright position.

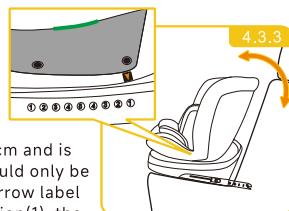

INSTALLATION IN THE VEHICLE


5.1 Installation Instruction for STATURE 40-105cm, Rearward Facing, ISOFIX + Top Tether + Harness

Press the ISOFIX release button to extend the ISOFIX connectors fully.

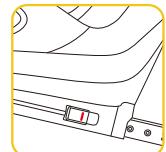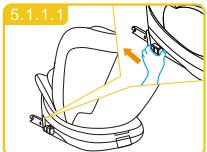

Caution: Only proceed to the next step once the ISOFIX has been fully extended and the red marks are visible.

Insert the ISOFIX connectors directly into the anchorages until you hear a distinct "click" sound.

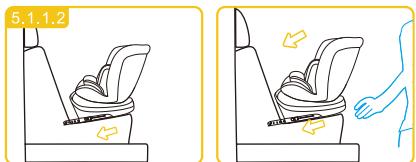


Grasp the main body of the seat to check its stability. Observe the ISOFIX red/green indicator while doing so. If the seat is unstable or the ISOFIX connectors come loose please repeat the steps and reinstall.




INSTALLATION IN THE VEHICLE

Pull out the top tether and press the tether strap release button to extend the strap until it is long enough to hook to the tether anchorage behind the seat.

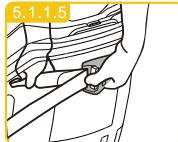

Hook the tether strap hook onto the anchorage point in the vehicle. There may be multiple anchorage points for the hook, please use the most suitable one.

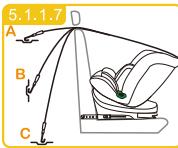


Note: The top tether strap should be installed on the side away from the door.

Pull the tether strap end back to tighten it.

CAUTION

If the top tether is tightened enough and properly, a green mark will turn up on the opposite end of the Strap release button. Please ensure you check this.

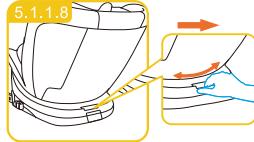

Rotate the seat to the sideward facing position by pressing the rotating button.

This will allow easy access for placing the child into the car seat.

CAUTION

Before every journey, ensure that the rotated seat is fully engaged. Do not drive unless the seat is in the forward or rearward facing position.


CAUTION

The seat can rotate a full 360° without any limitations.

Loosen the shoulder straps by pressing the harness adjusting button and pull the harness shoulder strap as far forward as possible.



Press the red button to open the buckle and spread the harness shoulder straps outwards to the sides of the child seat.

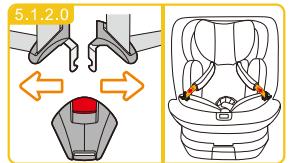

INSTALLATION IN THE VEHICLE

Place the child securely in the child seat.




Please note:

A correctly adjusted headrest ensures optimal protection for your child in the child seat. The headrest must be adjusted so that the harness shoulder straps are at the same level as the child's shoulders or slightly above.



Guide the two buckle inserts together and fasten into the buckle until you hear an audible sound.

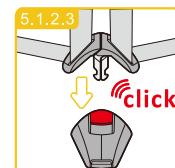

Tighten the harness adjusting strap and make sure the harness is reasonably tight. It should restrain but not make the child uncomfortable.



CAUTION


Please ensure that the lap strap is worn low down, so that the pelvis is firmly engaged. Pull on the strap until it lies flat and is close against your child's body. The straps should be correctly adjusted and ensure they are not twisted.

Press the rotation button to adjust the seat direction. Children with a height of 75cm or less must use the seat in a rear-facing position.



5.2 Installation Instruction for Stature 76-105cm, Forward Facing, ISOFIX + Top Tether + Harness

- Pull out the top tether and press the tether strap release button to extend the strap until it is long enough to hook to tether anchorage behind the seat.

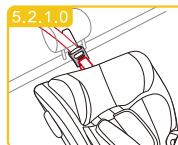

INSTALLATION IN THE VEHICLE

Hook the tether strap hook onto the anchorage point in the vehicle.

There may be multiple anchorage points for the hook, please use the most suitable one.

Note: The top tether strap should be installed on the side away from the door.


Pull the tether strap end back to tighten it.

CAUTION


If the top tether is tightened enough and properly, a green mark will turn up on the opposite end of the strap release button. Please ensure you check this.



Press the ISOFIX release button to extend the ISOFIX connectors fully.

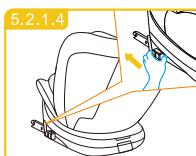


Caution: Only proceed to the next step when the ISOFIX has been fully extended with the red indicators showing.

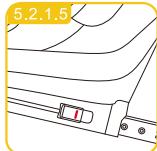


Insert the ISOFIX connectors directly into the anchorage point until you hear an audible "click" sound.



Hold the child seat to ensure it is securely fastened and doesn't shake. At the same time, observe the ISOFIX indicator, which should show green. If the seat is unstable or the ISOFIX connectors come loose, please repeat the installation steps.

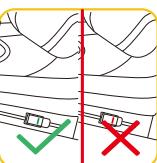

Press the rotation button to adjust the seat to a sideways-facing position. This allows for easier placement of a child in the seat unit once the car seat has been installed.

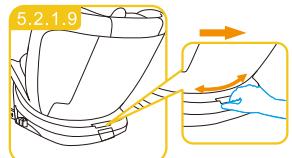

INSTALLATION IN THE VEHICLE

CAUTION

Before every journey, ensure that the rotated seat is fully engaged. Do not drive unless the seat is positioned to face either forward or rearward.


CAUTION

Do not drive unless the seat is in the forward or rearward facing position.

Loosen the shoulder straps by pressing the harness adjusting button and pull the harness shoulder strap as far forward as possible.



Press the red button to open the buckle and spread the harness shoulder straps outwards to the sides of the child seat.

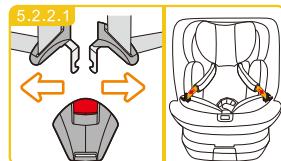

Place the child securely in the child seat.




Please note: A correctly adjusted headrest ensures optimal protection for your child in the child seat.

The headrest must be adjusted so that the harness shoulder straps are at the same level as the child's shoulders or slightly above.



Guide the two buckle inserts together and fasten into the buckle, until you hear an audible "click" sound.

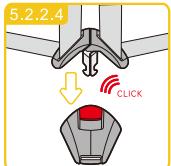

Tighten the harness adjusting strap and make sure the harness is reasonably tight. It should restrain but not make the child uncomfortable.



CAUTION

Please ensure that the lap strap is worn low down, so that the pelvis is firmly engaged. Pull on the strap until it lies flat and is close against your child's body. The straps should be correctly adjusted and ensure they are not twisted.


INSTALLATION IN THE VEHICLE

Press the rotation button to adjust the seat direction. Both forward and rearward facing position are suitable for child's stature 76-105cm.



5.3 Installation Instruction for Stature 100-150cm, Forward Facing, ISOFIX Attachment+Vehicle 3-Point-Belt

Remove the baby insert, loosen the shoulder straps by pressing the harness adjusting button and pull the harness shoulder strap as far forward as possible.

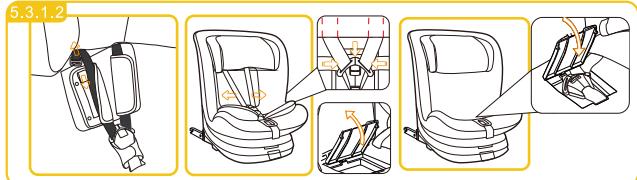


Remove the shoulder belt pads and place the shoulder strap behind the headrest cover, open the cover of buckle storage, then put it in the storage and close finally.

Press the ISOFIX release button to slide the ISOFIX connectors to the end.




Caution: Only proceed to the next step when the ISOFIX has been fully extended with the red indicators showing.

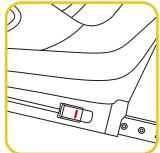

Insert the ISOFIX connectors directly into the anchorage point until you hear an audible "click" sound.



Hold the child seat to ensure it is securely fastened and doesn't shake. At the same time, observe the ISOFIX indicator, which should show green. If the seat is unstable or the ISOFIX connectors come loose, please repeat the installation steps.

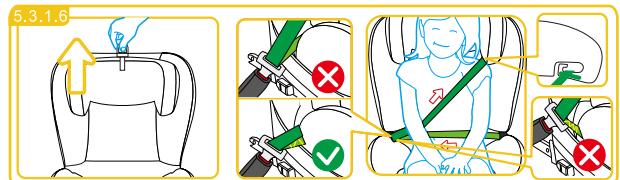

Adjust the height of the headrest to fit your child comfortably. Put the vehicle belt through the belt guide. Place your child into the child seat and let the vehicle belt pass the shoulder and lap belt guide. Fasten the vehicle belt until hear a distinct "click" sound.


INSTALLATION IN THE VEHICLE

5.4 Installation Instruction for Stature 100-150cm, Forward Facing, Vehicle 3-Point-Belt

Put the child seat on the car, refer to 5.4.1.1



5.4.1.2

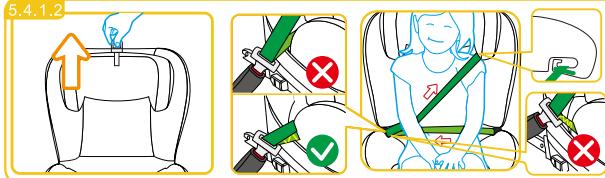

Adjust the height of the headrest to fit your child comfortably. Put the vehicle belt through the belt guide. Place your child into the child seat and let the vehicle belt pass the shoulder and lap belt guide. Fasten the vehicle belt until hear a distinct "click" sound.

CAUTION

Make sure lap strap lap is worn low down, so that the pelvis is firmly engaged. Pull on the strap until it lies flat and is close against your child's body. The straps should be correctly adjusted and ensure they are not twisted.

CAUTION

This child seat should be used in a forward upright position only.

CAUTION

Before every journey, ensure that the rotated seat is fully engaged. Do not drive unless the seat is in the forward or rearward facing position.

CAUTION

The seat can rotate a full 360°without any limitations.

CARE INSTRUCTIONS

6.1 Cleaning

Please be sure to use only original seat covers, as the seat cover is important to the proper functioning of the system. Replacement seat covers are available from your retailer and or at branches.

The baby car seat must not be used without the cover.

- The cover can be removed and washed circularly in a washing at 30°C in the neutral detergent. But please read the washing label on the cover carefully before washing. As the color of the cover may fade if washed above 30°C. Wringing or ironing the cover is forbidden (as the fabric may separate from the padding).
- The plastic part of the seat can be cleaned with soapy water. Do not use the strong detergents (such as solvents).
- The harness belt can be cleaned with soapy water.
- Do not remove the socket of the buckle from the strap.

6.2 Security Checking

Before traveling, ensure you conduct this security check for your child's safety.

1. Ensuring the tightness of the shoulder strap system is appropriate for your child.
2. Verifying that the height of the shoulder straps is correctly adjusted.
3. Regularly inspect the 5-point harness belt for any signs of damage or wear.

If you discover any damage or suspect a malfunction, stop using the baby car seat immediately. Contact your supplier for assistance (refer to the address details on the warranty card). If you have any further questions, don't hesitate to reach out to the supplier.

6.3 Warranty

We provide a 3-year warranty for this child car seat against manufacturing or material defects. The warranty period begins on the date of purchase. To validate the warranty, please keep the invoice and register your product on jovkids.com.

The Warranty Does Not Cover:

- Natural signs of wear and damage resulting from excessive stress.
- Damage resulting from inappropriate or improper use.
- Color fastness may diminish when exposed to UV radiation. However, all fabrics fade when exposed to UV radiation. This is not a material defect but a normal sign of wear that is not covered by the warranty.
- Buckle malfunction is often due to the accumulation of dirt and dust, which may prevent it from working properly. If this occurs, please check if you can clean it yourself without damaging the buckle. If cleaning does not resolve the issue, please contact after sales service.

For warranty claims, please contact your retailer directly. They will provide the necessary advice and support. When processing claims, product-specific depreciation rates will be applied. Please refer to our General Terms and Conditions, which are available from your retailer.