LUMIAS

INSTRUCTION MANUAL

AIR PURIFIER

공기 청정기

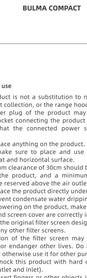

BULMA COMPACT

01 /Precautions

Please read the user manual carefully before use and keep it for future reference.

Warning against danger

1. Please keep the product away from water or other liquids or flammable detergents to avoid electric shock and fire disaster.
2. Do not use water or other liquids or flammable detergents to clean the product to avoid electric shock and fire disaster.
3. Please do not spray any inflammable materials such as pesticides or perfume around the product.
4. Do not use this product with any solid-state speed control device to reduce the risk of fire or electric shock.
5. Please check whether the voltage for the product is consistent with the local power supply voltage before connecting the product to the power supply.
6. If the power cord is damaged, it must be replaced by electricians or specialized professionals to prevent hazards.
7. Please avoid using the product if the power plug, power cord or the product is damaged.
8. Do not block the air inlet and outlet, for example, do not place objects on the air outlet or in front of the air inlet.
9. Do not allow any foreign matters to get inside the product through the air inlet.
10. Do not use replacement parts not recommended by the manufacturer to reduce the risk of fire, electric shock, or personal injury.
11. The product must not be operated by any persons with physical disabilities, mental disorders or without relevant experience and skills (including children), unless they are provided with product use instructions or explanations by safety principals. Do not allow any children to play with the product. Do not allow any children to clean and maintain the product without supervision.

Warning for use

1. This product is not a substitution to normal ventilation, daily dust collection, or the range hood used for cooking.
2. The power plug of the product may be heated if the power socket connecting the product has poor contact. Ensure that the connected power socket is in good contact.
3. Do not place anything on the product.
4. Please make sure to place and use the product on a stable, flat and horizontal surface.
5. A minimum clearance of 30cm should be reserved for the inlet of the product, and a minimum clearance 50cm should be reserved above the air outlet of the product.
6. Do not place the product directly under the air conditioner to prevent condensate water dripping into the product.
7. Before powering on the product, make sure that the filter screen and screen cover are correctly installed.
8. Only use the original filter screen designed by Invitop. Do not use any other screens.
9. Combustion of the filter screen may cause irreversible damage or endanger other lives. Do not burn the filter screen or otherwise use it for other purposes.
10. Do not knock this product with hard objects (especially the air outlet and inlet).
11. Do not insert fingers or other objects into the air inlet or outlet to prevent the product from physical damage or failure.
12. Do not use this product when you use indoor spray type insect repellents or in places full of oil, flammable gas or chemical smoke.
13. Please make sure to unplug the product after use and before cleaning or performing any maintenance.
14. Please disconnect the power supply before moving the product. Do not move the product by pulling or tugging the power cord.
15. *WARNING - This appliance contains a uv emitter. Do not stare at the light source.*

Warning for safety:

1. Please check whether the voltage for the product is consistent with the local power supply voltage before connecting the product to the power supply.
2. If the power cord is damaged, it must be replaced by electricians or specialized professionals to prevent hazards.
3. Please avoid using the product if the power plug, power cord or the product is damaged.
4. Do not block the air inlet and outlet, for example, do not place objects on the air outlet or in front of the air inlet.
5. Do not allow any foreign matters to get inside the product through the air inlet.
6. The product must not be operated by any persons with physical disabilities, mental disorders or without relevant experience and skills (including children), unless they are provided with product use instructions or explanations by safety principals. Do not allow any children to play with the product. Do not allow any children to clean and maintain the product without supervision.

This appliance can be used by children aged from 8 years and above under supervision.
This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction
concerning use of the appliance in a safe way and understand the hazards involved.
The instructions shall include details for cleaning and other user maintenance of the appliance. They shall state that prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.

02/Product overview

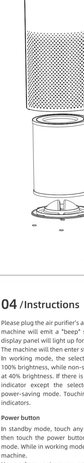

The instructions for UV radiation air-cleaning appliances shall give details concerning:
– the method, frequency of cleaning, and necessary precautions to be taken;
– precautions to be taken when replacing UV-C emitters and starters, if applicable.
The instructions of appliances containing UV-C emitters shall contain the substance of the following:
– This appliance contains a UV-C emitter.
– Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
– Appliances that are obviously damaged must not be operated.
– If the replacement of the UV-C emitter by the user is not allowed, this must be clearly stated.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.
By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

03 /Specification

Model	Bulma Compact
Dimension	197*195*394mm
Weight	2.062kg
Power supply	Input：AC100-240V 50/60Hz Output：DC24V 1.2A
Power	23W
Coverage area	24m²

04 /Instructions

Please plug the air purifier's adapter into the power socket. The machine will emit a "beep" sound, and all indicators on the display panel will light up for about 1 second then turning off. The machine will then enter standby mode.
In working mode, the selected function indicator will be at 100% brightness, while non-selected function indicator will be at 40% brightness. If there is no operation for 10 seconds, all indicator except the selected one will turn off to enter power-saving mode. Touching any button will illuminate all indicators.

Power button

In standby mode, touch any button to activate the machine, then touch the power button can enter the default working mode. while in working mode, touch this button to turn off the machine.
Upon subsequent power-ups, the machine will default to the wind speed it was in before shutdown.

Wind speed button

In working mode, touch this button to switch between different wind speeds in cycle: speed 2/sleep mode/auto mode/speed 1.

Timer button

In working mode, touch this button to switch between timer options in cycle: 2H/4H/8H.

UV/Anion

Touch and hold the timer button for 3 seconds to turn on/off this function. During the flashing period of the icon, touch the button to continuously switch to the corresponding function icon. The icon will flash for 5 seconds. If there is no operation within 5 seconds, the machine will run by selected function. The switching order is: UV - Anion - UV/Anion (turn on both) - Off.

Note: The UV/Anion function supports continuous operation for 2 hours only. It will automatically turn off after 2 hours, and can be re-used 2 hours later.

Turbo mode

Please use this mode to accelerate the purification of indoor air.
Operation is as follows:
For non-Wi-Fi versions, long touch the wind speed button for 3 seconds to turn on the turbo mode. The corresponding icon on display panel will keep lighting on. Long touch the wind speed button for 3 seconds again to turn off this mode, defaulting to operate at the speed 1.
For Wi-Fi versions, after networking, operate on the APP to turn on and off this function. If the turbo mode is turned on in the APP, touch the wind speed button on the body will default to turning off this function and switching to the speed 1 .

Sleep mode

When selected, the PM2.5 indicator will be turned off.

Auto mode

The machine will adjust the fan speed automatically according to PM2.5 concentration which the sensor detected.

PM2.5 indicator

The central light ring on the display panel is the PM2.5 indicator. After the sensor automatically detects the current status for 30 seconds upon startup, it will show the different colors to indicate the air quality:
Red=Poor air quality
Orange=Good air quality
Green=Excellent air quality
For Wi-Fi versions, you can set the brightness of the PM2.5 indicator light in the APP within the range of: 40%-60%-100%-Off.

05 /Wi-Fi operation

1. Use your mobile phone to scan the QR code below to download the "Smart Life" APP.
   You can also search for "smart life" in the APP store or Google Play to install the APP.
2. Open the "Smart Life" app, click "register", use your phone number or email to register the "Smart Life" account, and then log in to the App.

Add device

1. Connect the mobile phone to the home wireless network, and turn on the mobile phone Bluetooth (please select 2.4GHz Wi-Fi network).
2. Open the "Smart Life" APP.
3. Enter the homepage of the "Smart Life" APP. Click "+" to select to add a device, the APP will display manual addition and automatic discovery.
4. Automatic discovery: When the corresponding authority is turned on, the device can be automatically discovered, and the device needs to be in the network configuration state and turned on.
5. Manually add: select the name corresponding to the product, Wi-Fi+Bluetooth mode.

① Bluetooth configuration:

When confirming that the Wi-Fi indicator of the device is flashing quickly, click OK, and then wait for the connection. (Recommended.) When "Successfully add 1 device" appears, it means the connection has been completed and your device will be listed in your APP list.

② Hotspot configuration network:

Click on the Wi-Fi quick connection in the upper right corner to select the hotspot distribution network (compatibility mode).Confirm that the Wi-Fi indicator of the device flashes slowly, click OK, and enter your home Wi-Fi and Wi-Fi password. Next, click to connect to go to the WLAN setting interface of the phone, and then select the Wi-Fi network "SmartLife_XXXX" to connect it.
Your device will be listed in your APP list. Now, you can control your smart device through the mobile APP anytime and anywhere (make sure your mobile phone and smart device are connected to the network, make sure your router name is changed to SmartLife_XXXX).

06 /Filter replacement

When the filter indicator on the display panel is flashing, it means that the filter's lifespan has expired. Please power off the machine, flip it over, and rotate the bottom cover handle in the specified direction to open it. Remove the old filter, pack it properly, unpack the new filter from its PE bag, place it into the machine, and tighten the bottom cover according to the indicated direction.
After placing the machine stably on a flat surface, reconnect the adapter to power on the machine. Long touch the timer button and the wind speed button for 3 seconds to reset the filter timer, and the display panel will return to normal.
If the filter is not at the end of its lifespan but you want to forcibly reset the filter timer, long touch the timer button and the wind speed button within 30 seconds of powering on for 3 seconds to reset the filter timer.
Note: The machine cannot work if the filter is not installed or not installed correctly.

07 /Maintenance

Notes

- Make sure to power off and unplug the air purifier prior to maintenance.
- Do not immerse the air purifier in water or any liquids.
- Do not clean any parts of the air purifier by abrasive, corrosive or flammable detergents (such as bleach or alcohol).
- The filter screen can't be rinsed.
- Do not use a vacuum to clean the filter screen.
- Please clean the dust on the filter regularly. Do not wash or soak the entire filter in water.
- Ensure to turn off the machine and unplug it from the power outlet before replacing the filter.
- Please place the filter under direct sunlight regularly for sterilization.
- Do not apply essential oils, corrosive liquids, or sprays on the air outlet grille or inside the machine.
- Remove the packaging material from the filter before using the new product. Ensure the air purifier is unplugged from the power outlet before removing or installing the filter.

Cleaning

1. Power off the machine and unplug the power adapter;
2. Take out the filter screen, and remove the dust on the outer surface of the filter screen;
3. Clean the air inlet/outlet, and wipe the shell of the air purifier with neutral detergent and soft cotton cloth;
4. After the air purifier is dry, install the filter screen in the air purifier for power-on.

Notes: When wiping the air outlet, water should be prevented from dripping into the machine.

Storage

1. Power off and unplug the machine, and wrap up the power
2. Take out the filter screen, and remove the dust on the outer surface of the filter screen;
3. Clean the air inlet/outlet, and wipe the machine body with neutral detergent and soft cloth;

4. Secure the machine with the dust cover/bag and place it in a well-ventilated place without direct sunlight after the machine body is dry;
5. When the air purifier is left unused for a period of time, it shall be powered on for a few minutes from time to time to ensure good performance.

08/Troubleshooting

Problem	Solutions
Not working	• Confirm the plug is inserted into the power outlet and check if there is a power outage. • Ensure the filter is installed. • Verify if the filter is an original Invitop filter and properly installed.
The air volume becomes smaller	• The primary filter surface may be dirty, causing reduced airflow. • Check if the inlet/outlet is blocked by foreign objects.
Significant noise	• Check if there are foreign objects stuck in the fan blades. • Assess if the machine is tilted. • Inspect if there are any foreign objects in the internal air duct.
Nasty smell	• It is normal that air purifiers may smell plastic the first few times they are used. If the filters are dirty, the air purifiers will also give off nasty smell. Please clean or replace the filter in this case. • If the cooking smell emits from the device,please unplug the power socket and contact with seller or customer service.
The reminder of replacing filter keeps flashing after new filter has been replaced	• The the filter life counter may has not been reset. Press and hold the timer button + wind speed button for about 3 seconds to clear the data; restart the timer, and turn off the filter replacement reminder. The filter element light will return to normal display status. • Verify if the filter is an original filter.

Note: If the above issues cannot be resolved and repair is needed, please contact the store or customer service. Do not attempt to disassemble or repair the machine yourself.